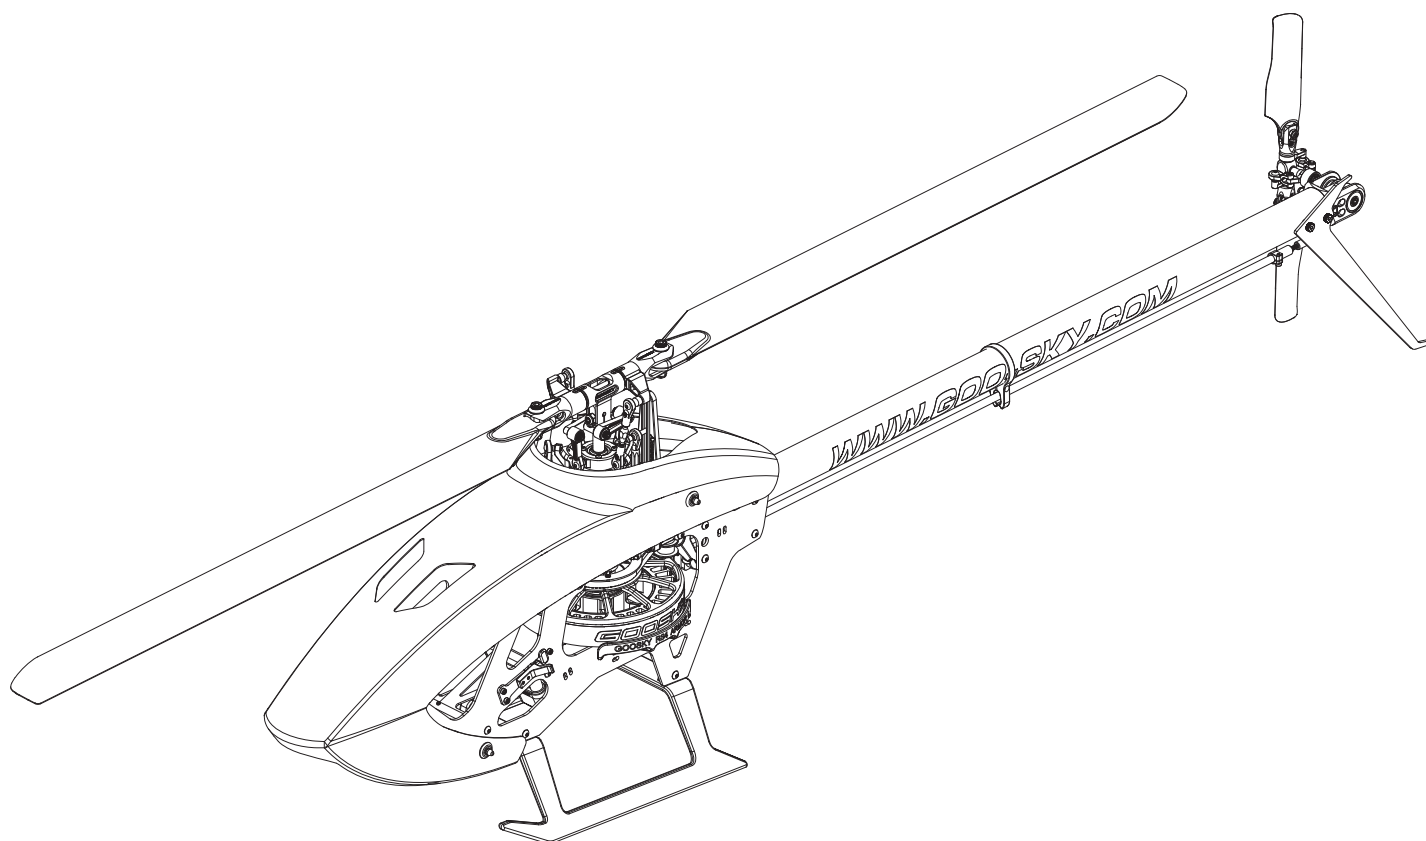


RS4 VENOM

INSTRUCTION MANUAL

使用说明书



GOOSKY

#2 BY DESIGN

© 2023

Thank you for buying GOOSKY products. The RS4 is the latest technology in radio control helicopters. Please read this manual carefully before assembling and flying the New RS4 helicopter. We recommend that you keep this manual for future reference and to assist with maintenance.

感谢您选用谷天科技系列产品。

进入遥控世界前必须告诉您许多相关的知识与注意事项，以确保您能够在学习的过程中较得心应手。在开始操作之前，请务必详细阅读本说明书，相信一定能够给您带来相当大的帮助，也请您妥善保管这本说明书，以作为日后参考。

Thank you for buying GOOSKY products.The RS4 Helicopter is designed as an easy to use,full featured radio control helicopter capable of all forms of rotary flight.Please read the manual carefully before assembling the model,and follow all precautions and recommendations located within the manual.Be sure to retain the manal for future reference,routine maintenance, and tuning.

The RS4 is a new product developed by GOOSKY.It features the best design available on the Micro-Heli market to date,providing flying stability for beginners,full aerobatic capbility for advanced fliers,and unsurpassed reliability and customer support.

感谢您选购谷天科技公司产品，为了你容易方便使用RS4直升机，请您详细的阅读完这本说明书之后再行组装以及操作这台直升机，同时请您妥善保存这本说明书，作为日后进行调整以及维修的参考。

RS4是由谷天科技有限公司自行研发的新产品，不论您是需求飞行稳定的初学者还是追求性能卓越的飞行爱好者。RS4将是您最佳的选择。

WARNING LABEL LEGEND 标志代表含义

 WARNING 警告	Mishandling due to failure to follow these instructions may result in damage or injury. 因为疏忽这些操作说明，而使用错误可能造成财产损失或严重伤害。
 CAUTION 注意	Mishandling due to failure to follow these instructions may result in danger. 因为疏忽这些操作说明，而使用错误可能造成危险。
 FORBIDDEN 禁止	Do not attempt under any circumstances 在任何禁止的环境下，请勿尝试操作。

IMPORTANT NOTES 重要声明

R/C helicopters,including The RS4 are not toys.R/C helicopters utilize various high-tech products and technologies to provide superior performance.Improper use of this product can result in serious injury or even death.Please read this manual carefully before using and make sure to be conscious of your own personal safety,the safety of others,and your environment when operating all GOOSKY products.

Manufacturer and seller assume no liability for the operation or the use of this product . Intended for use only by adults with experience flying remote control helicopters at a legal flying field. After the sale of this product we cannot maintain any control over its operation or usage.

RS4遥控直升机并非玩具，它是结合了许多高科技产品所设计出来的休闲用品，所以商品的使用不当或者不熟悉都可能会造成严重伤害甚至死亡，使用之前请务必详细阅读本说明书，勿轻忽并注意自身安全。

注意！任何遥控直升机的使用，制造商和经销商是无法对使用者于零件使用的损耗异常或组装不当所发生之意外负任何责任，本产品是提供给有操作过模型直升机经验的成人或者有相当技术的人员在旁指导于当地合法遥控飞行场飞行，以确保安全无误下操作使用，产品售出后该公司将不负任何责任和使用控制上的任何性能与安全责任。

We recommend that you obtain the assistance of an experienced pilot before attempting to fly our products for the first time. A local expert is the best way to properly assemble,setup,and fly your model for the first time.RS4 Helicopter requires a certain degree of skill to operate,and is a consumer item. Any damage or dissatisfaction as a result or accidents or modifications are not covered by any warrantee and cannot be returned for repair or replacement.Please contact our distributors for free technical consultation and parts at discounted rates when you experience problems during operation.

模型商品属于需高操作技术且为消耗性之商品，如经拆装使用后，会造成不等情况零件损耗，任何使用情况所造成的商品不良或不满意，将无发于保固条件内更换新品或者退货，如遇有使用操作维修问题，本公司全球分公司或者代理商将提供技术指导，特价零件供应服务。

SAFETY NOTES 安全注意事项



Fly only in safe areas,away from other people.Do not operate R/C aircraft within the vicinity of homes or crowds of people.R/C aircraft are prone to accidents,failures,and crashes due to a variety of reasons including,lack of maintenance,pilot error,and radio interference.Pilots are responsible for their actions and damage or injury occurring during the operation,or as of a result of R/C aircraft.

遥控模型飞机、直升机属于高危险性商品，飞行时务必远离人群，人为组装不当或机件损坏，电子控制设备不良，以及操控上的不熟悉、都有可能导致飞行失控损伤等不可预期的意外，请飞行者务必注意飞行安全，并需了解自负疏忽所造成的任何意外之责任。



LOCATE AN APPROPRIATE LOCATION 远离障碍物及人群

R/C helicopters fly at high speed, thus posing a certain degree of potential danger. Choose a legal flying field consisting of flat, smooth ground without obstacles.

Do not fly near buildings, high voltage cables, or trees to ensure the safety of yourself, others and your model.

For the first practice, please choose a legal flying field and use training skids to fly to reduce the damage. Do not fly your model in inclement weather, such as rain, snow or darkness.

直升机飞行时具有一定的速度, 相对的也潜在着危险性, 场地的选择也相对的重要, 请遵守当地的法律法规到合法的遥控飞行场地去飞行。

必须注意周边有没有人、高楼、建筑物、高压电线、树木等等, 避免操控的不当造成自己或他人的财产损失。

初次练习时, 务必选择在空旷合法专属飞行场地并适当搭配练习架飞行, 这对于飞行失误所造成的损伤将会大幅的降低。请勿在下雨天、打雷等恶劣天气下操作, 以确保本身及机体的安全。

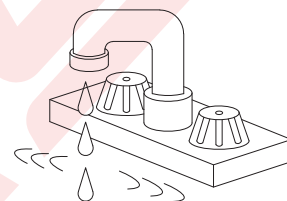


PREVENT MOISTURE 远离潮湿环境

R/C models are composed of many precision electrical components.

It is critical to keep the model and associated equipment away from moisture and other contaminants. The introduction or exposure to water or moisture in any form can cause the model to malfunction resulting in loss of use, or a crash. Do not operate or expose to rain or moisture.

直升机内部也是由精密的电子零件组成, 所以必须绝对的防止潮湿或水气, 避免在浴室或雨天时使用, 防止水气进入机身内部而导致机件及电子零件故障而引发不可预期的意外!




PREVENT OPERATION 勿不当使用本产品

Please use only Goosky parts to ensure the safe operation of your helicopter.

请勿自行改造加工, 任何的升级改造或维修, 请使用三源电子科技产品目录中的零件, 以确保结构的安全。

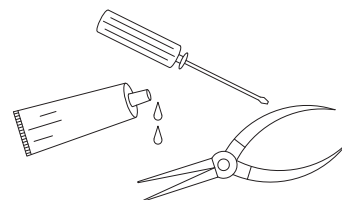请确认于产品限界内操作, 请勿过载使用, 并勿用于安全、法令外其他非法用途。




OBTAIN THE ASSISTANCE OF AN EXPERIENCED PILOT 避免独自操控

Before turning on your model and transmitter, check to make sure no one else is operating on the same frequency. Frequency interference can cause your model, or other models to crash.

The guidance provided by an experienced pilot will be invaluable for the assembly, tuning, trimming, and actual first flight. (We recommend you practice with a computer-based flight simulator.)

至飞行场地前, 需确认是否有相同频率的同好正在飞行, 因为开启相同的频率的发射机将导致自己与他人立即干扰等意外危险。

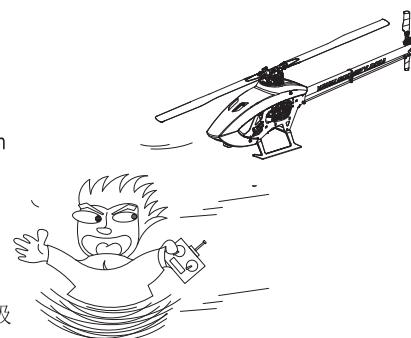遥控飞机操控技巧在学习初期有着一定的难度, 要尽量避免独自操作飞行, 需有经验的人士在旁指导, 才可以操控飞行。(勤练电脑模拟器及老手指导是入门必要的选择)



SAFE OPERATION 安全操作

Operate this unit within your ability. Do not fly under impaired conditions and improper operation may cause danger to yourself and others.

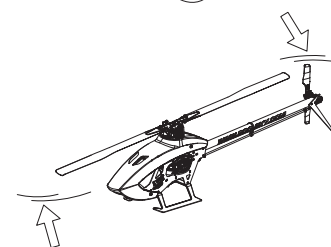
请于自己能力内及需要一定技术范围内操作这台直升机, 过于疲劳, 精神不佳或不当操作, 意外发生风险将可能会提高。



ALWAYS BE AWARE OF THE ROTATING BLADES 远离运转中的零件

During the operation of the helicopter, the main rotor and tail rotor will be spinning at a high rate of speed. The blades are capable of inflicting serious bodily injury and damage to the environment. Be conscious of your actions, and careful to keep your face, eyes, hands, and loose clothing away from the blades. Always fly the model a safe distance from yourself and others, as well as surrounding objects. Never take your eyes off the model or leave it unattended while it is turned on. Immediately turn off the model and transmitter when you have landed model.

当直升机主旋翼与尾旋翼运转时, 切勿触摸并远离任何物件, 以避免造成危险及损坏。








KEEP AWAY FROM HEAT 远离热源

R/C models are made of various forms of plastic, which is very susceptible to damage or deformation due to extreme heat and cold climate.

Make sure not to store the model near any source of heat such as an oven, or heater. It is best to store the model indoors in a climate-controlled room.

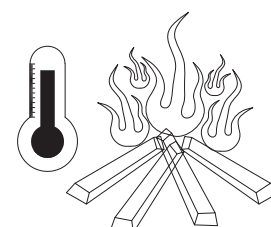    遥控飞机多半是以PA纤维或聚乙烯、电子商品为主要材质, 因此要尽量远离热源、日照, 以避免因高温而变形甚至熔毁损坏的可能。



			
Knife 刀子	Scissors 剪刀	Needle Nose Pliers 尖嘴钳	Diagonal Cutting Pliers 斜口钳
			
Philips Screw Driver 十字螺丝起子	Hex Driver 六角螺丝起子	Oil 润滑油	CA 瞬间胶

胶水使用方法

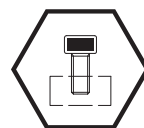
When you see the marks as below, please use glue or grease to ensure flying safety.
标有以下符号之组装步骤，请配合上胶或上油，以确保使用之可靠度。



Apply BLUE Threadlocker
使用中强度螺丝胶



Apply Petroleum-Based,
Light Viscosity Lube
添加润滑油



Loosely Tighten
普通拧紧



Apply NO Threadlock
无需使用螺丝胶



Apply Synthetic
Grease
添加润滑油脂



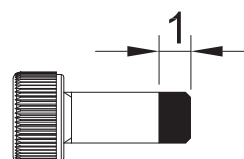
Fully Tighten
完全拧紧




Apply MEDIUM CA
使用瞬间胶固定



Repeat Multiple Times
重复多次



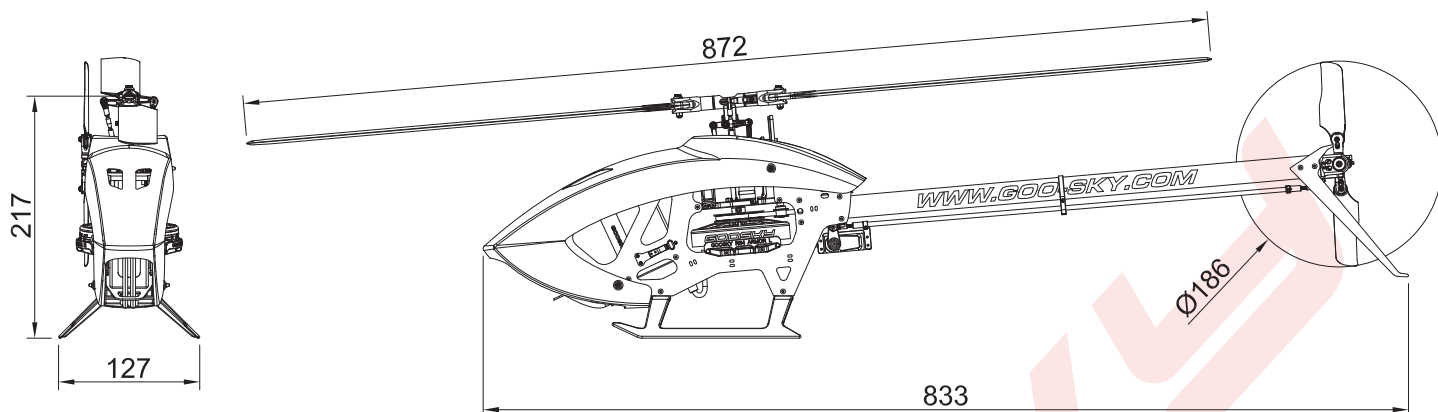BLUE threadlocker width: approx 1mm
蓝色螺丝胶上胶宽度约1.0mm




Specifications 参数配备

- Length: 833mm
- Height: 217mm
- Main Blade: 390mm
- Main Rotor Diameter: 872mm
- Tail Rotor Diameter: 186mm
- Flying Weight: About 1300g
- 机身长: 833mm
- 机身高: 217mm
- 主旋翼长度: 390mm
- 主旋翼直径: 872mm
- 尾旋翼直径: 186mm
- 起飞重量约: 1300g


Features 设计特点

- Brushless direct drive main rotor, and variable pitch tail.
- FBL flybarless rotor head design
- Lightweight design with carbon fiber fuselage and aviation grade aluminum alloy material
- Streamlined low wind resistance hood design
- Canopy disassembling-free battery quick release design
- High impact nylon plastic landing skid design
- Special Tail pushrod design
- Innovative servo layout design.
- Surrounding servo layout design
- Various colors are available

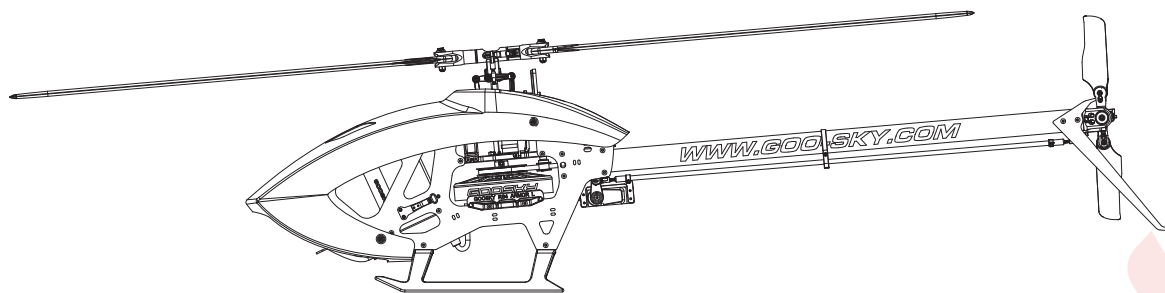
- 采用无刷直驱主旋翼+尾变距设计
- FBL无副翼旋翼头设计
- 机身全碳纤维+航空铝合金材质轻量化设计
- 流线型低风阻机头罩设计
- 免拆头罩电池快拆设计
- 高抗冲击尼龙塑胶脚架设计
- 特殊尾推设计
- 一体式尾牙箱设计
- 环抱式舵机布局设计
- 多种颜色可选




Part #:HS01

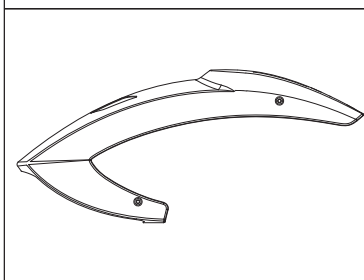


Part #:HS02

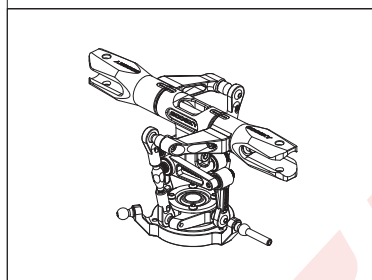


Part #:HS03

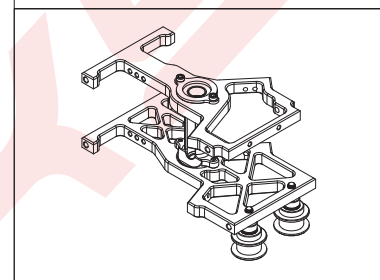


Part #:HS04

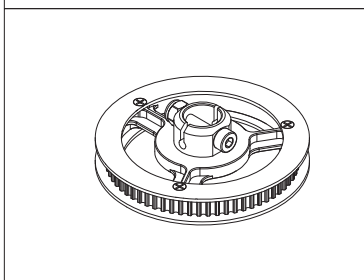


Part #:HS05

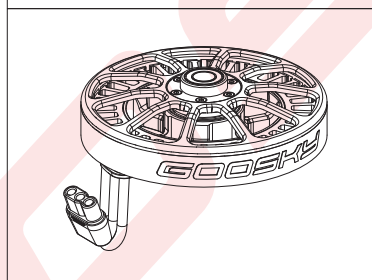


Part #:HS06

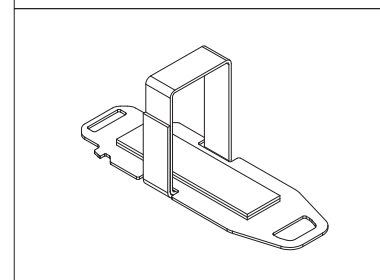


Part #:HS07

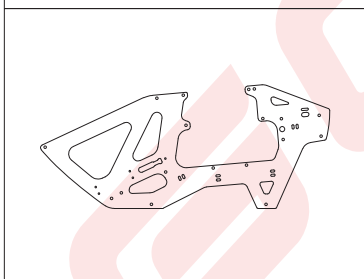


Part #:HS08

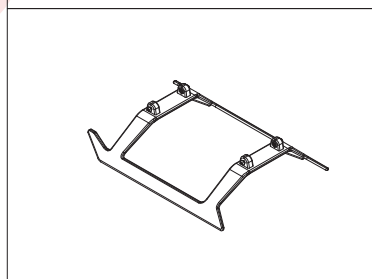


Part #:HS09

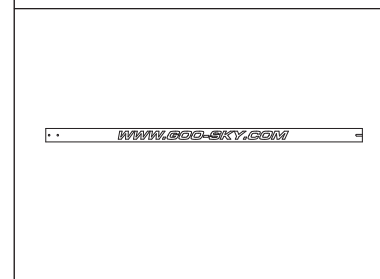


Part #:HS10

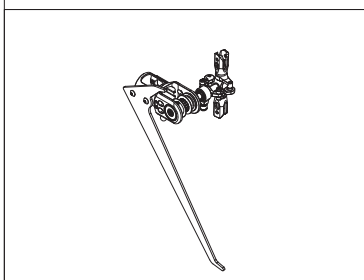


Part #:HS11

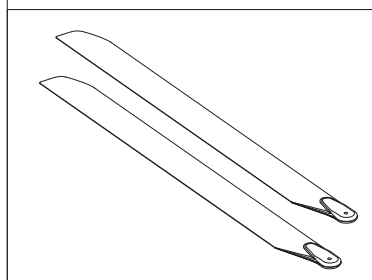

Part #:HS12

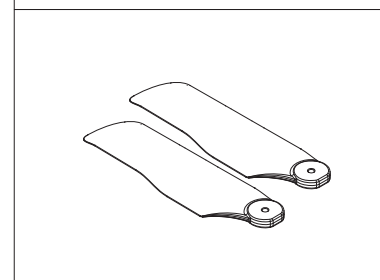

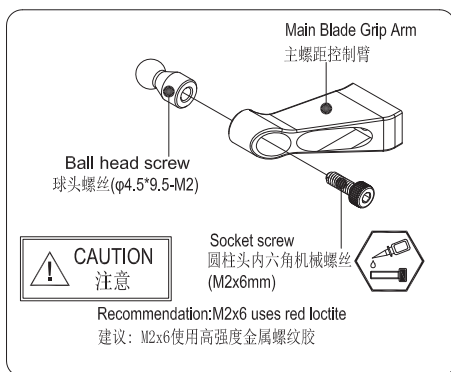


Thrust bearing and washer for radial bearing are wear items, and thus should be inspected for replacement after every 20 flights..

For flights with high headspeed, the inspection interval should be reduced to ensure flight safety.

止推轴承及横轴垫圈属于飞行消耗品, 建议每20躺定期检查及更换, 高主旋翼转速飞行时, 请缩短定期检查之趟数, 以确保飞行安全。


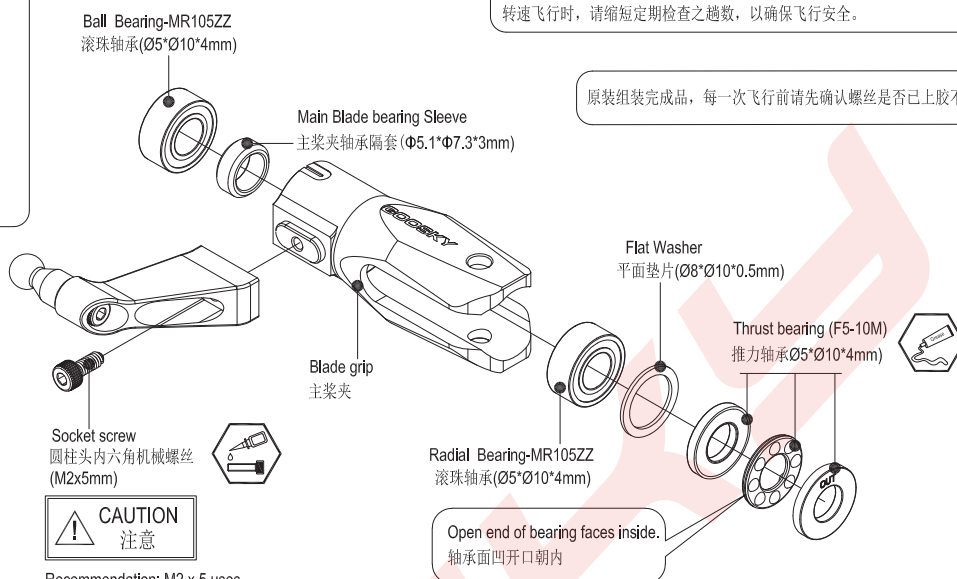
原装组装完成品, 每一次飞行前请先确认螺丝是否已上胶不会松动。





HS02001



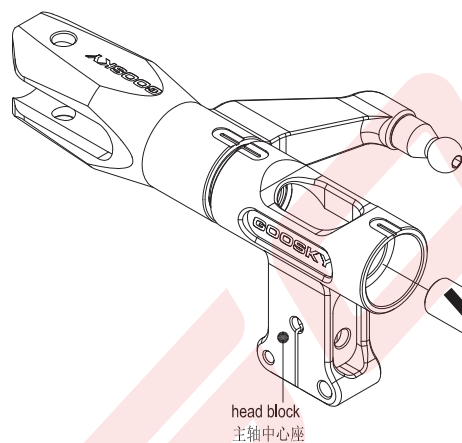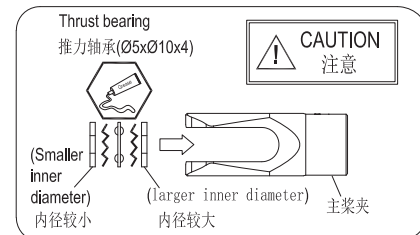HS02002





HS02003


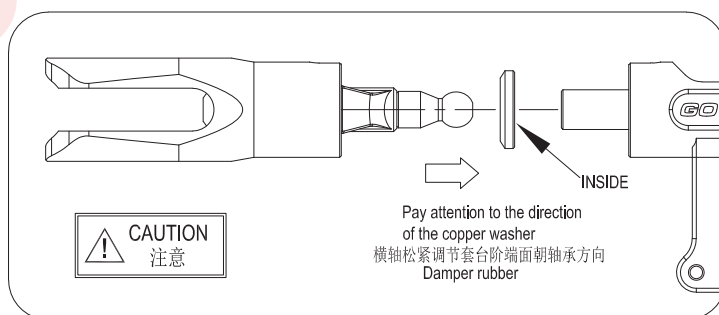
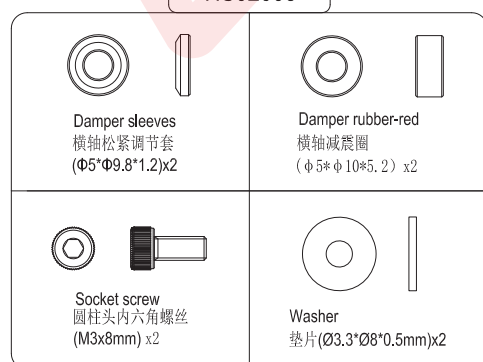
Feathering shaft
横轴 Ø5x60mmDamper rubber-red
横轴减震圈
(Ø5*Ø10*5.2)Washer
横轴松紧调节套(Ø5*Ø9.8*1.2)Washer
垫片 Ø3.3*Ø8*0.5mm

Recommendation: M3x8 uses red loctite.
建议: M3x8使用高强度金属螺纹胶

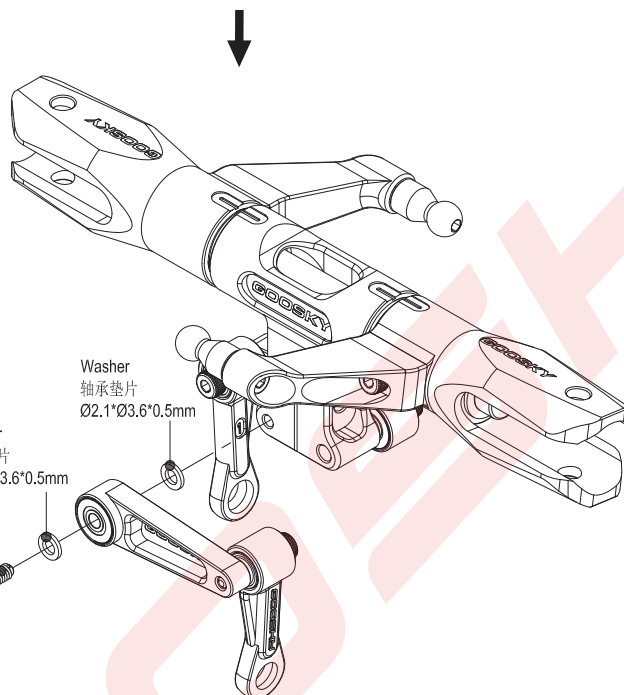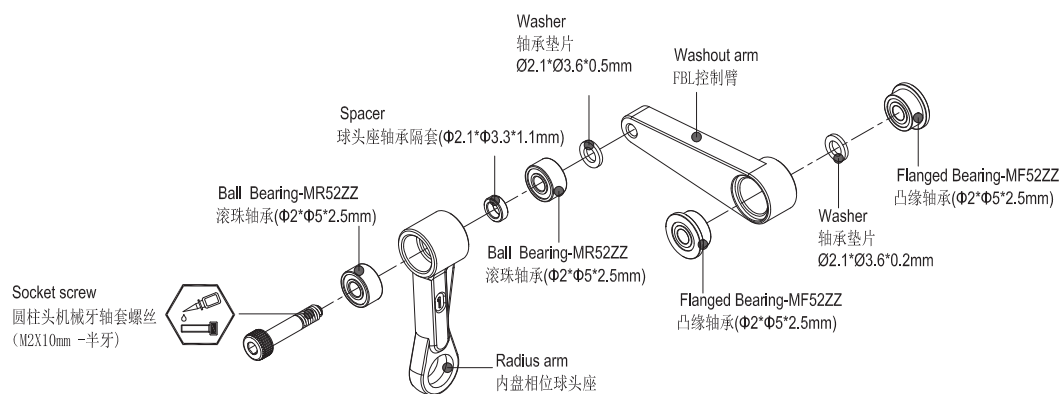Socket screw
圆柱头内六角螺丝
M3x8mm



HS02004

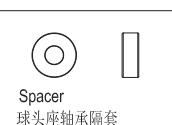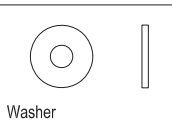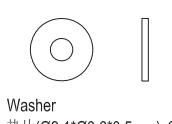

Socket screw
圆柱头机械牙轴套螺丝
(M2X10mm -半牙)

Washer
轴承垫片
Ø2.1*Ø3.6*0.5mm

Washer
轴承垫片
Ø2.1*Ø3.6*0.5mm



Radius arm
内盘相位球头座

Ball Bearing-MR52ZZ
滚珠轴承(Ø2*Ø5*2.5mm)

Spacer
球头座轴承隔套(Ø2.1*Ø3.3*1.1mm)

Washer
轴承垫片
Ø2.1*Ø3.6*0.5mm

Washout arm
FBL控制臂

Flanged Bearing-MF52ZZ
凸缘轴承(Ø2*Ø5*2.5mm)

Flanged Bearing-MF52ZZ
凸缘轴承(Ø2*Ø5*2.5mm)

CAUTION
注意

Suggestion: use low strength thread locker
for M1.4 x 3 screws
建议: M1.4x3 螺丝使用低强度金属螺纹胶

Socket screw
圆头内六角螺丝
(M1.4x3mm)

Washer
垫片
Ø1.4*Ø4*0.3mm

Socket screw
圆头内六角螺丝
(M1.4x3mm)

Ball head screw
球头螺丝(Ø4.5*9mm-M2)

Ball head screw
球头螺丝(Ø4.5*9mm-M2)

Ball head screw
球头螺丝(Ø4.5*9mm-M2)

Ball head screw
球头螺丝(Ø4.5*9mm-M2)



Ball head screw
球头螺丝(Ø4.5*9mm-M2)



Anti-rotation bracket
ball head screw
相位球头螺丝
(Ø4.5*17.3mm-M2)

Ball head screw
球头螺丝(Ø4.5*9mm-M2)

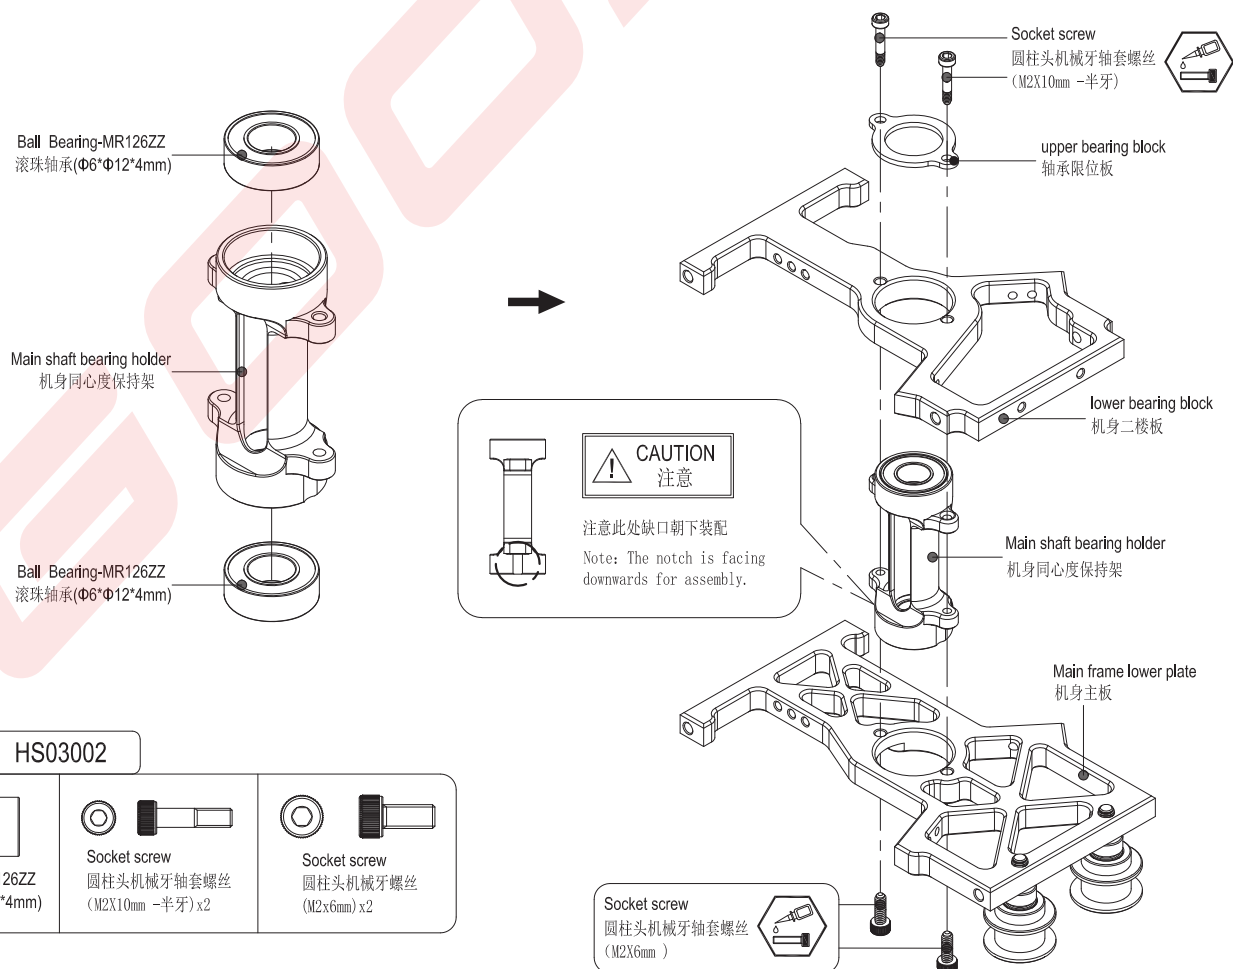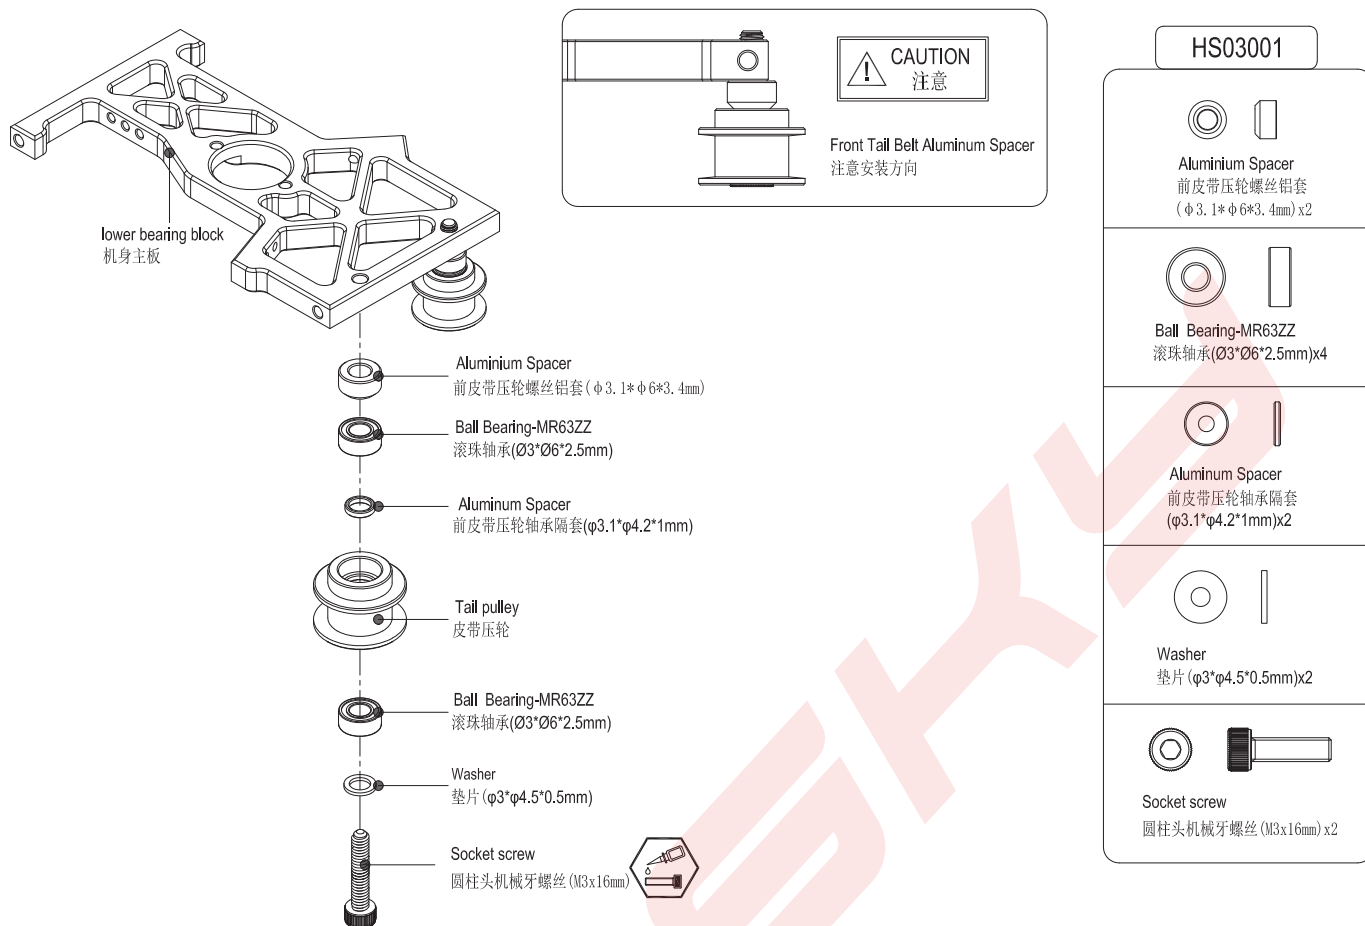 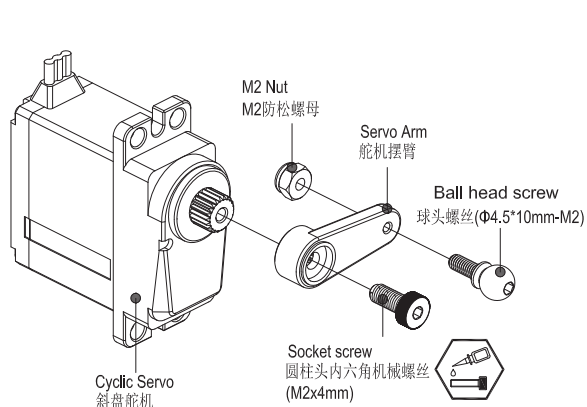HS02005







1: Suggestion: use low strength metal thread sealant for M2x4 screws.
建议: M2x4螺丝使用低强度金属螺纹胶。
2: The links ball must be positioned 12.5mm out on the servo arm.
球头安装位置距离 摆臂旋转中心 12.5mm。

HS03003



M2 Nut
M2防松螺母 x3



Ball head screw
球头螺丝(Φ4.5*10mm-M2)x3

Socket screw
圆柱头内六角机械螺丝
(M2x5mm)


Socket screw
圆柱头内六角机械螺丝
(M2x5mm)

Socket screw
圆柱头内六角机械螺丝
(M2x5mm)

HS03004



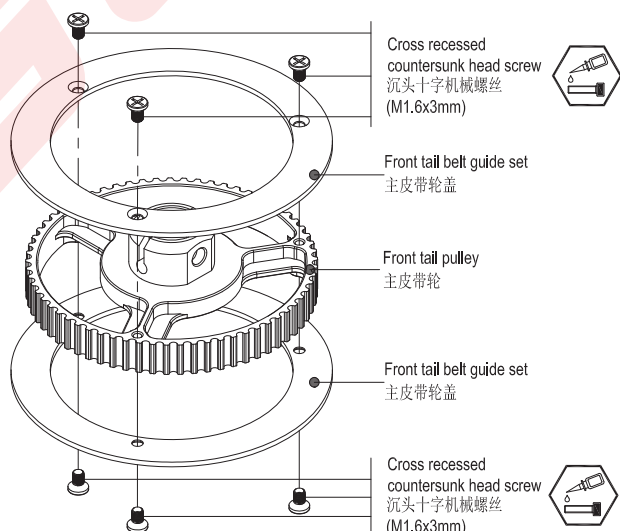Socket screw
圆柱头内六角螺丝
(M2x5mm)x12








Suggestion: use low strength thread locker for M1.6x3 screws.
建议: M1.6x3螺丝使用低强度金属螺纹胶。

HS04001




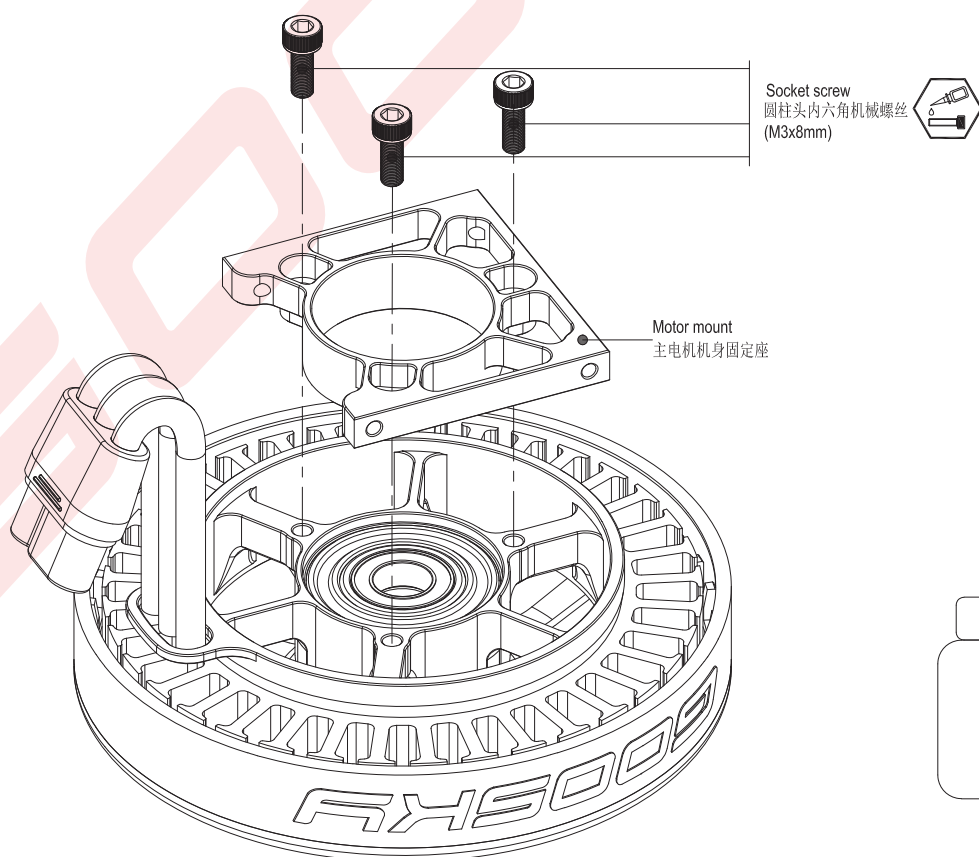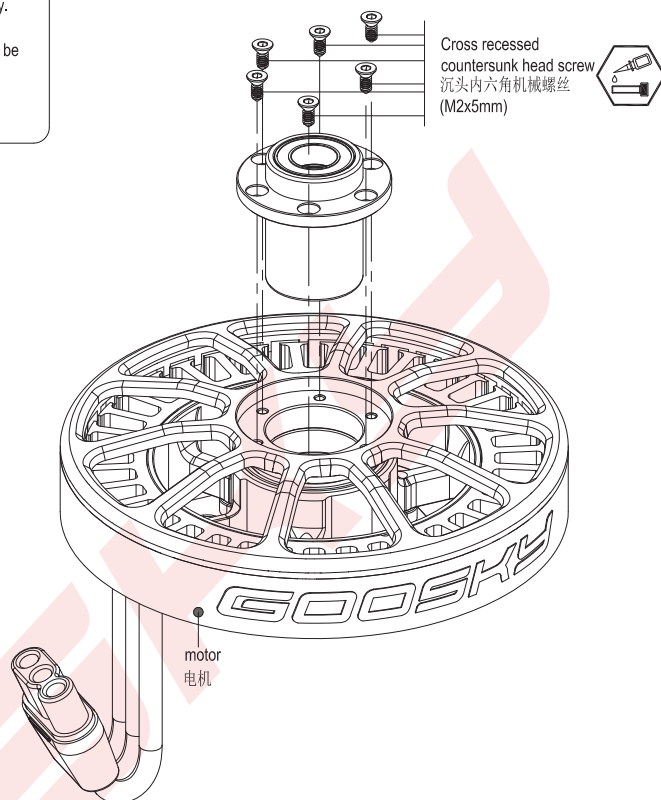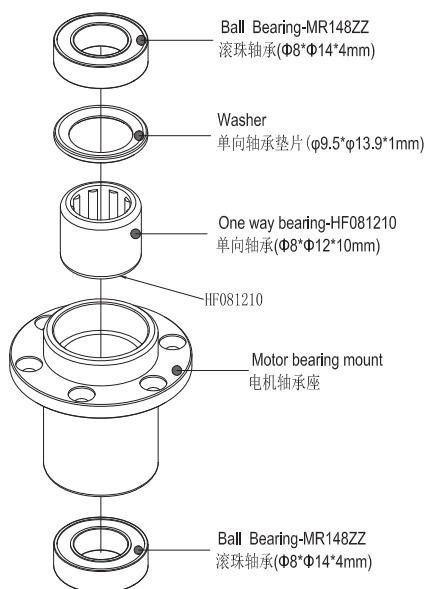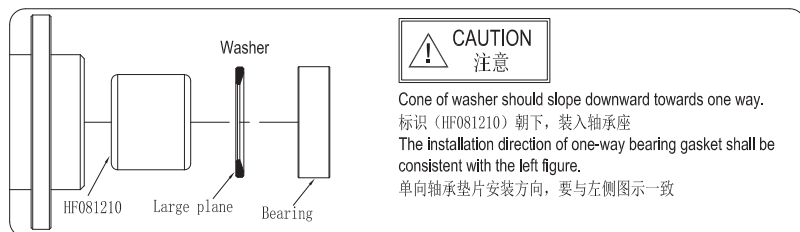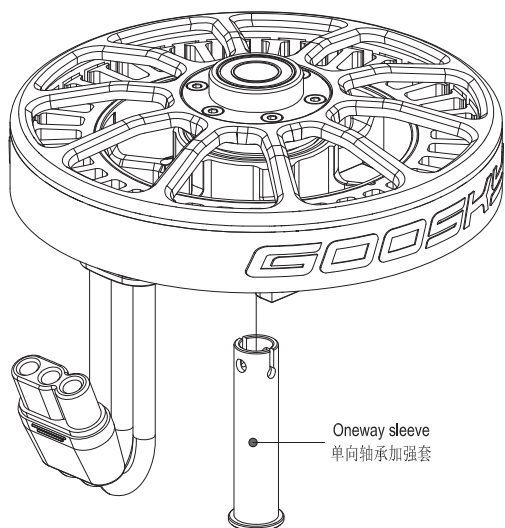Cross recessed countersunk head screw
沉头十字机械螺丝
(M1.6x3mm)x6






Oneway sleeve
单向轴承加强套

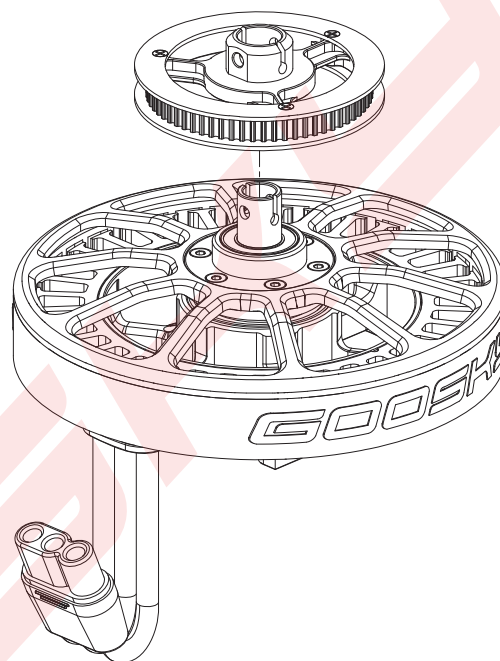

CAUTION
注意


1: No loctite
1: 防松螺母的位置不能涂抹金属螺纹锁固胶水;

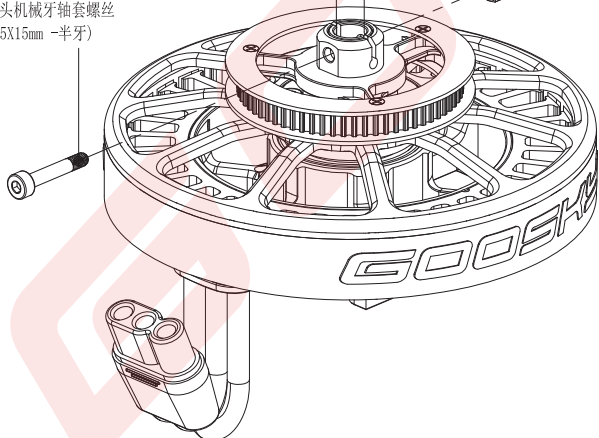Socket screw
圆柱头机械牙轴套螺丝
(M2.5X15mm ~半牙)



Main Shaft
主轴

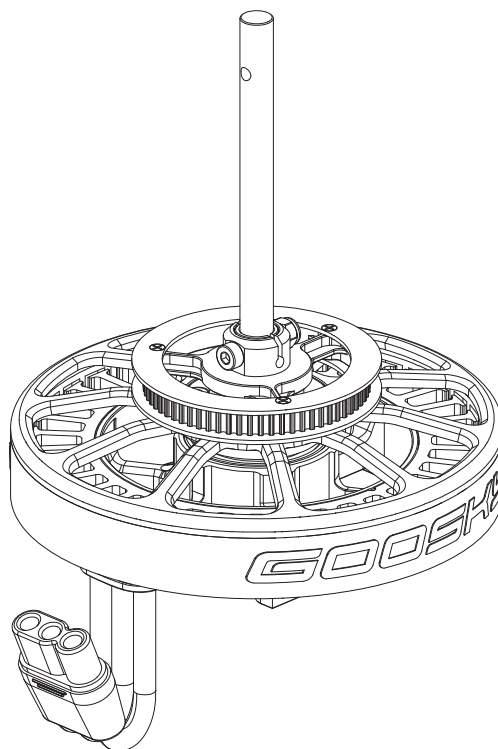M2.5 Nut
M2.5防松螺母





HS05001



M2.5 Nut
M2.5防松螺母 x1




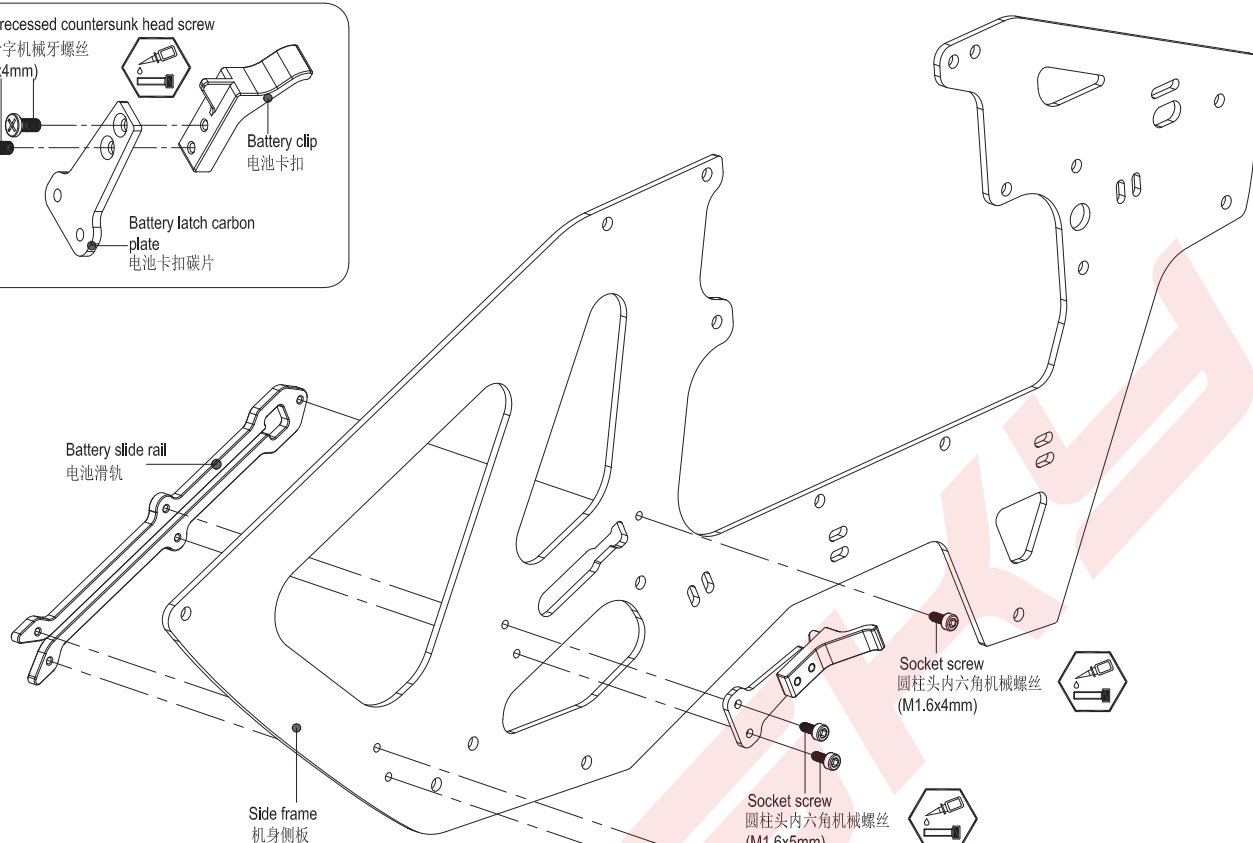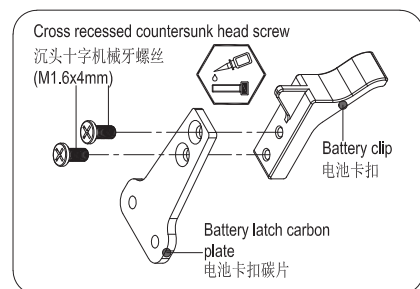
Socket screw
圆柱头机械牙轴套螺丝
(M2.5X15mm ~半牙) x1




HS07001

 Socket screw 圆柱头机械牙螺丝 (M1.6x4mm) x3	 Cross recessed countersunk head screw 沉头十字机械牙螺丝 (M1.6x4mm) x2
 Socket screw 圆柱头机械牙螺丝 (M1.6x5mm) x2	 Socket screw 圆头内六角螺丝 (M2.5x5mm) x2

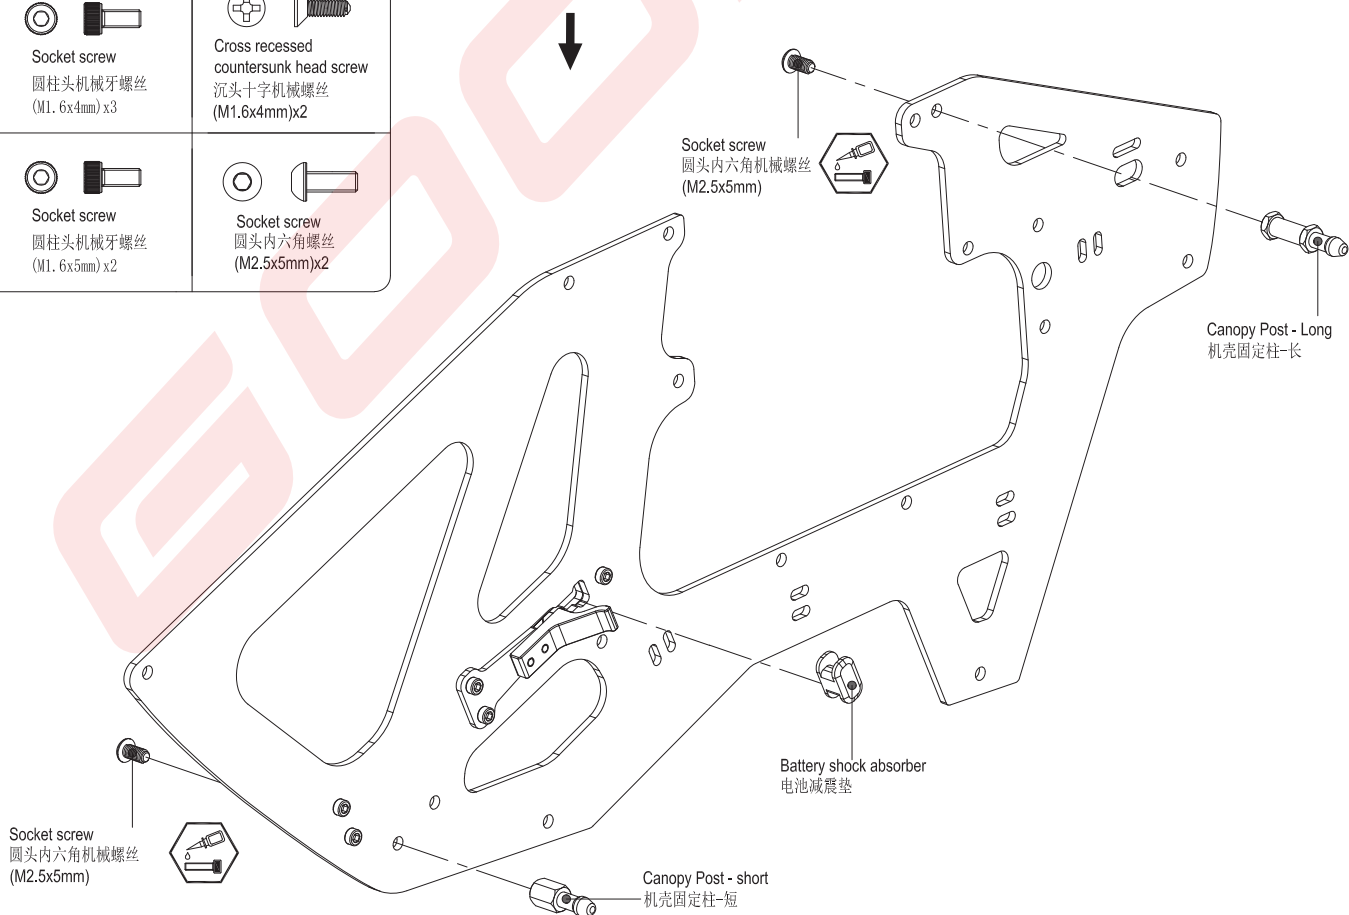

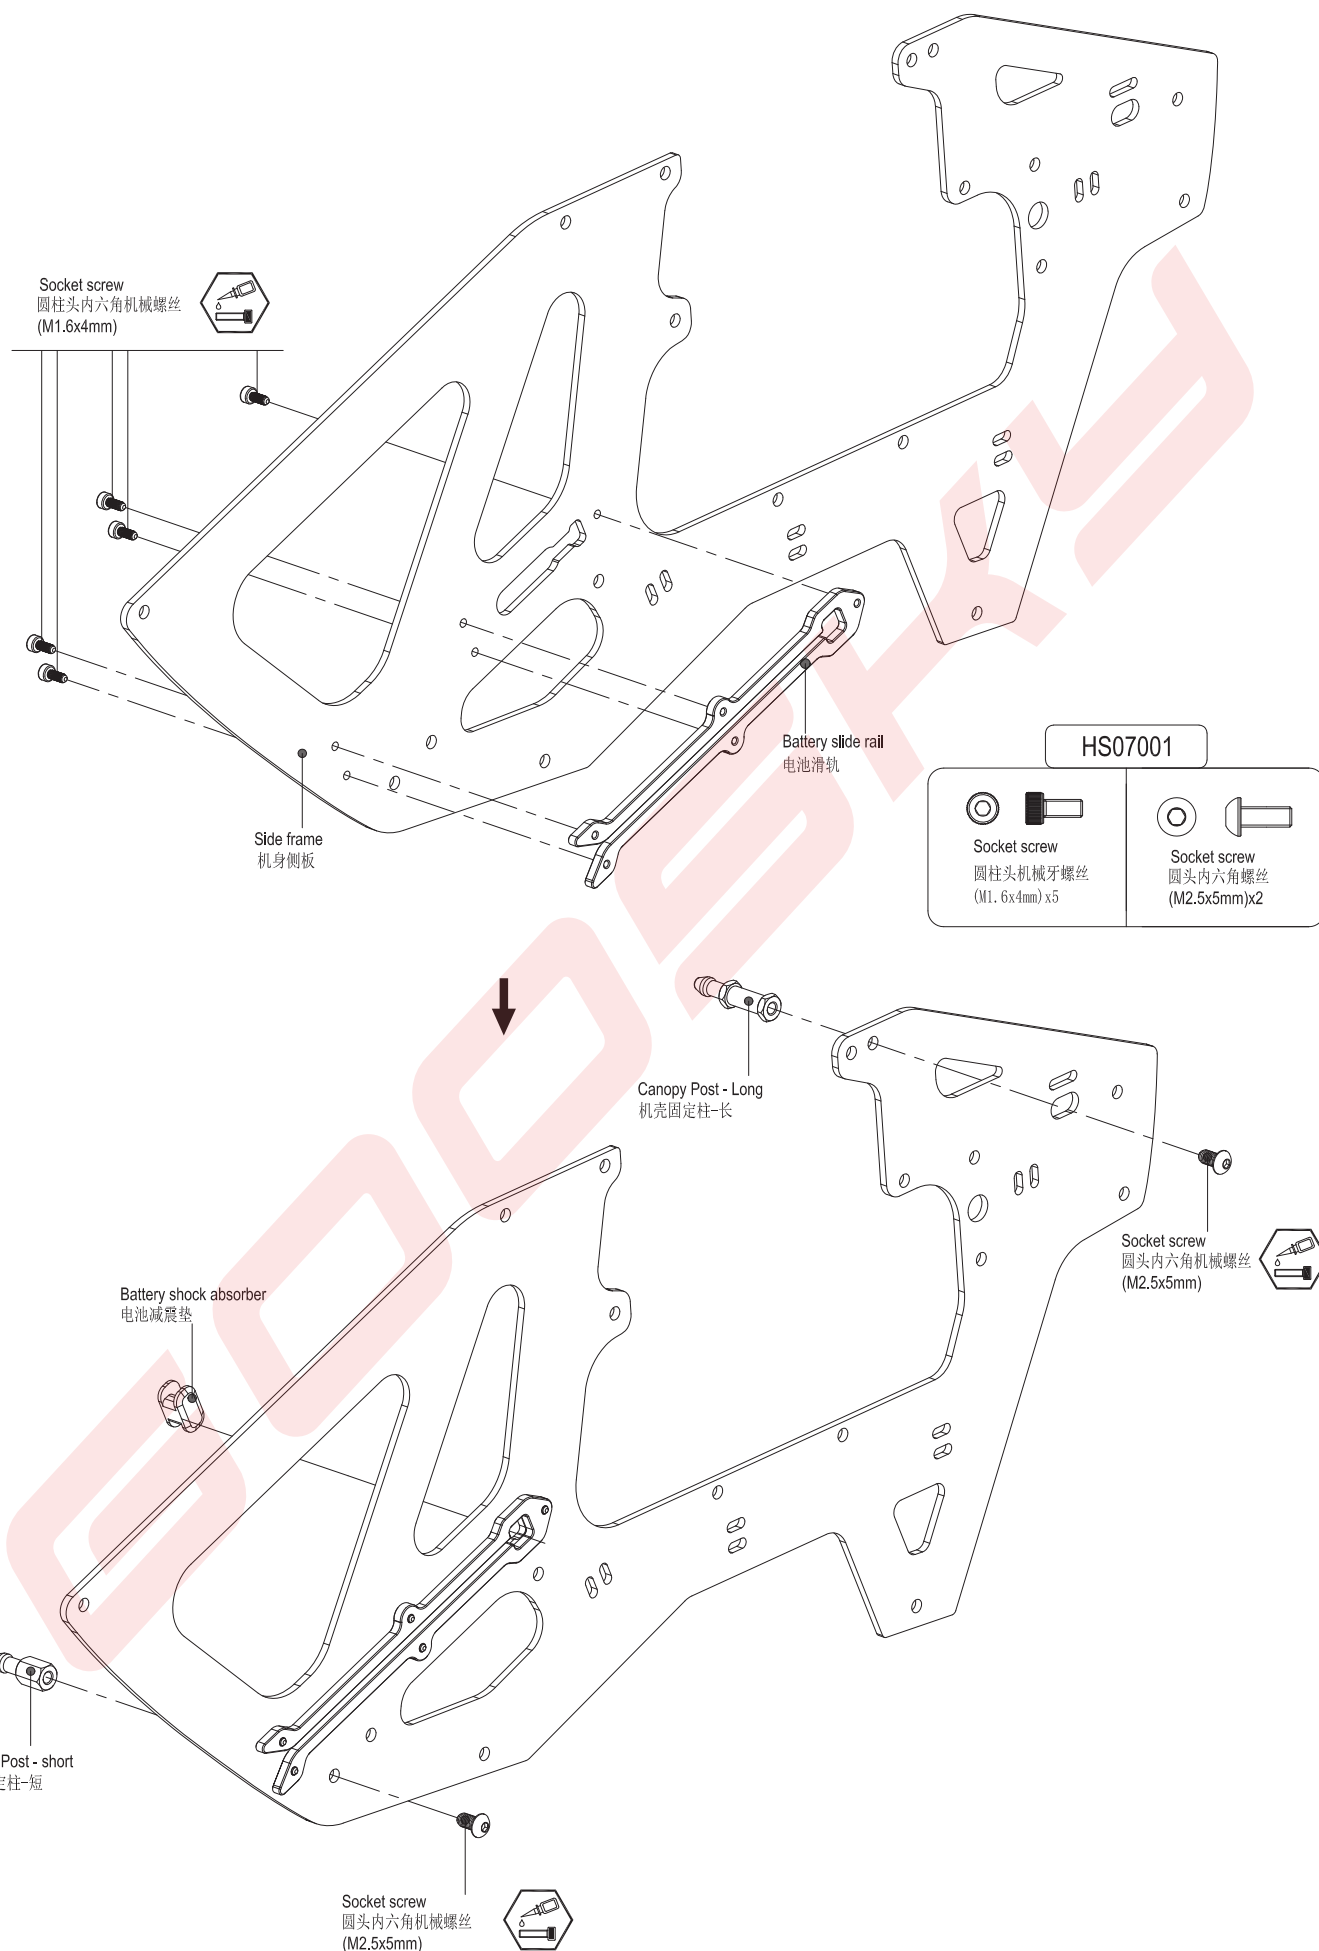

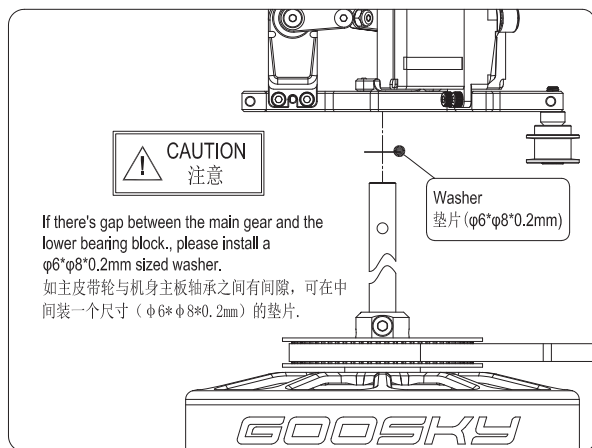


HS07001

Socket screw
圆头内六角螺丝
(M2.5x5mm)x8

Socket screw
圆头内六角螺丝
(M2.5x8mm)x4

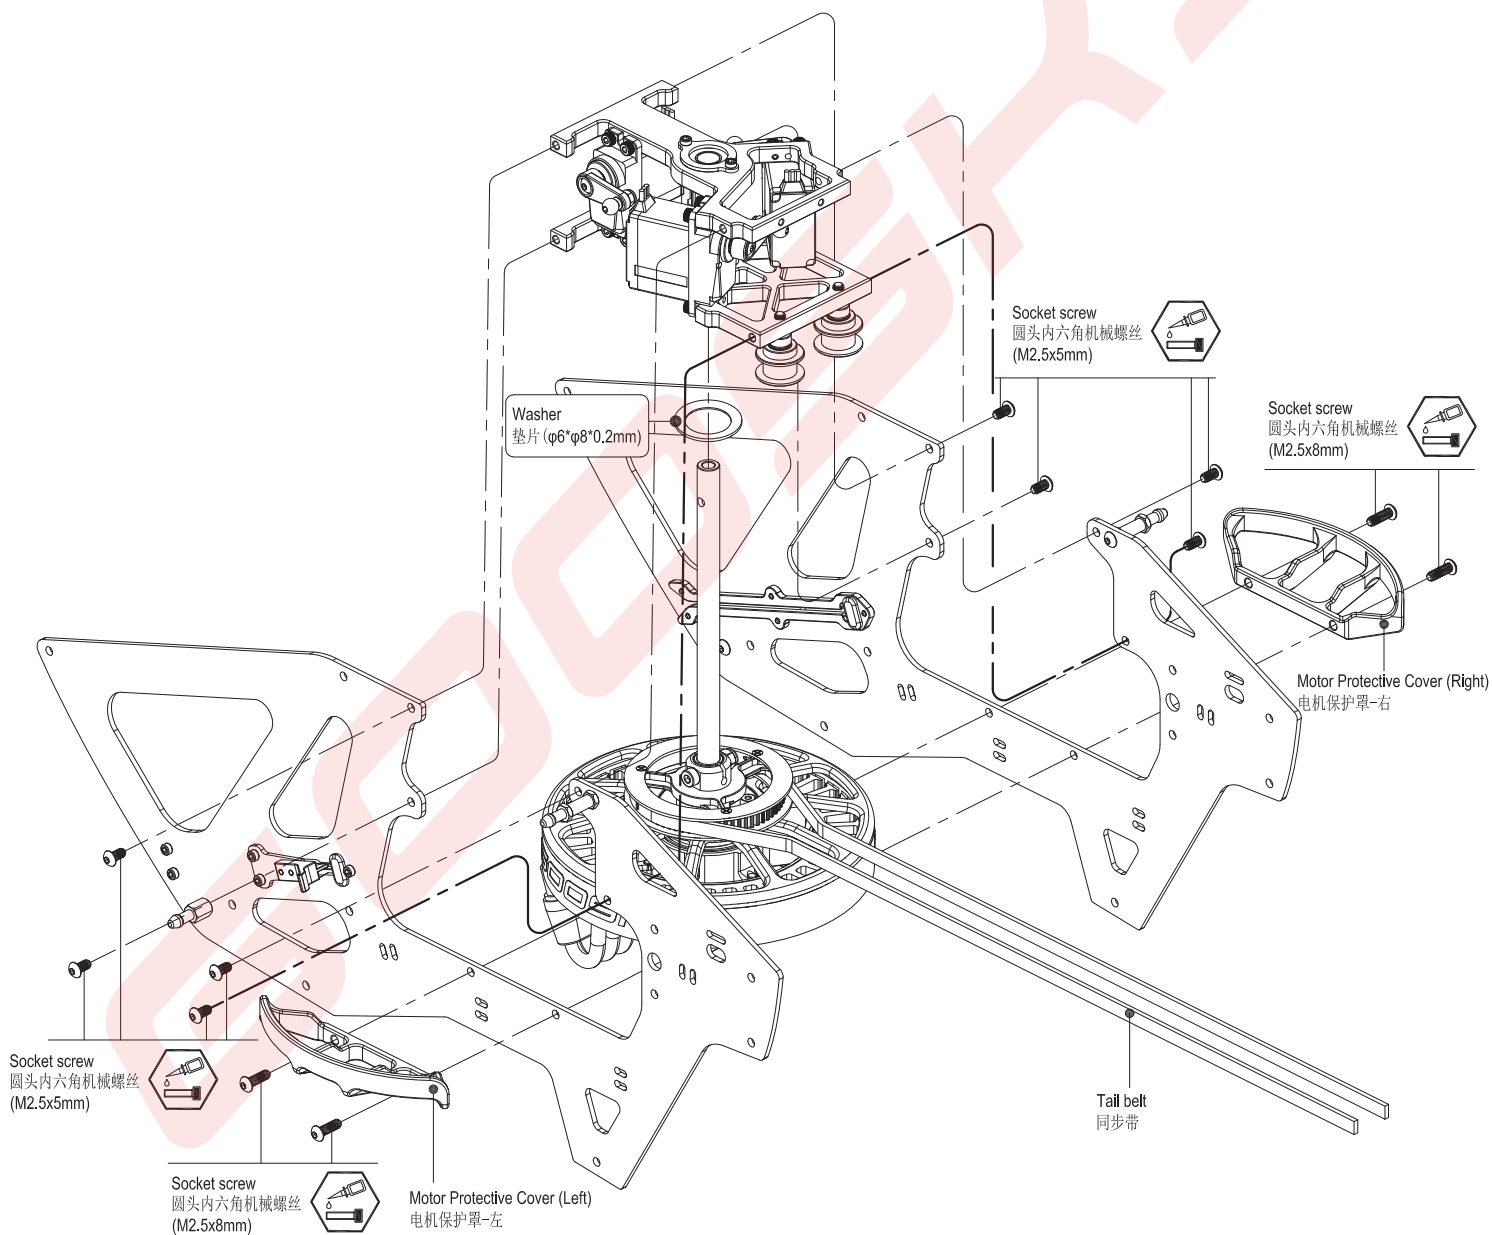
Washer
垫片 ($\phi 6 \times \phi 8 \times 0.2\text{mm}$)x1



step 10 步骤十




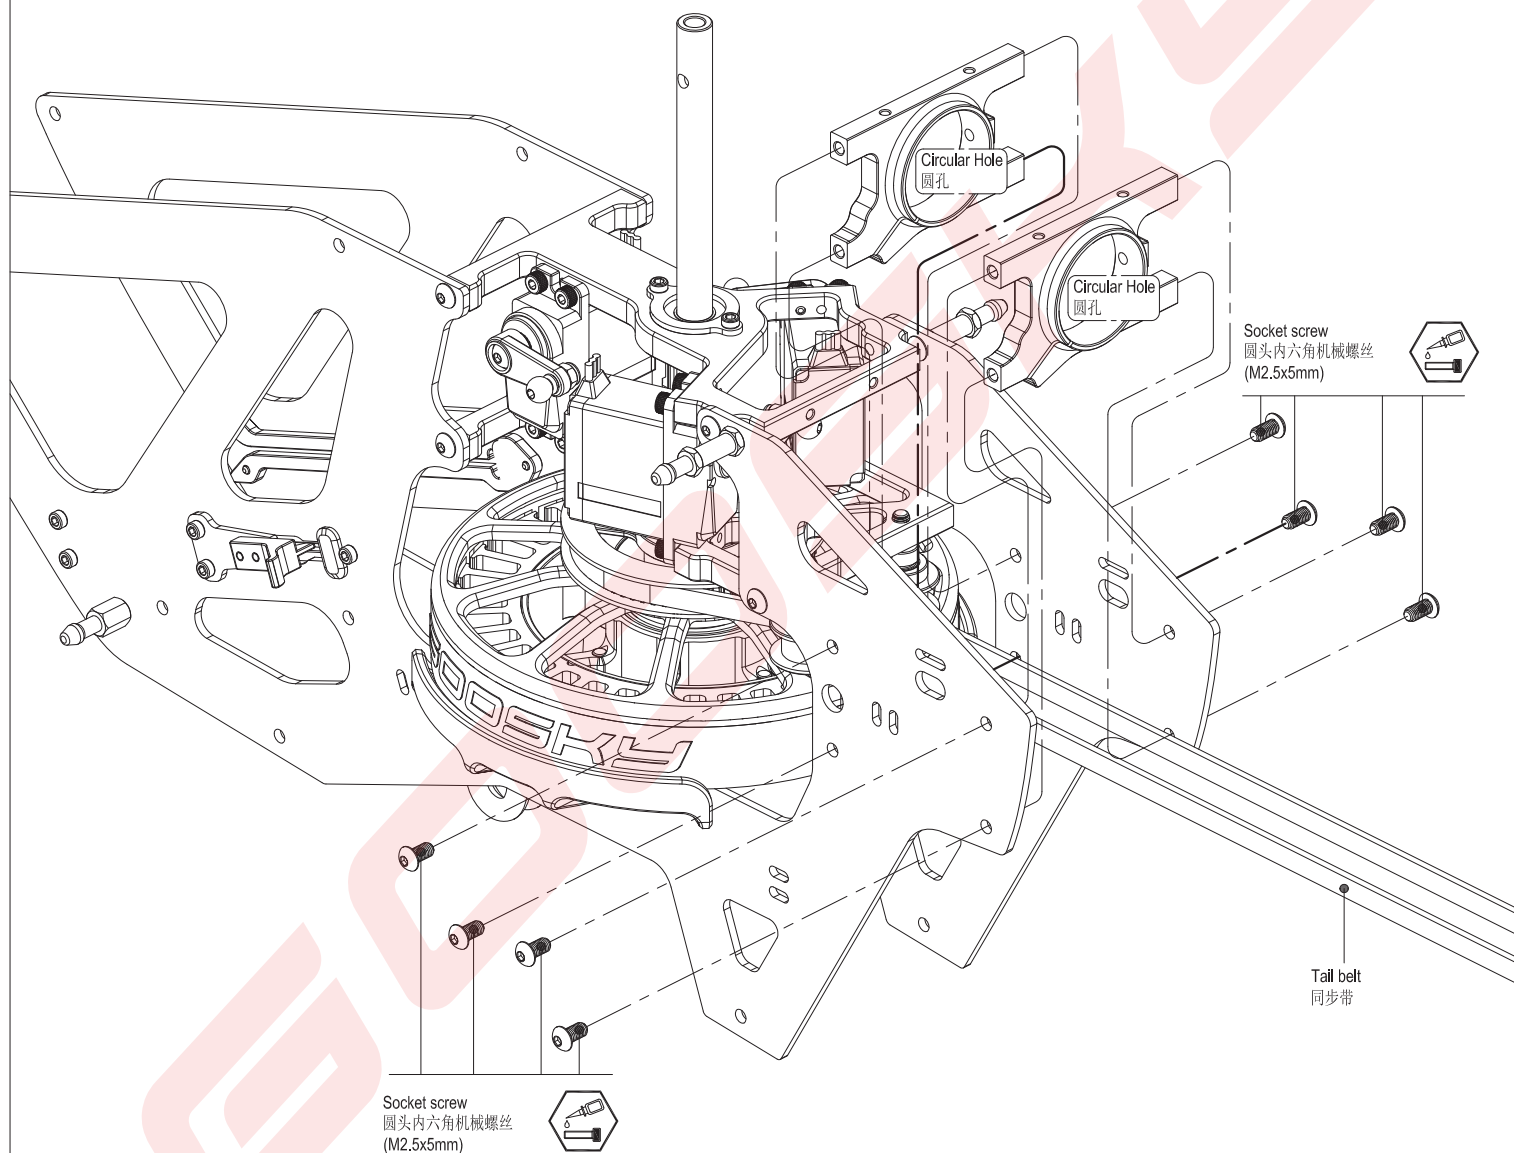
The tail belt passes through the round hole in the middle of the boom clamp first, and then the screws are assembled to fix the tail boom clamp. 同步带先从前尾管固定座中间圆孔中穿过，再装配螺丝固定尾管固定座。



HS07001




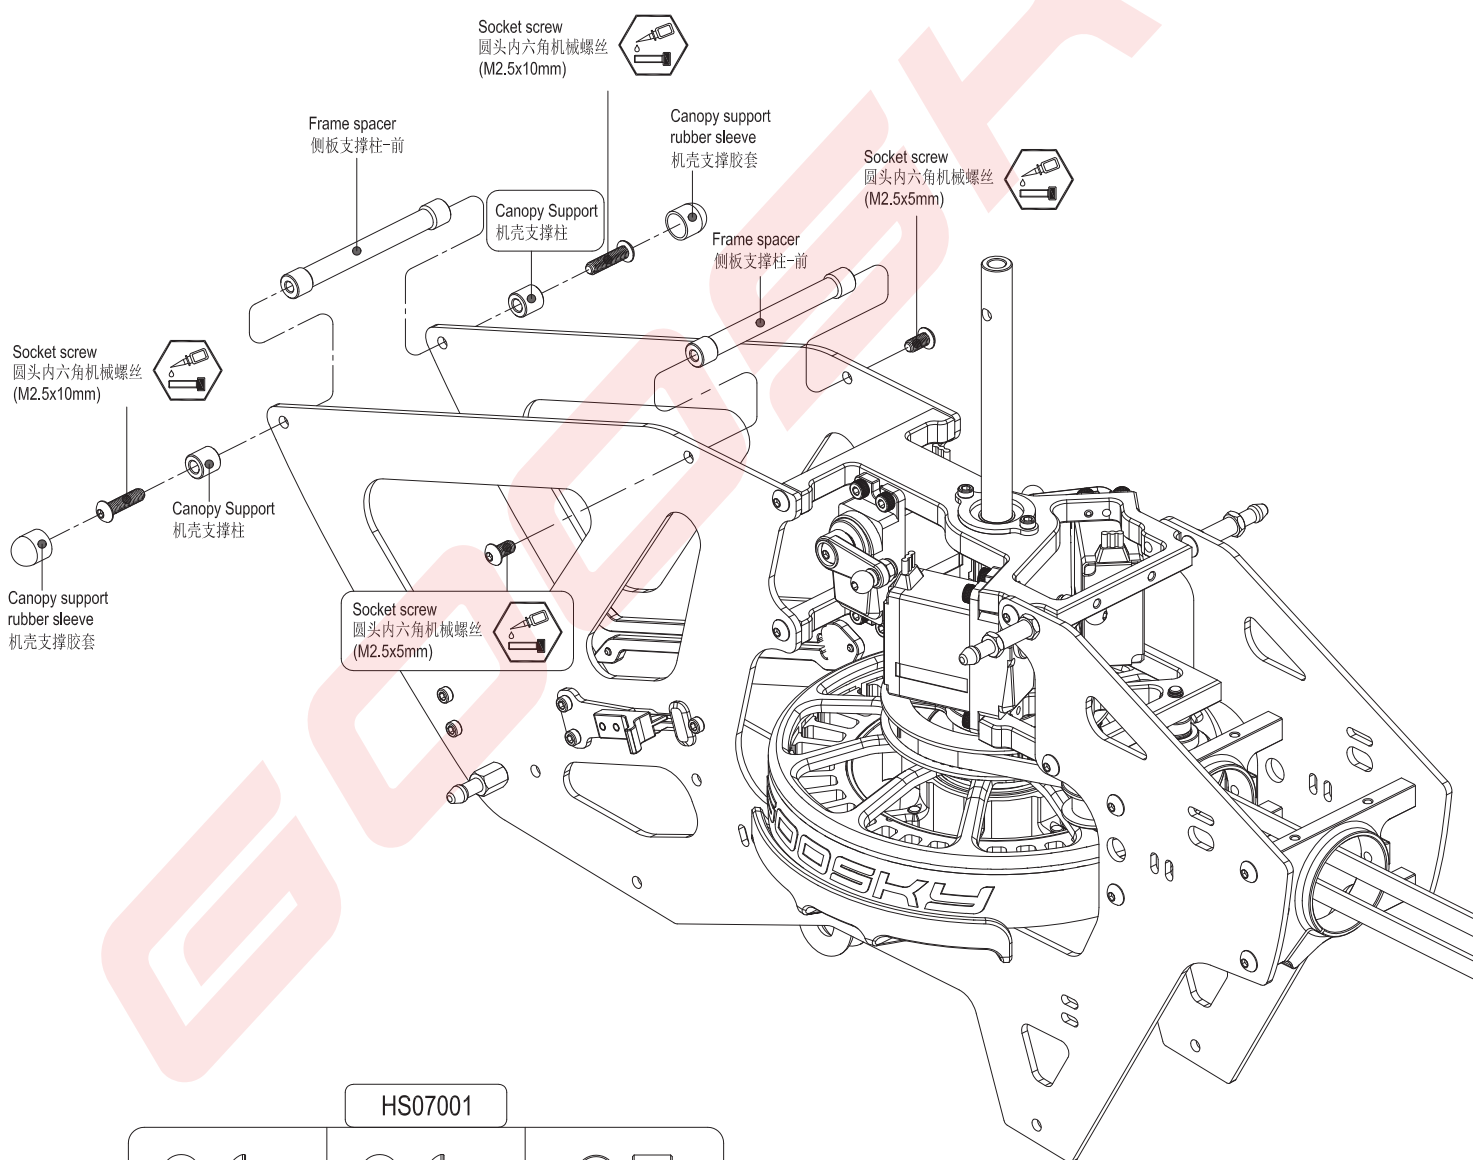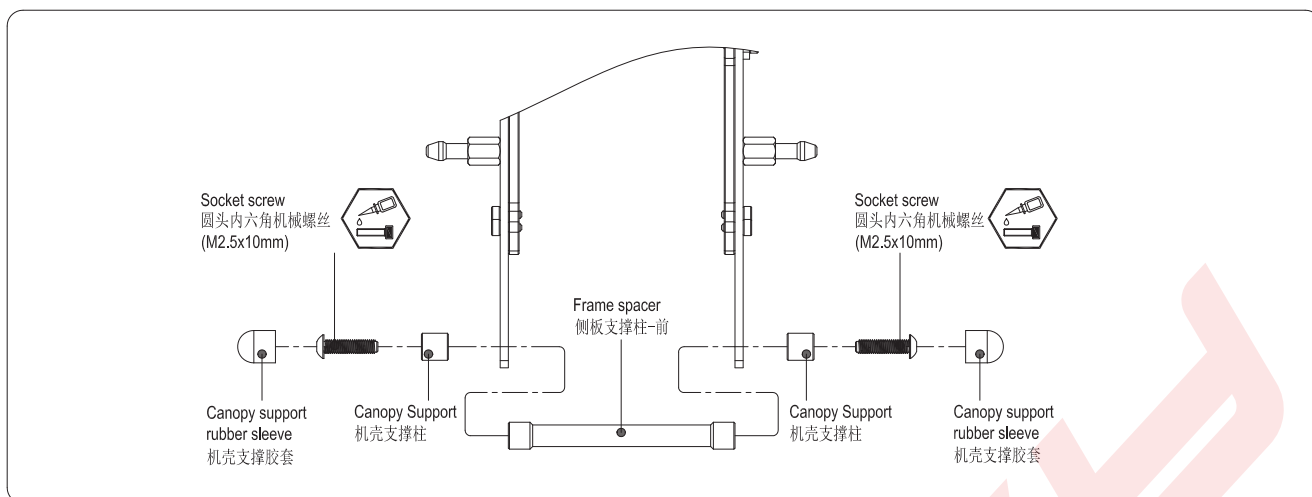Socket screw
圆头内六角螺丝
(M2.5x5mm)x8



HS07001

					
Socket screw 圆头内六角螺丝 (M2.5x10mm)x2		Socket screw 圆头内六角螺丝 (M2.5x5mm)x2		Canopy Support 机壳支撑柱x2	

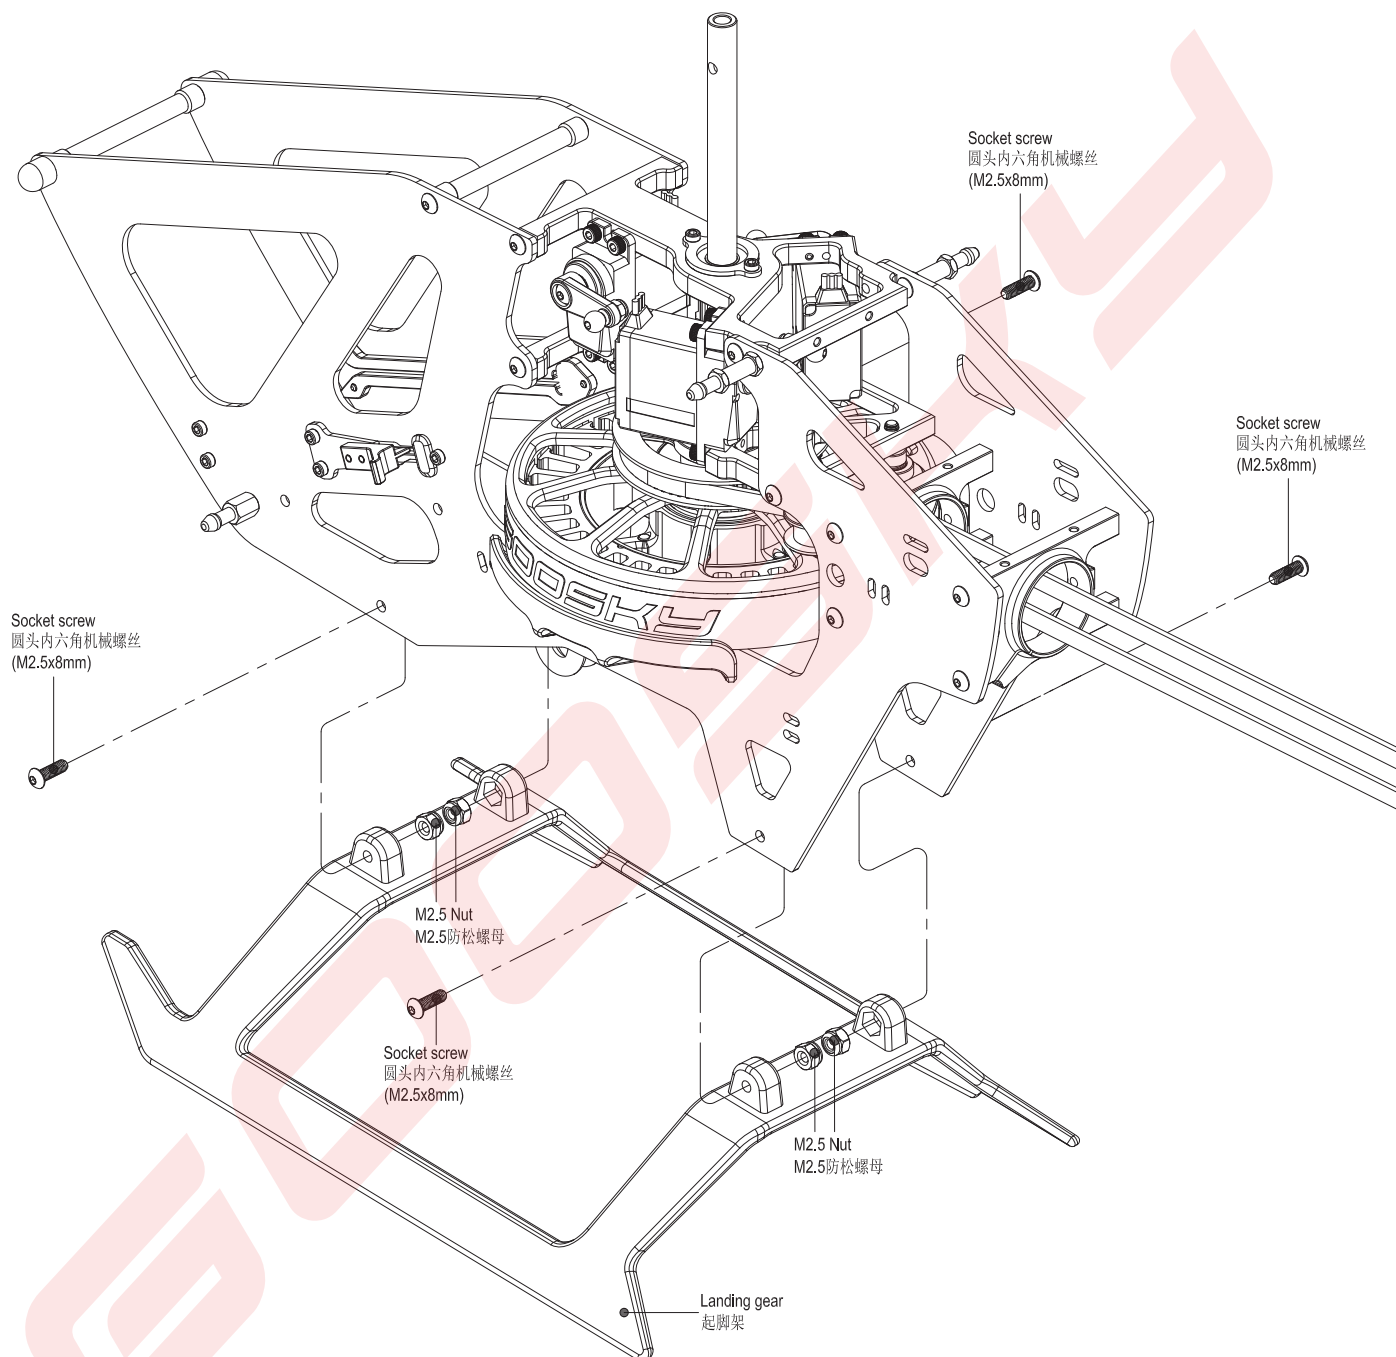



HS08001






Socket screw
圆头内六角螺丝
(M2.5x8mm)x4



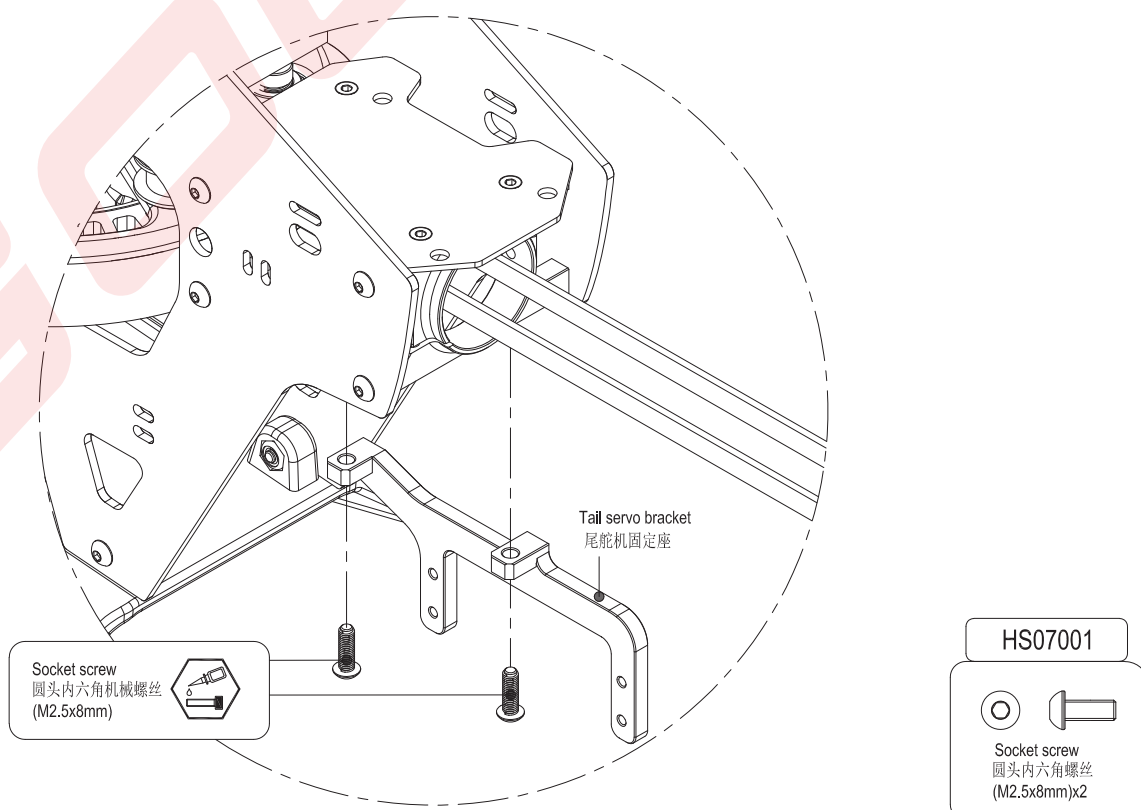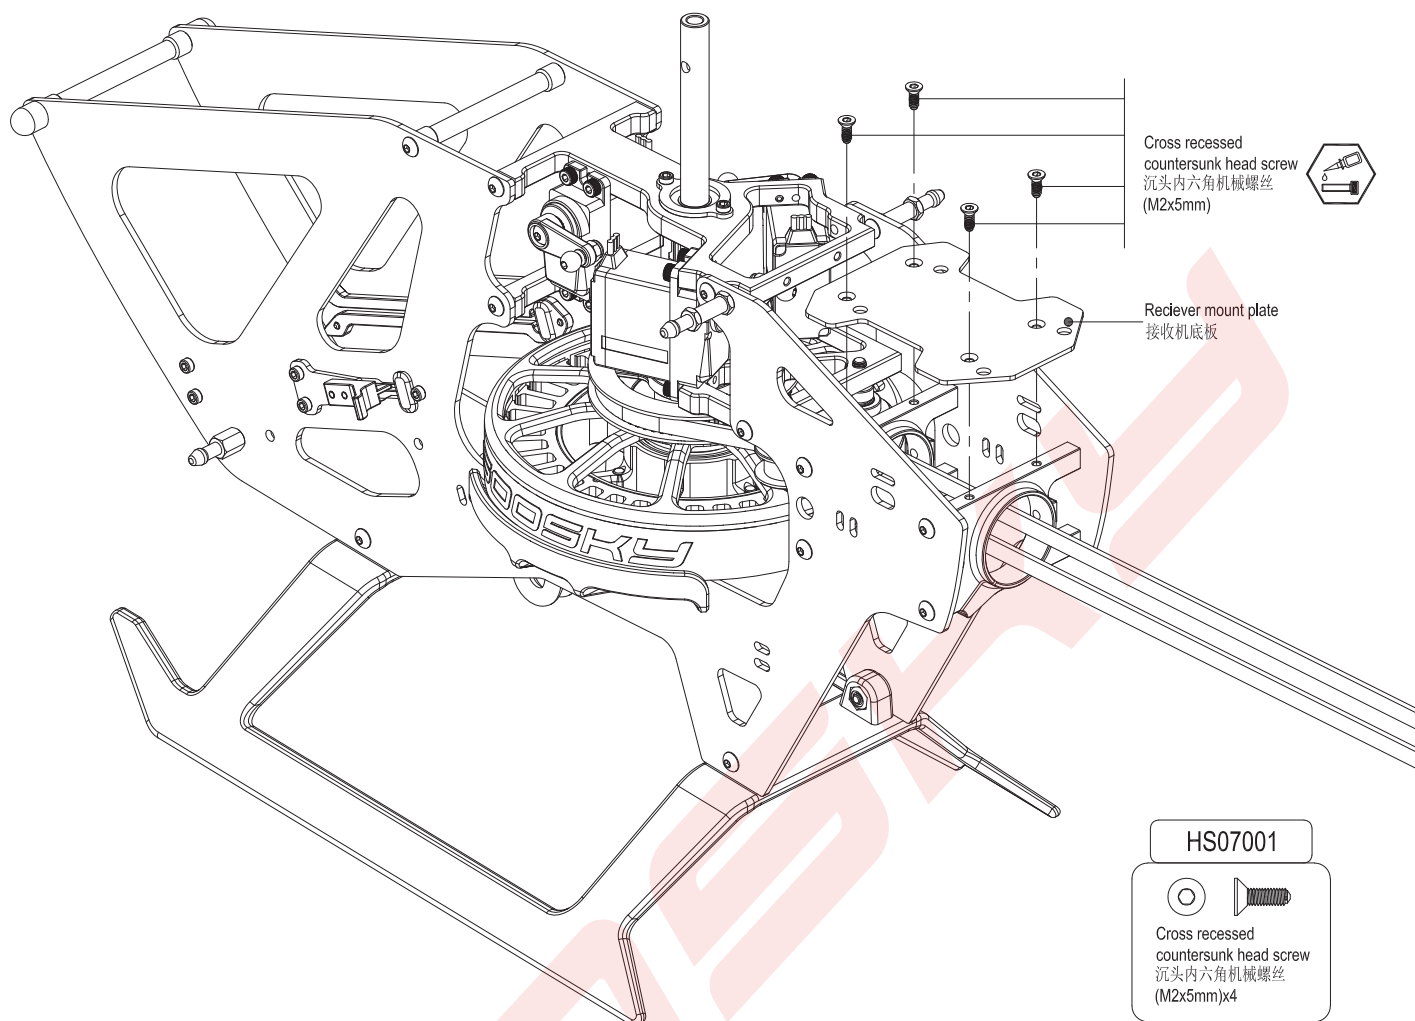 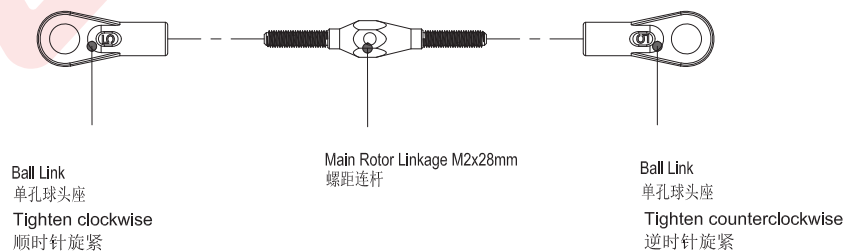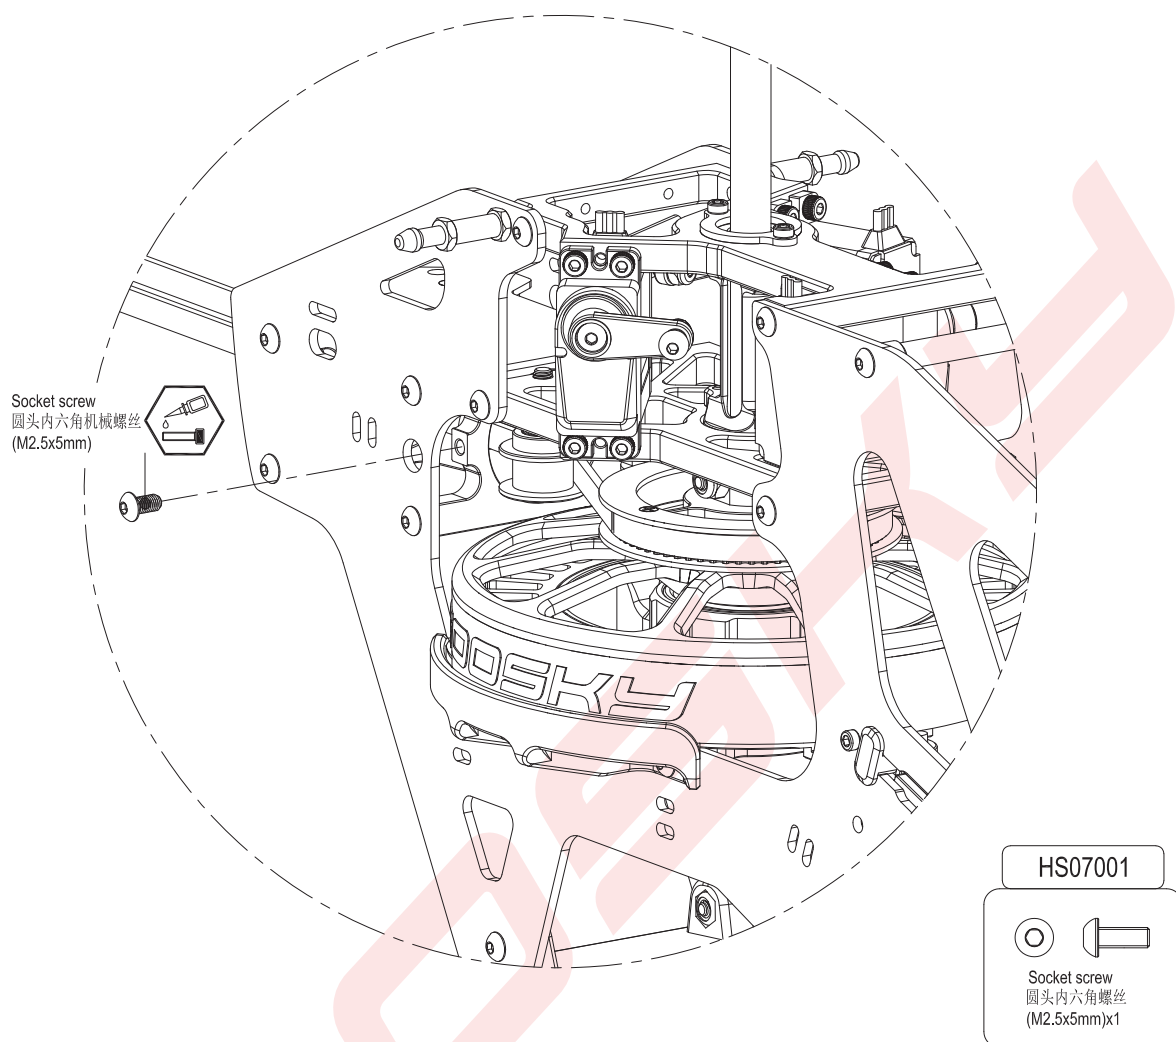M2.5 Nut
M2.5防松螺母 x4





Main Rotor Linkage x2
螺距连杆组件x2



1: No loctite.

1: 防松螺母的位置不能涂抹金属螺纹锁固胶水;

M2.5 Nut
M2.5防松螺母

Socket screw
圆柱头机械牙轴套螺丝
(M2. 5X12mm 一半牙)


HS07003





Socket screw
圆柱头内六角机械螺丝
(M2. 5X12mm 一半牙) x1




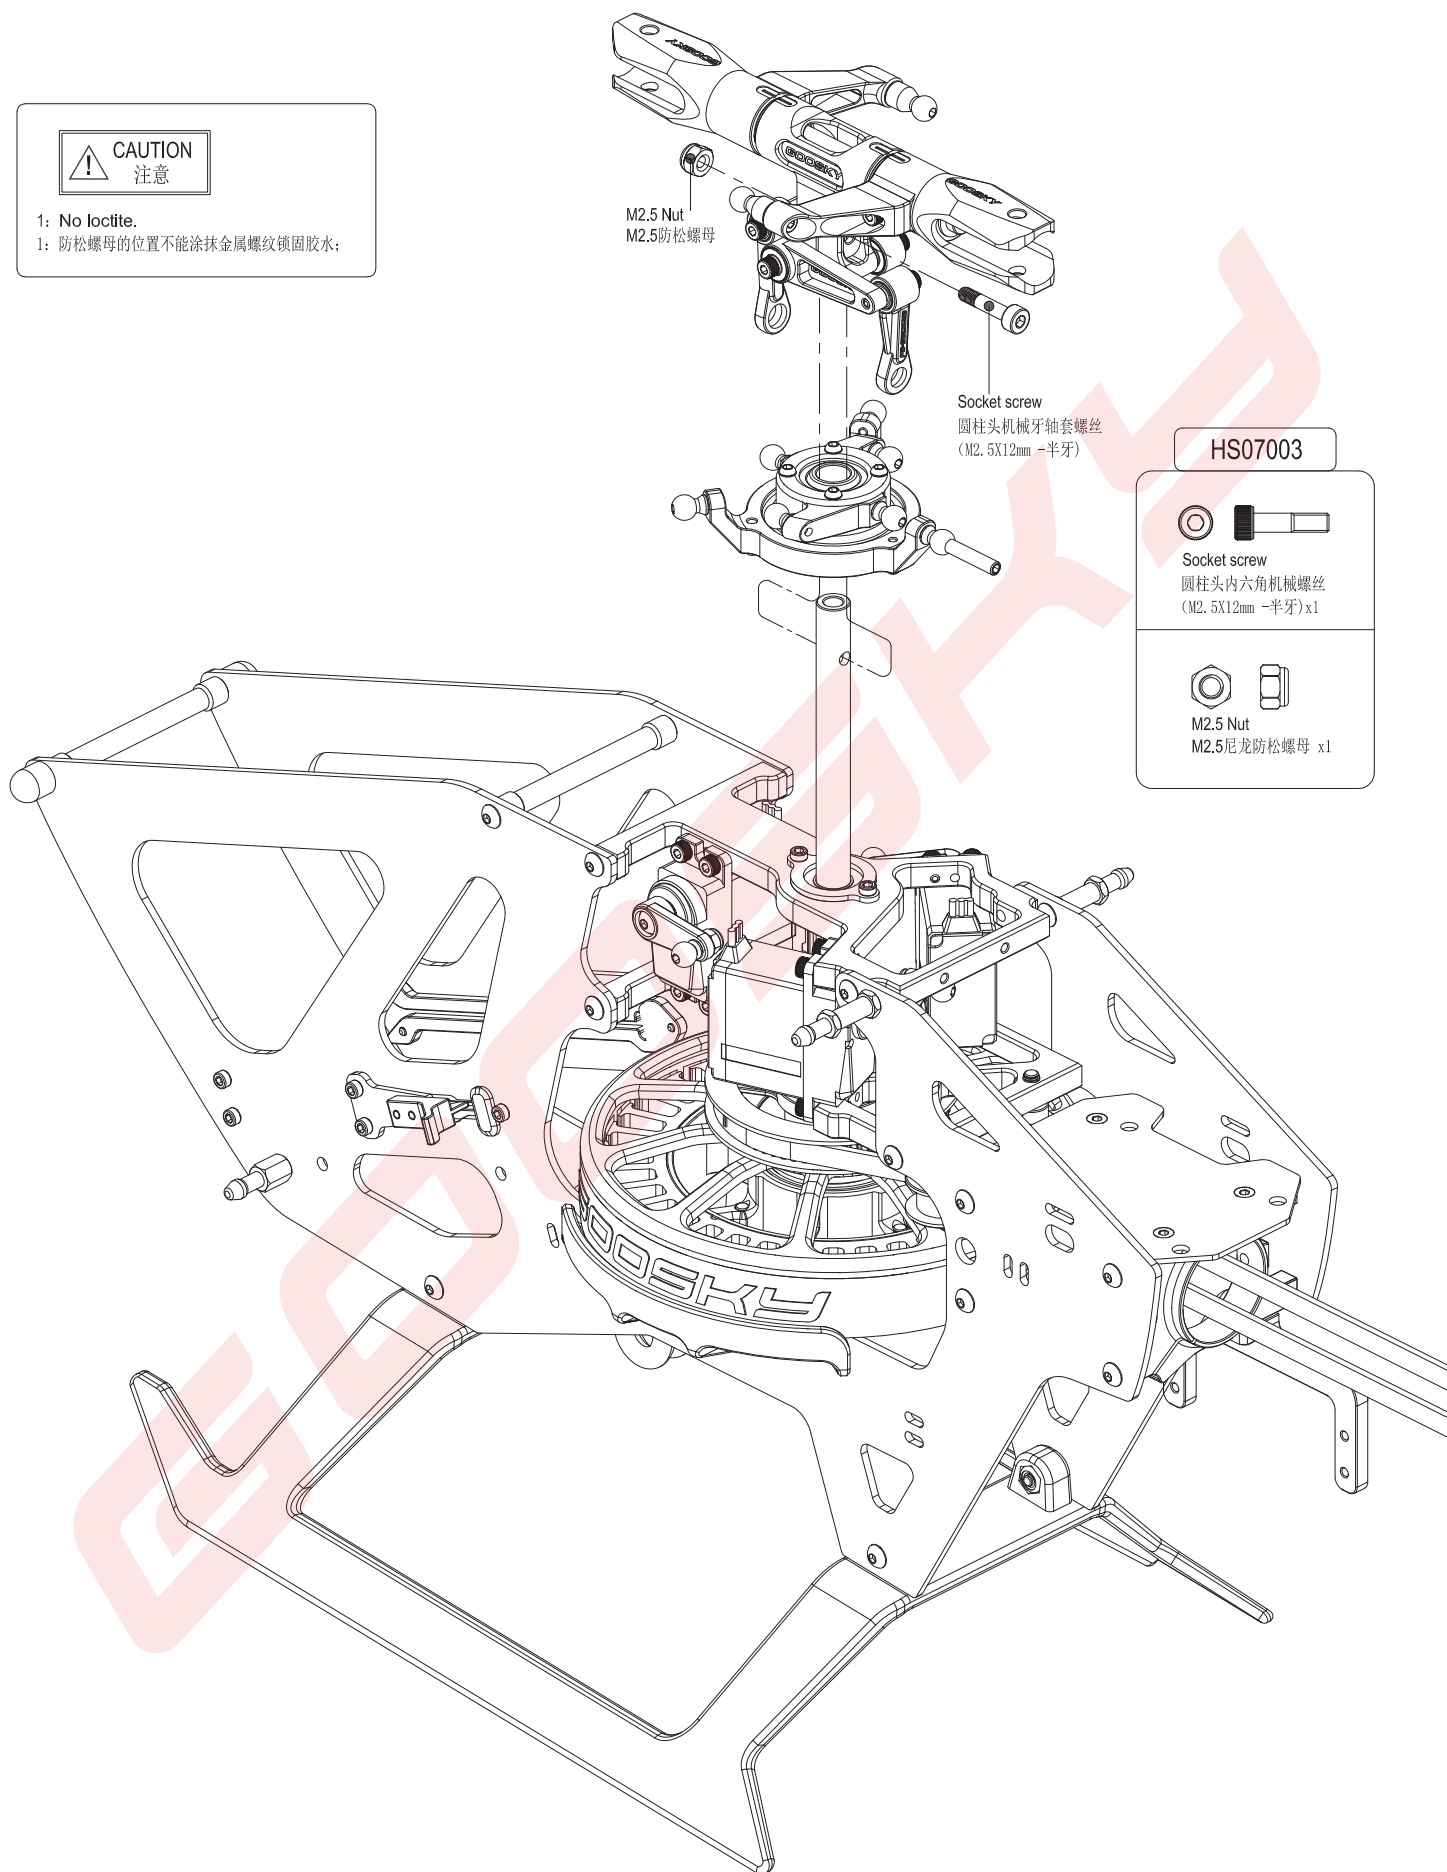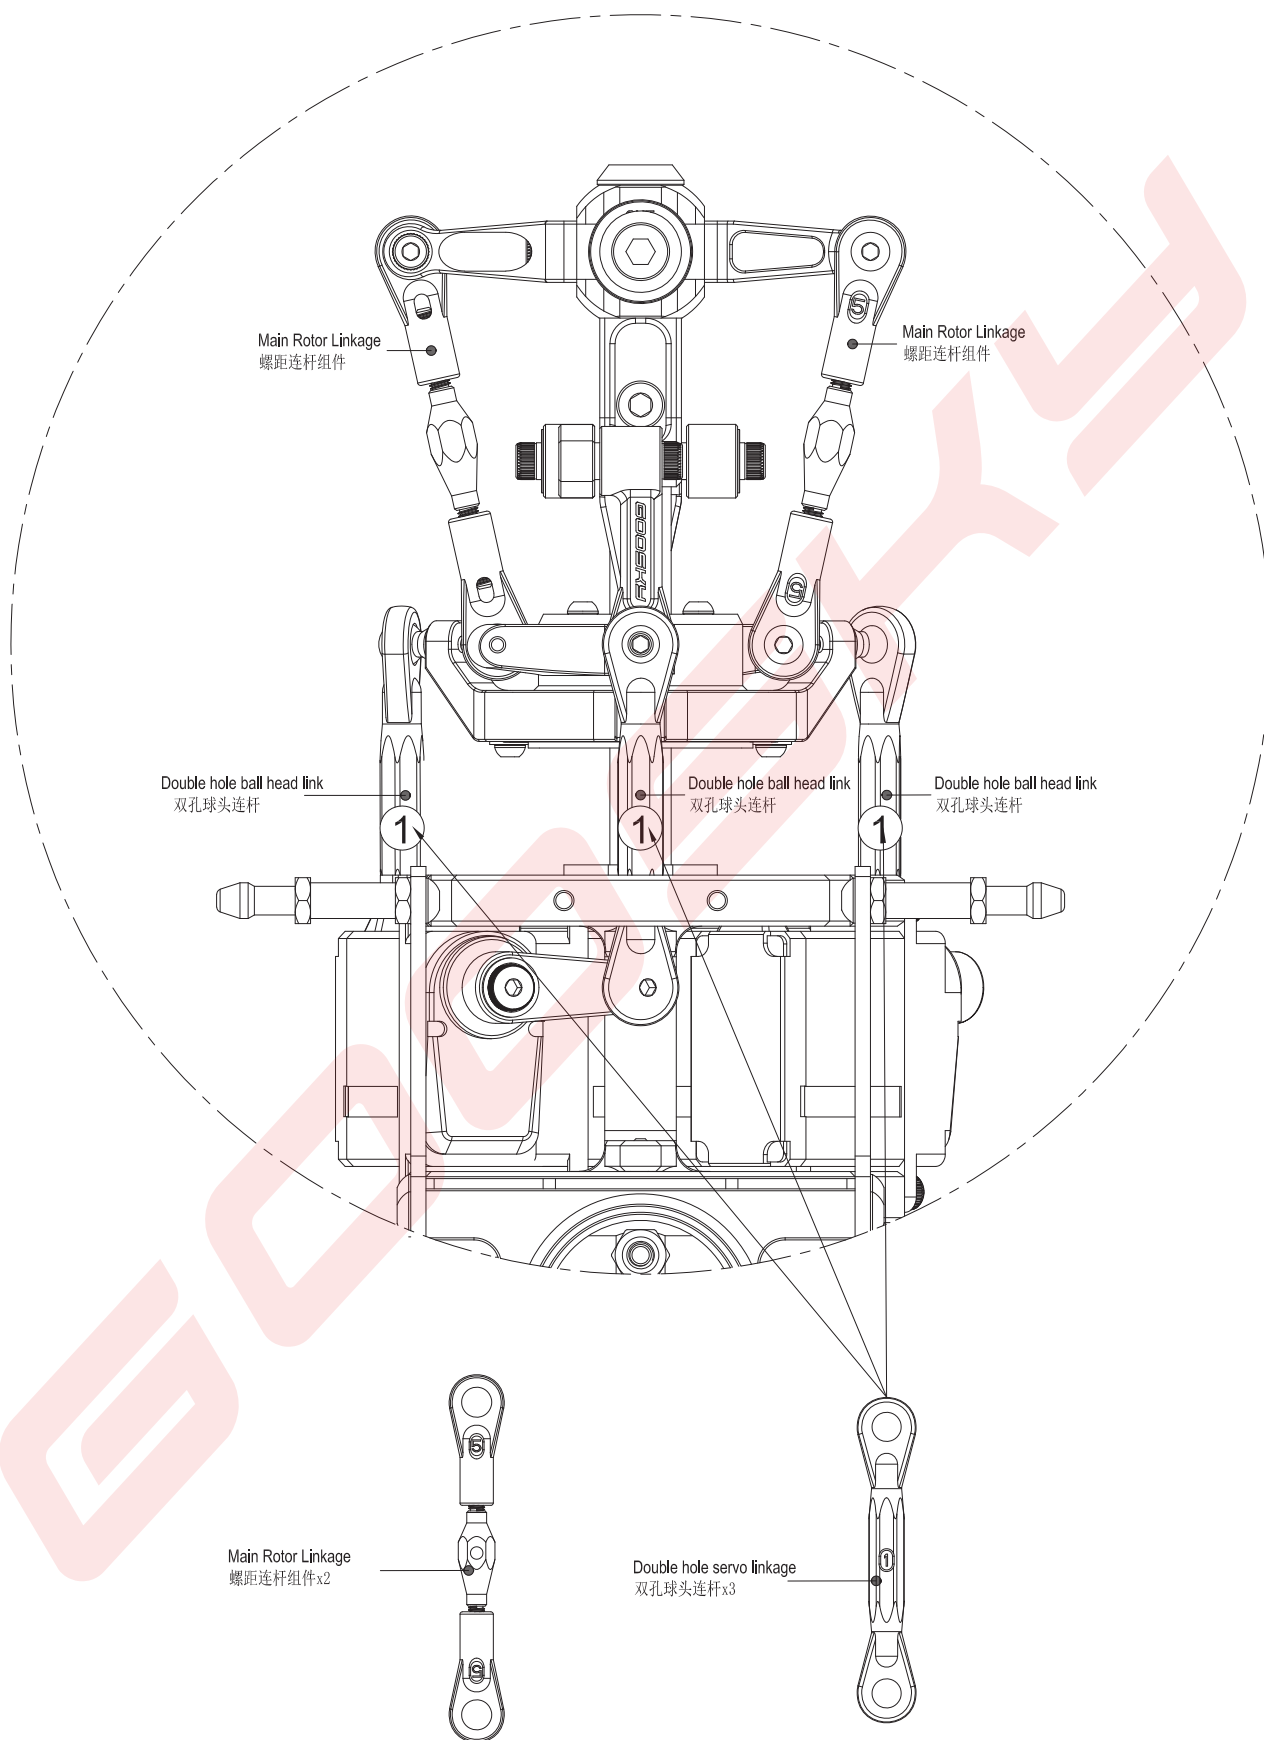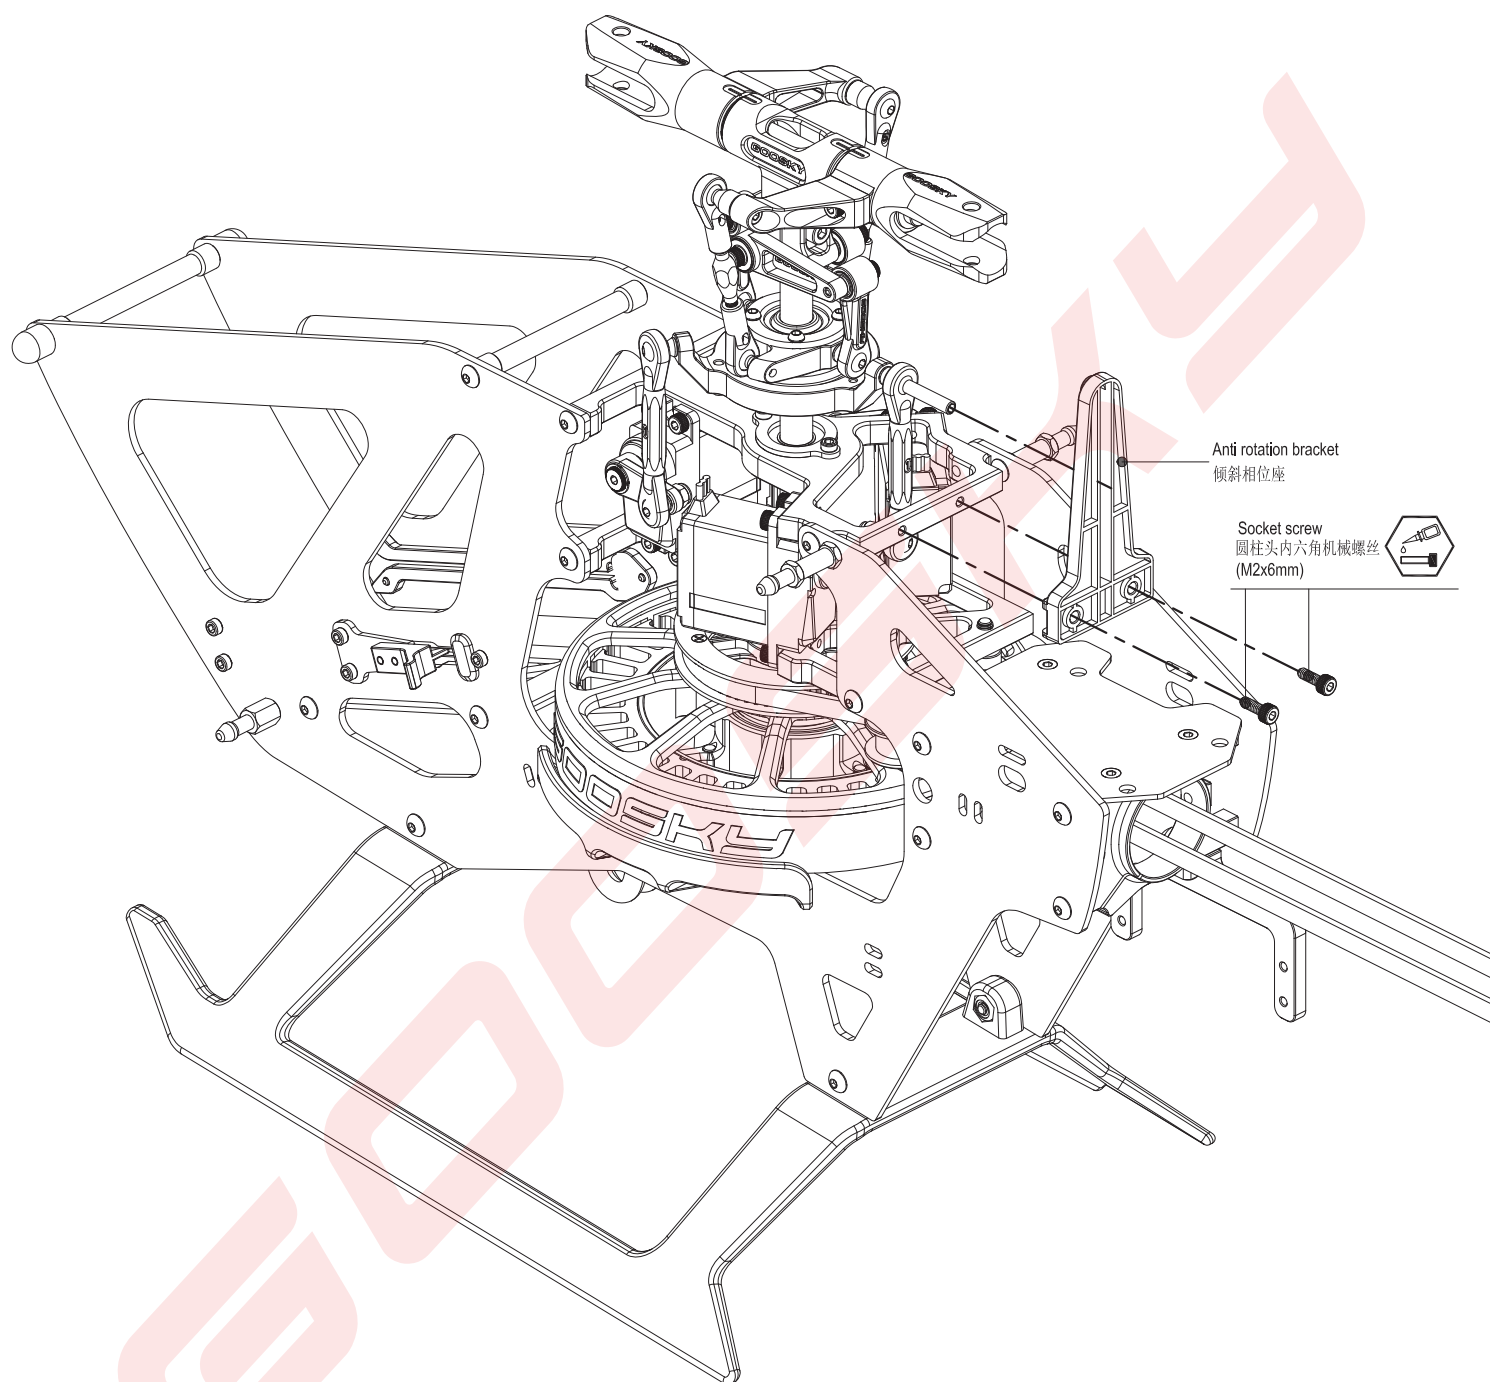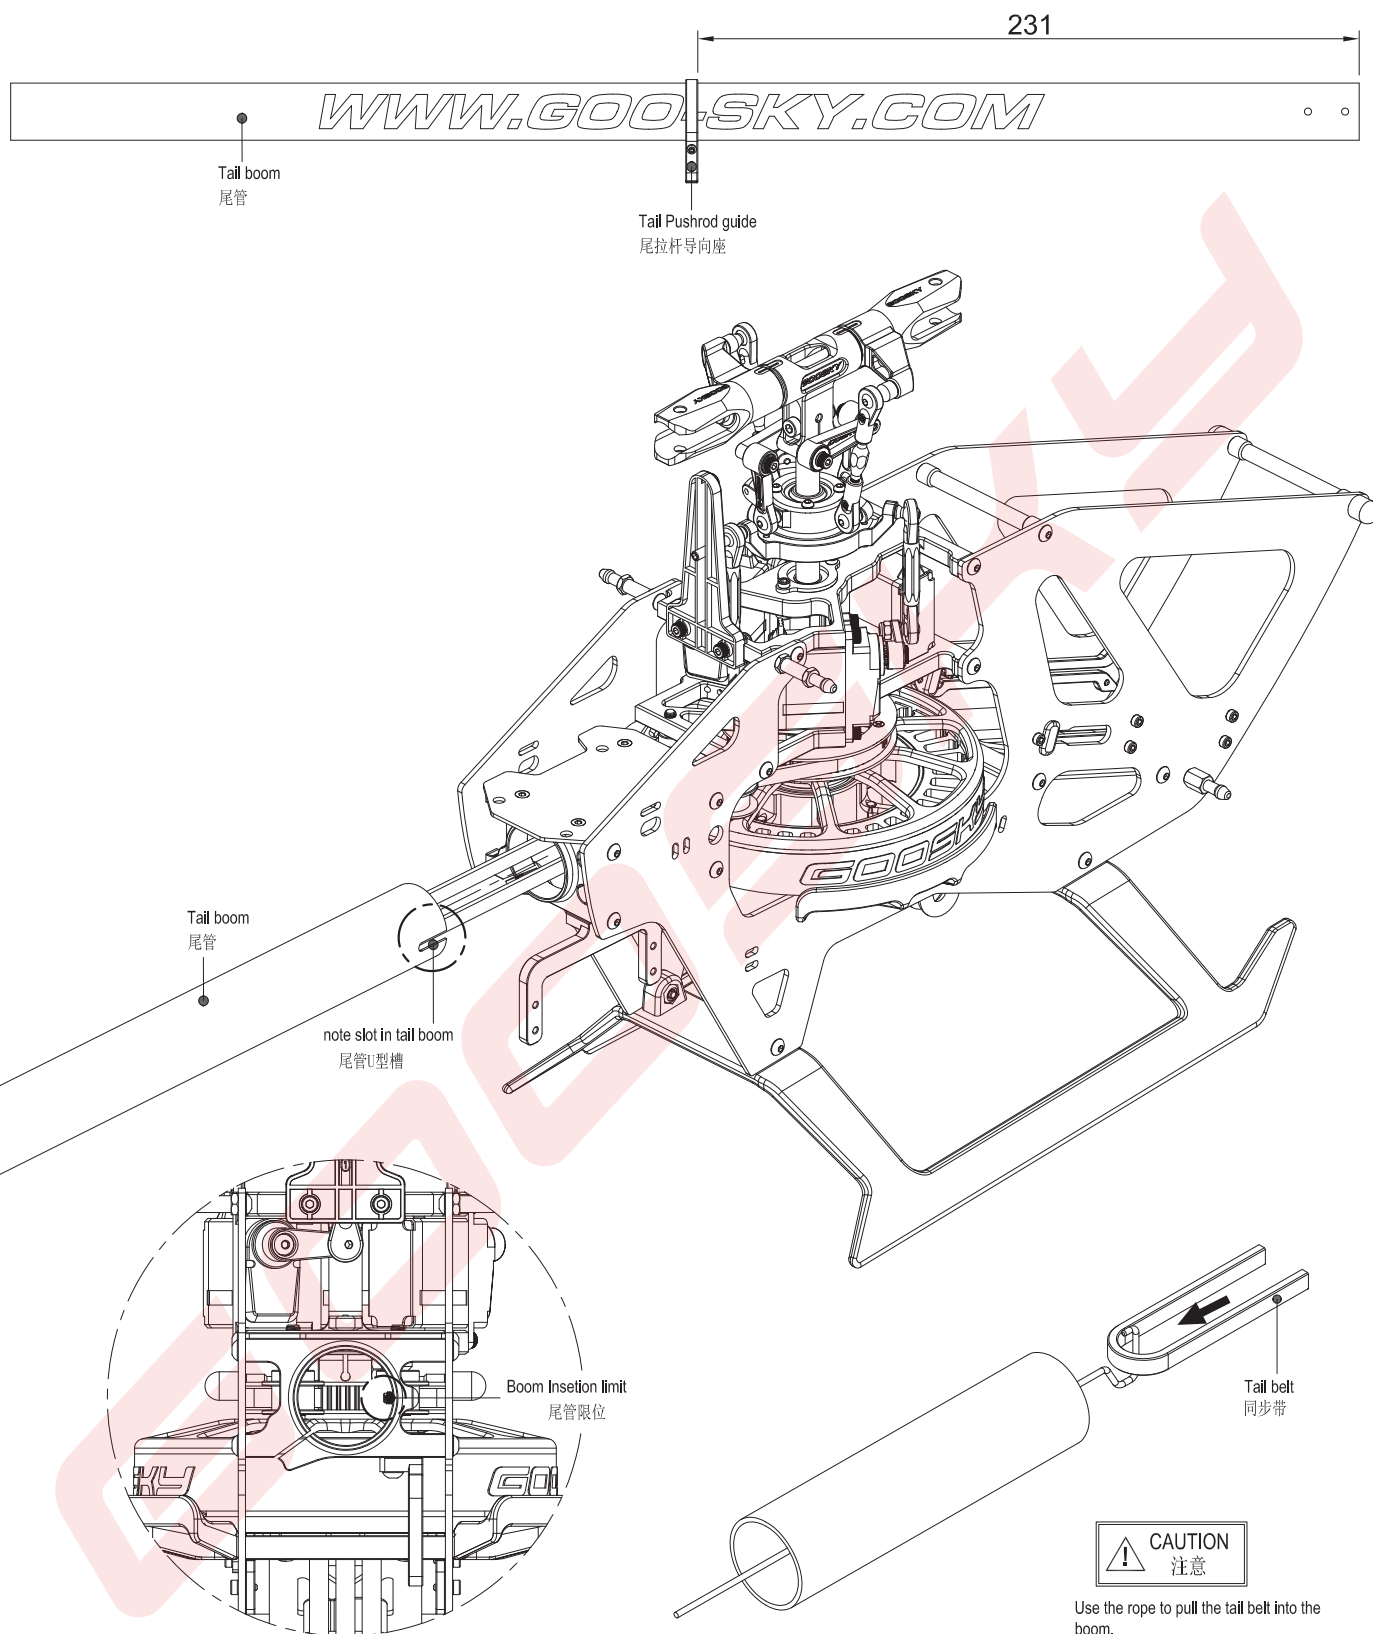M2.5 Nut
M2.5尼龙防松螺母 x1









- 1: The protruding screw in the round hole of the tail pipe fixing seat is the tail boom limit, and the U- shaped groove of the tail pipe is inserted in alignment with the limit.
1: 尾管固定座圆孔中凸出的螺丝是尾管限位, 尾管U型槽对准限位插入;



Use the rope to pull the tail belt into the boom.
使用绳子将同步带拉入尾管

Flanged Bearing-F604ZZ
凸缘轴承(Φ4*Φ12*4mm)

Tail box
尾牙箱

Tail control arm mount
尾摇臂固定座

Socket screw
圆柱头内六角机械螺丝
(M1.6x6mm)

Ball Bearing-MR52ZZ
滚珠轴承(Φ2*Φ5*2.5mm)

Tail control arm set
尾摇臂

Ball head screw
球头螺丝(Φ4.5*9mm-M2)

Socket screw
圆柱头机械牙轴套螺丝
(M2X10mm -半牙)

washer
尾摇臂轴承隔套
(2.1*Φ3.9*0.8mm)

Ball Bearing-MR52ZZ
滚珠轴承(Φ2*Φ5*2.5mm)

washer
轴承垫片
(2.1*Φ3.6*0.5mm)

WARNING
警告

The tail rocker arm shall rotate smoothly without jamming.
尾摇臂转动要顺畅，不能有卡顿、卡涩等现象。

HS10001		
 Flanged Bearing-F604ZZ 凸缘轴承(Φ4*Φ12*4mm)x2	 Ball Bearing-MR52ZZ 滚珠轴承(Φ2*Φ5*2.5mm)x2	 washer 尾摇臂轴承隔套 (2.1*Φ3.9*0.8mm)x1
 Ball head screw (Φ4.5*9mm-M2)x1	 Washer 垫片(Φ2.1*Φ3.6*0.5mm)x1	 Socket screw 圆柱头机械牙轴套螺丝 (M2X10mm -半牙)x1

Socket screw
圆柱头机械牙轴套螺丝
(M1.4X8mm -半牙)

Tail control links
尾推球头座

Note: Sign 1 is facing up
注意: 标识1朝上

Note: Sign 1 is downward
注意: 标识1朝下

Pitch slider
尾推拉臂

Pitch slider bearing seat
尾推拉轴承座

Ball Bearing-MR85ZZ
滚珠轴承(Φ5*Φ8*2.5mm)




washer
尾推拉轴承座隔套
(Φ5.1*Φ6.6*0.5mm)

Tail Shaft Bushing
尾推拉滑套


CAUTION
注意

The screw shall be locked from the unmarked side. The screw shall be locked in place and the ball head seat shall rotate flexibly.
螺丝从没有标识的一面锁入，螺丝锁到位，球头座转动要灵活。

HS10002	
 Ball Bearing-MR85ZZ 滚珠轴承(Φ5*Φ8*2.5mm)x2	 washer 尾推拉轴承座隔套 (Φ5.1*Φ6.6*0.5mm)x1
 Socket screw 圆柱头机械牙轴套螺丝 (M1.4X8mm -半牙)x2	 Tail Shaft Bushing 尾推拉滑套x1

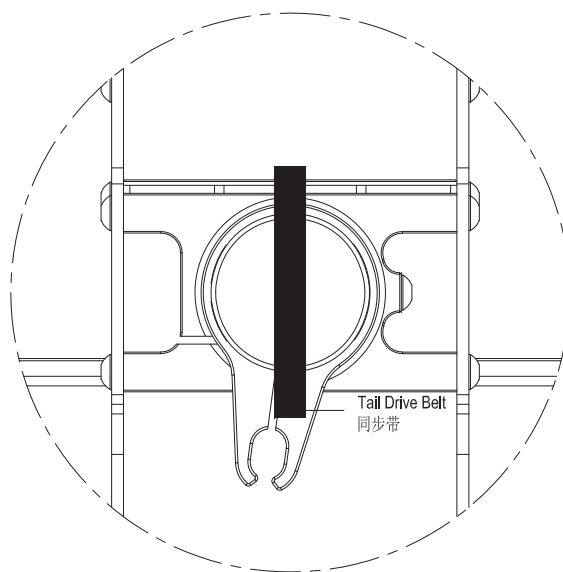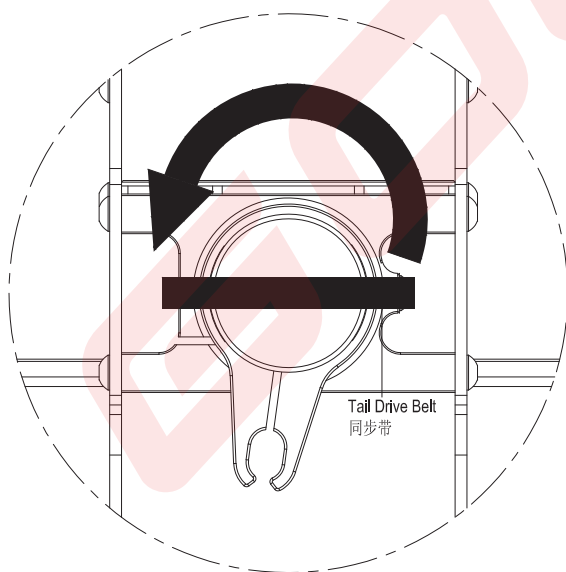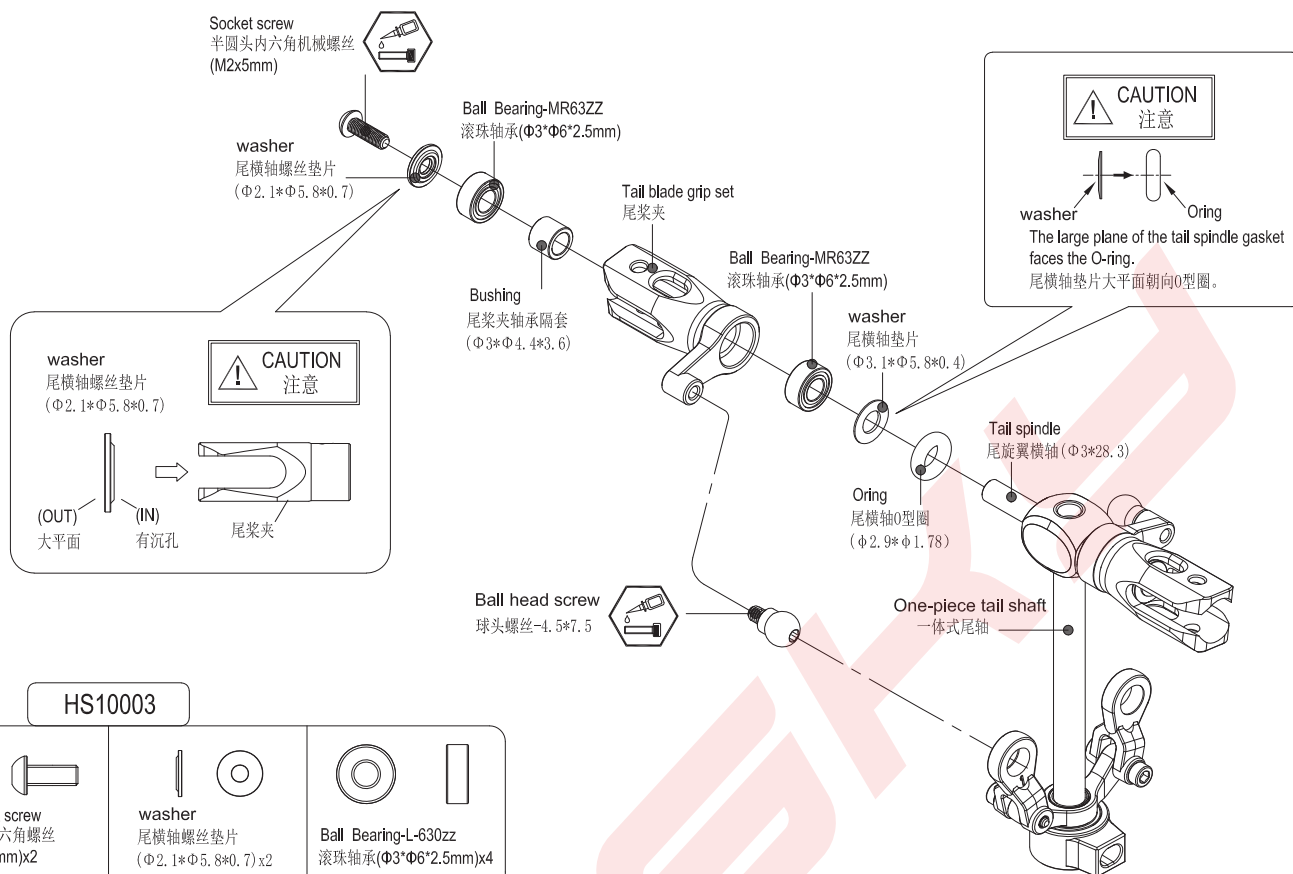

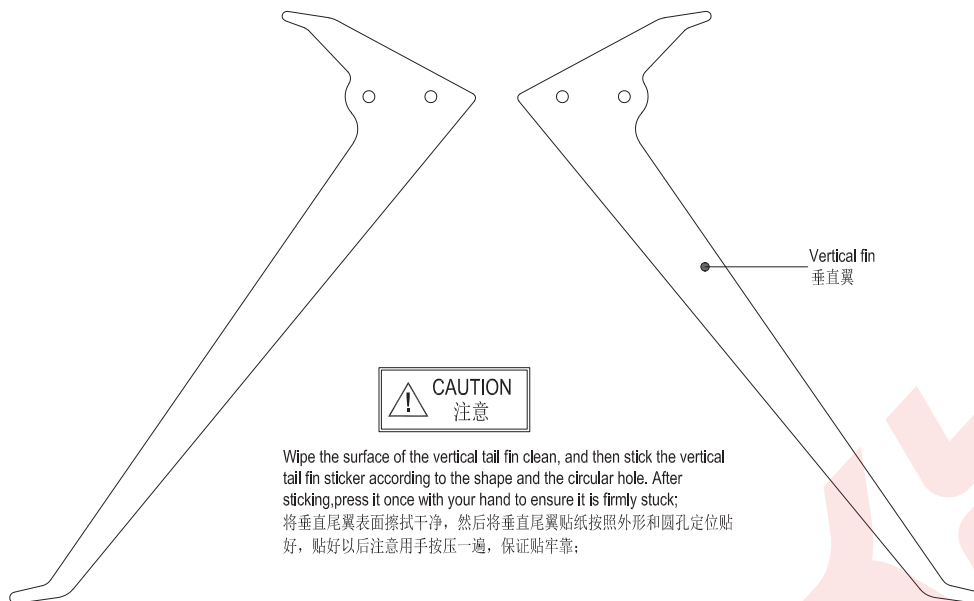After the tail belt passes through the boom horizontally, it needs to rotate 90 degrees counterclockwise from the tail.
同步带水平穿过尾管以后, 需从尾部逆时针旋转90度;



The belts must be kept parallel when assembling. Be sure to avoid any twists.
皮带装配时必须保持平行, 严禁重叠交错;

Socket screw
圆头内六角机械螺丝
(M2.5x6mm)



Machine screw
机米螺丝M3*3mm



Tail box mount plates
尾管防滑螺丝板

Tail box mount plates
尾管防滑螺丝板

Tail pulley
尾皮带轮组

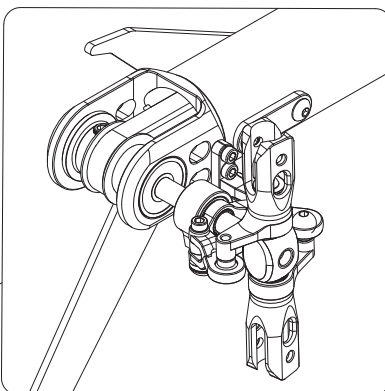
Socket screw
尾推拉轴套螺丝



After final assembly of the tail, all components should move freely without any binding.
装配完成后, 通过拨动尾摇臂, 尾推拉轴承座、尾桨夹等组件滑动、活动要顺畅, 不能有卡顿、卡涩等现象。



No thread locker is allowed in the polished rod area of the tail push-pull shaft sleeve screw.
尾推拉轴套螺丝光滑区域不能有胶水。



Socket screw
圆头内六角机械螺丝
(M2.5x5mm)



The machine screw should be aligned with the recess on the integral tail shaft and tightened.
机米螺丝要对准一体式尾轴上的凹坑锁入

HS10004



Socket screw
圆头内六角螺丝
(M2.5x5mm)x2



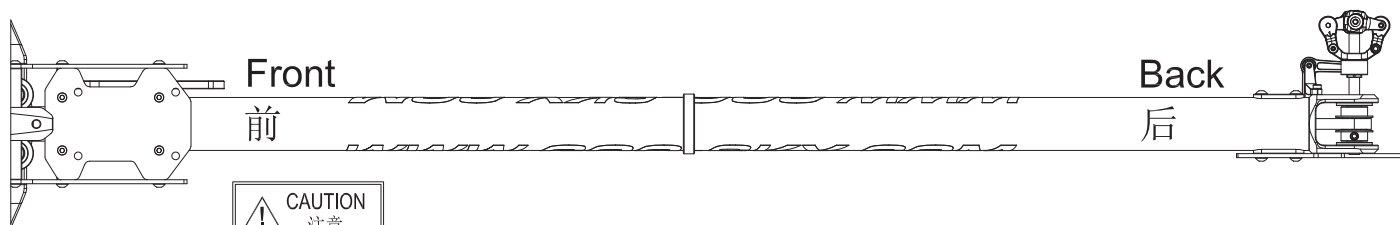
Socket screw
圆头内六角螺丝
(M2.5x6mm)x2



Machine screw
机米螺丝M3*3mm x2



Socket screw
尾推拉轴套螺丝x1





Suggestions on belt tension adjustment:

- 1: The belt tightness shall be adjusted correctly to ensure that the power is transmitted to the tail correctly. The tail belt shall not be too tight to avoid power loss, nor too loose to avoid slipping of the belt during flight.
- 2: Adjustment method: unscrew the two fixing screws(M2.5*10) at the bottom of the tail boom clamp, pull the tail boom backward, the tail belt becomes tight. Push the tail boom forward, the belt becomes loose, adjust the tightness of the belt, and then tighten the two screws at the bottom of the boom clamp.
- 3: Before each flight, be sure to check and adjust the tightness of the belt to avoid abnormal flight due to excessive tightness of the belt.

皮带松紧调整建议:

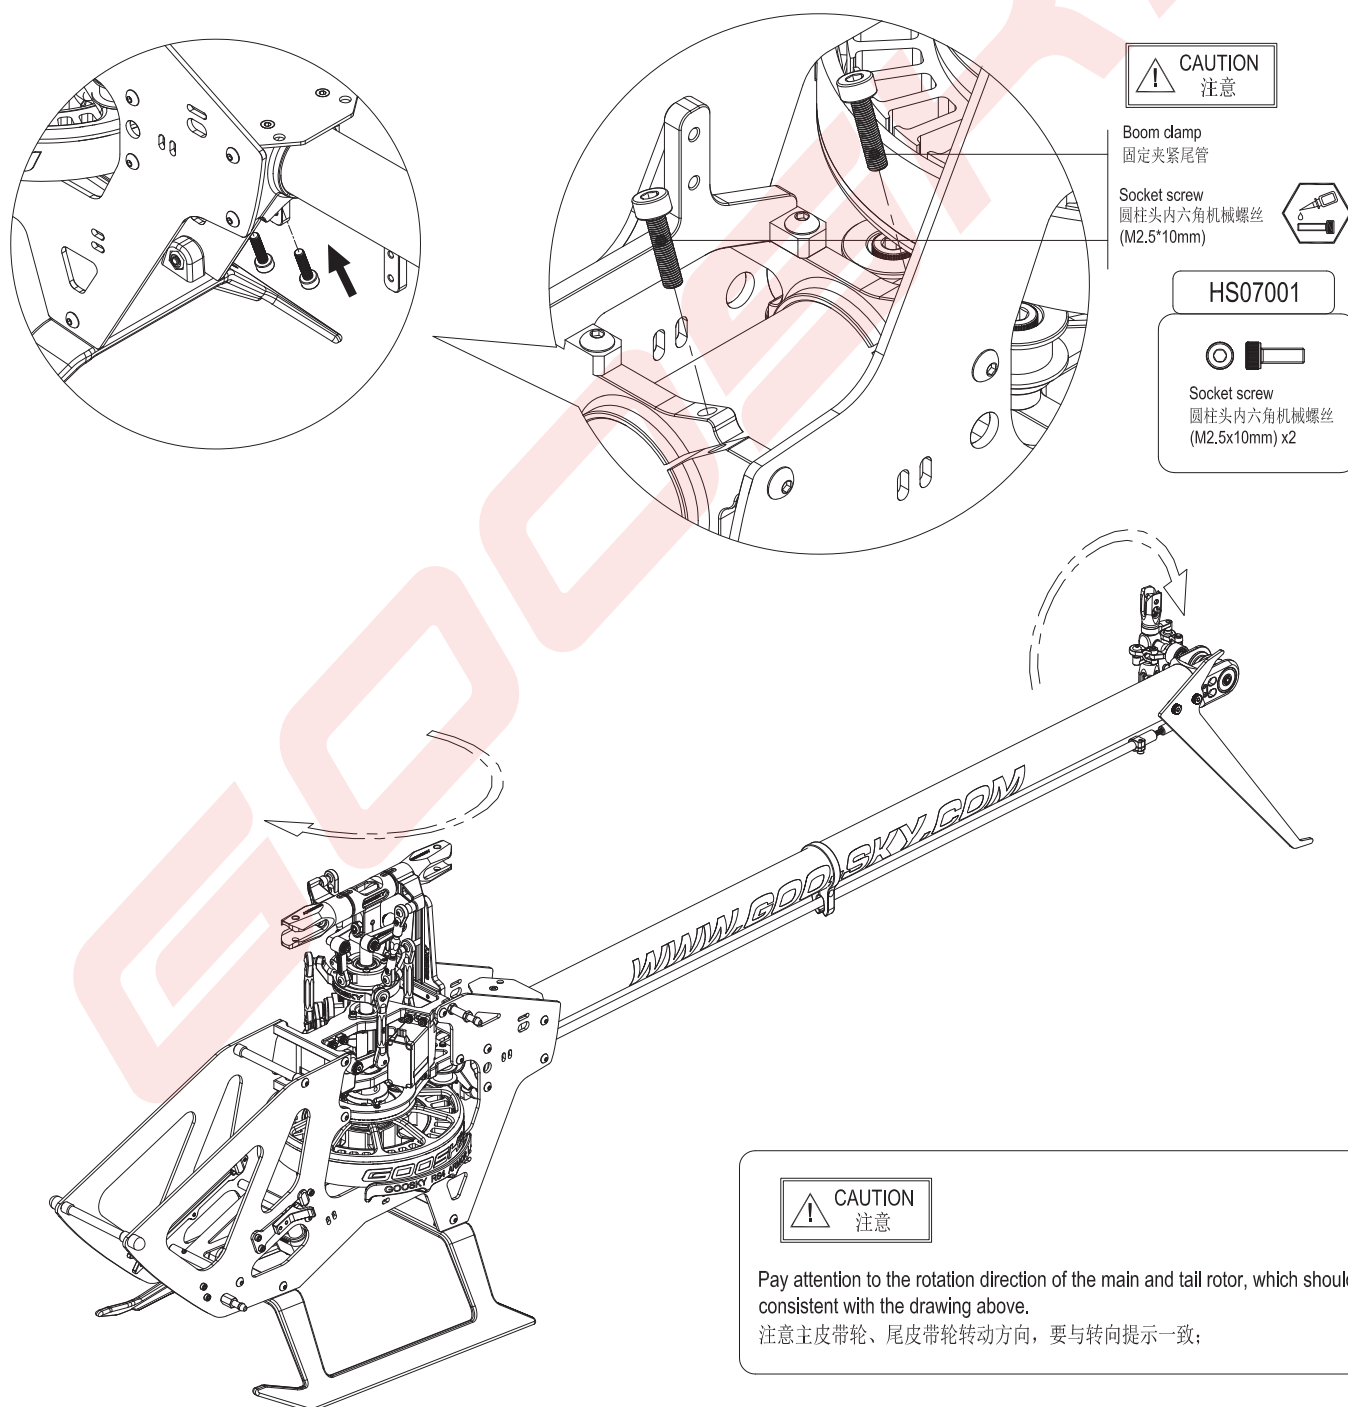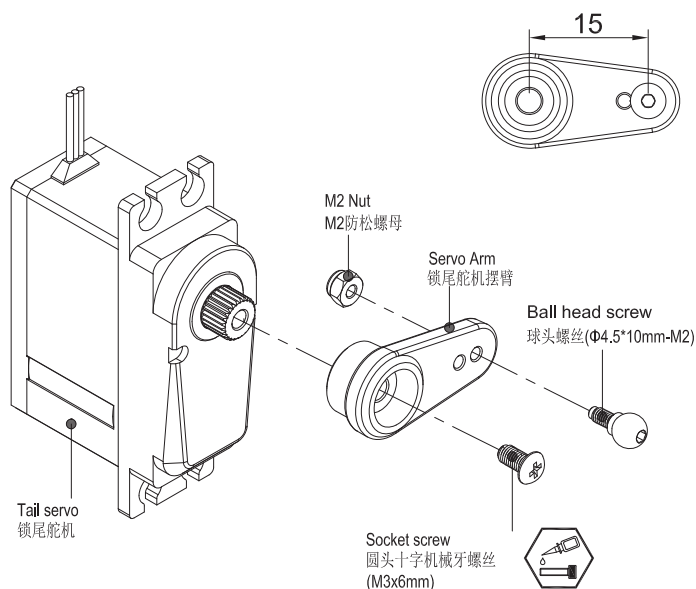- 1: 正确的调整皮带松紧度, 以确保动力正确传递至尾部, 同步带不易过紧, 以免动力损耗, 也不能太松以免飞行中同步带打滑。
- 2: 调整方式: 拧松尾管固定座底部2颗固定螺丝 (M2.5*10), 尾管向后拉-同步带变紧、尾管向前推-同步带变松, 调整好同步带松紧, 再拧紧尾管固定座底部的两颗螺丝。
- 3: 每次飞行前, 请务必检查调整同步带的松紧, 避免因同步带松紧问题导致飞行异常。





- 1: Suggestion: use low strength thread locker for M3x6 screws.
建议: M3x6螺丝使用低强度金属螺纹胶。
- 2: The ball must be positioned 15mm out on the servo arm.
球头安装位置距离 摆臂旋转中心 15mm。
- 3: The surplus part of the servo arm needs to be cut off.
舵机摆臂多余的部分需要剪掉。


HS07002



M2 Nut
M2 防松螺母x1



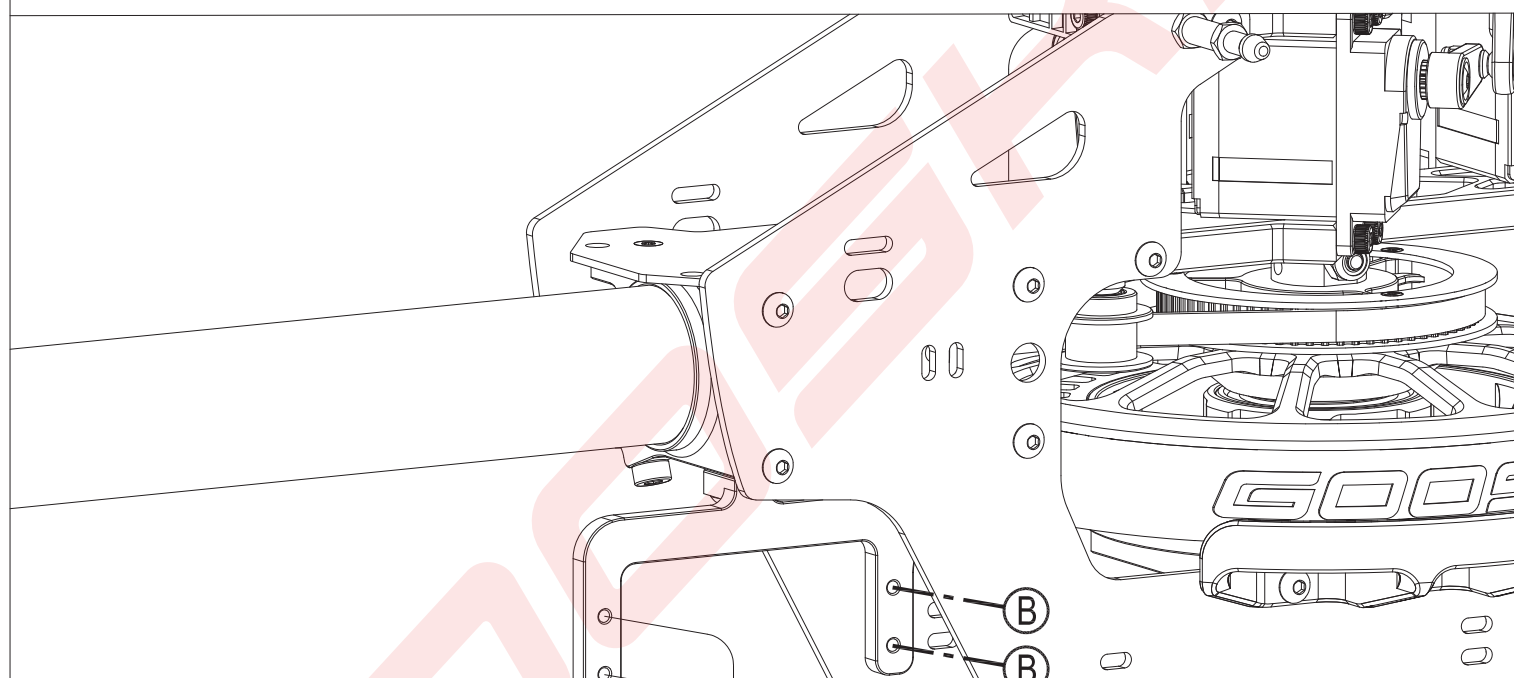Ball head screw
球头螺丝
(Φ4.5*10mm-M2)x1



HS07002



Socket screw
圆柱头机械牙螺丝
(M2x6mm) x4

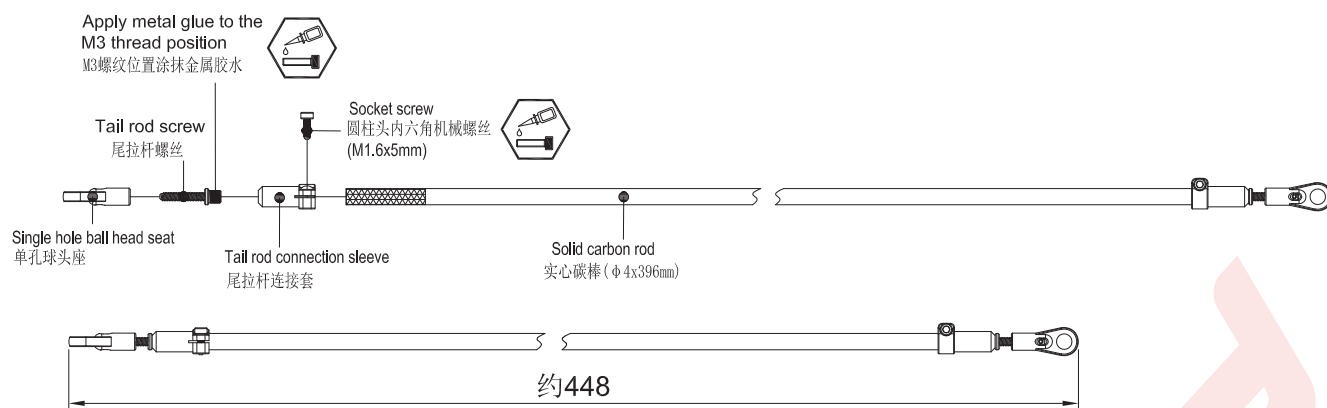


Tail Servo Washer
尾舵机螺丝套x4


Tail servo
锁尾舵机

Tail Servo Washer
尾舵机螺丝套


Socket screw
圆头内六角机械螺丝
(M2x6mm)



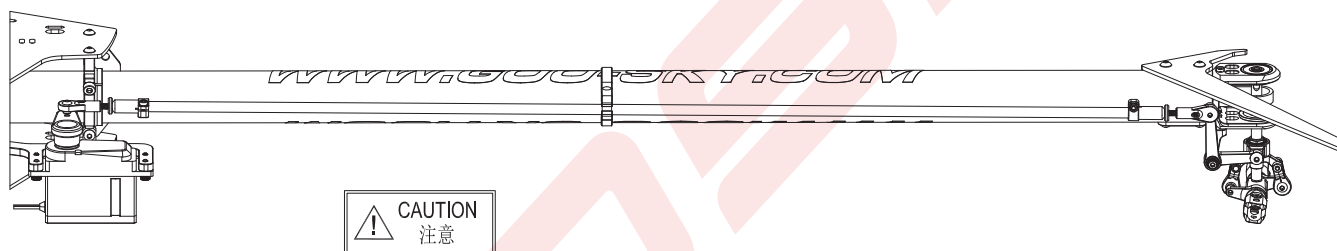
Both ends of the carbon rod (10mm area) should be polished with a file or sandpaper to make it rough.
碳杆两端(10mm区域)建议使用锉刀或者砂纸打磨一下,弄粗糙一些。




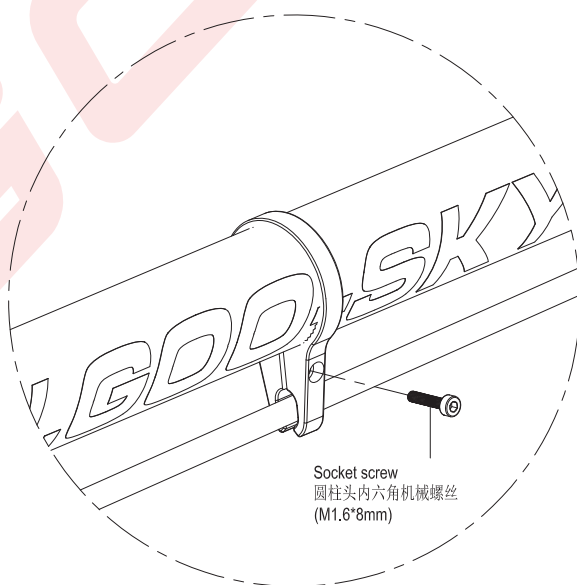
Fasten the tail push rod assembly to the tail servo ball head, then clip it into the tail push rod guide and fasten the other end to the tail control arm ball head.
将尾拉杆组件扣入舵机球头上,然后卡入尾拉杆导向座,另一端扣入尾摇臂球头上。



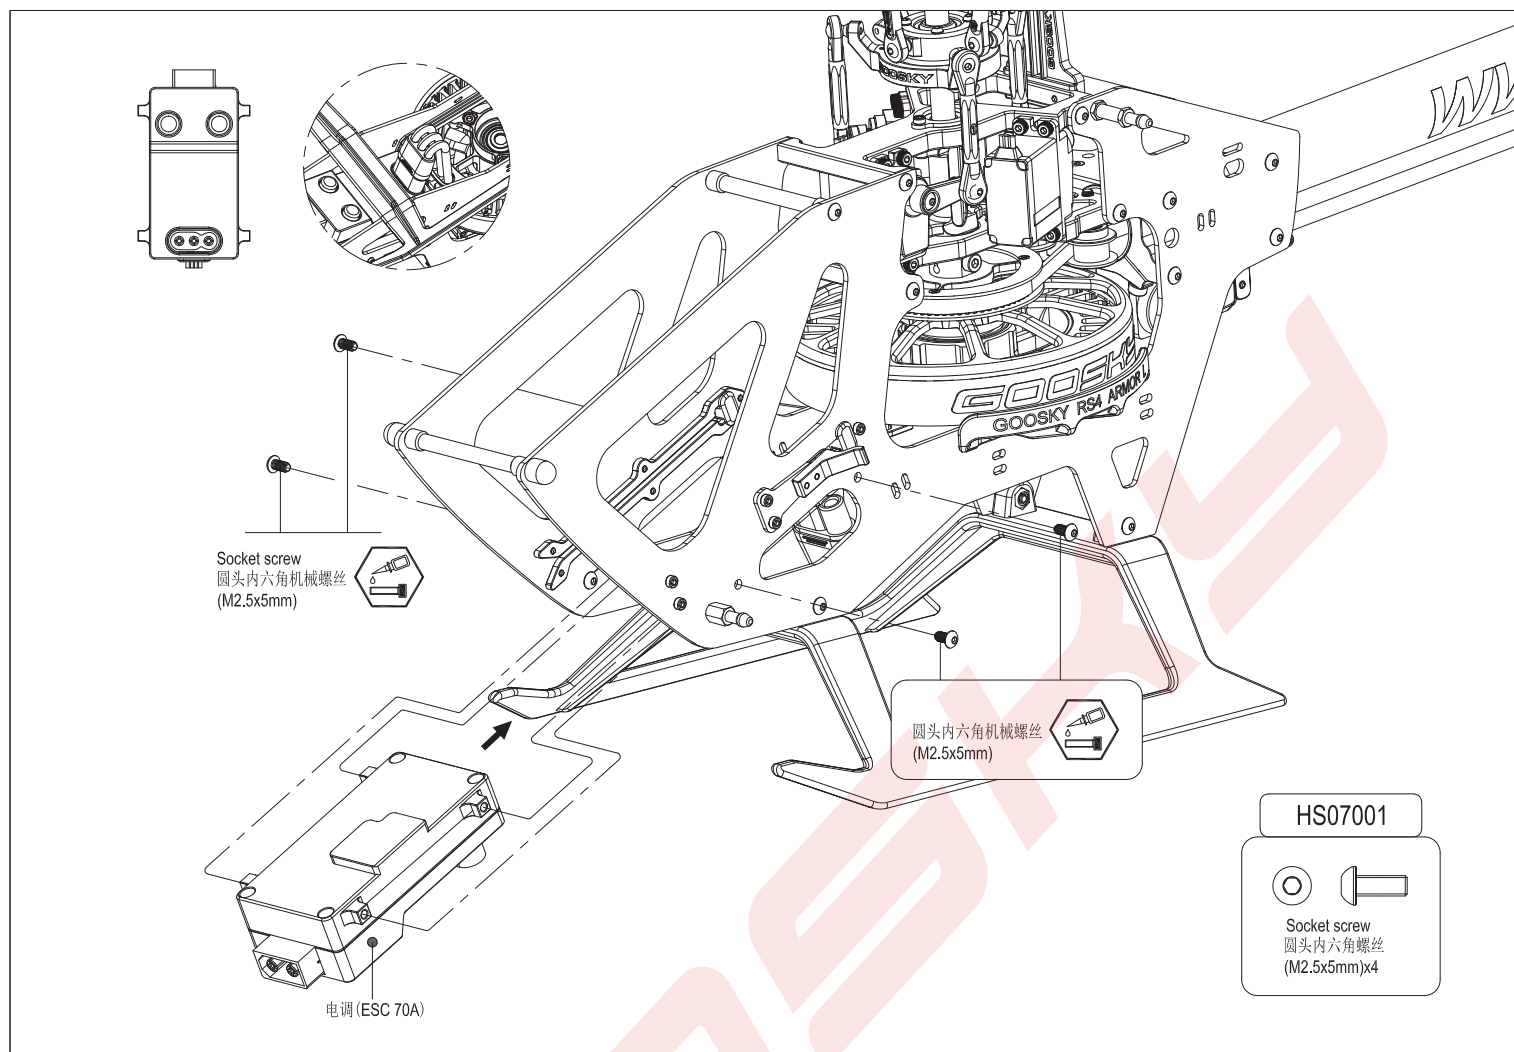No thread locker here M1.6x8.
此处M1.6X8 螺丝禁止涂抹金属螺纹胶。



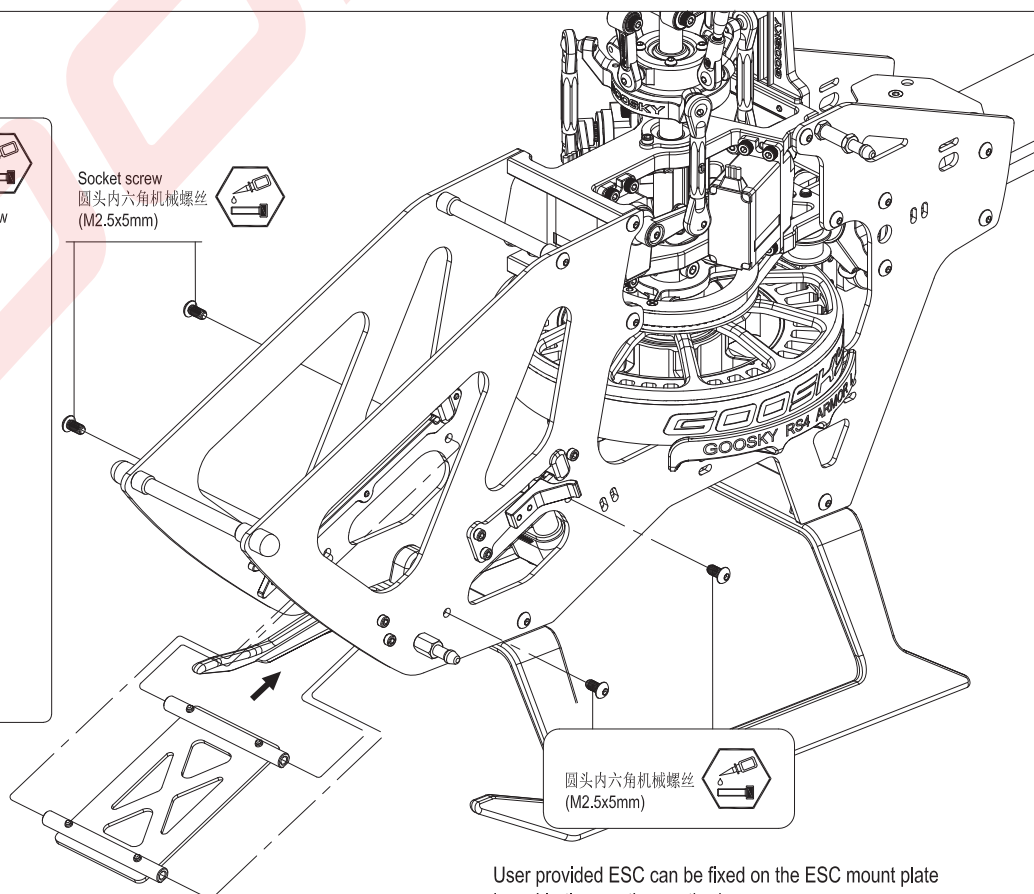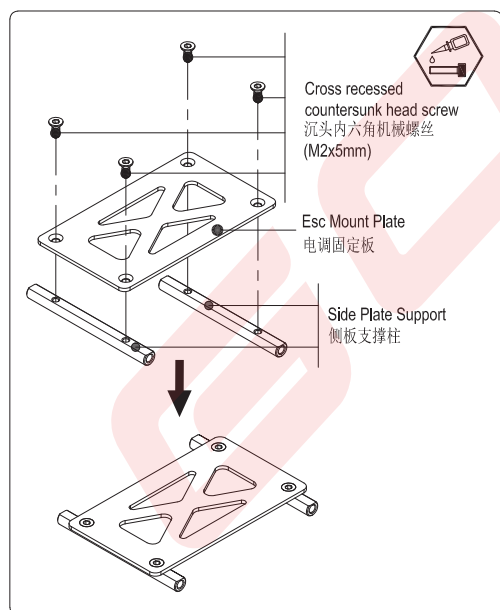Esc Mount Plate Assembly Diagram 电调固定板装配示意



HS07001

Cross recessed countersunk head screw
沉头内六角机械螺丝
(M2x5mm)x4

Socket screw
圆头内六角螺丝
(M2.5x5mm)x4

CAUTION
注意

User provided ESC can be fixed on the ESC mount plate by cable ties or other methods.
非官方提供的电调可以通过扎带或者其他方式固定在电调固定板上

Function introduction功能介绍			
Serial No 序号	Interface接口	Function功能	Remarks备注
1	CH1/CH2/CH3	Cyclic Servos 斜盘舵机	
2	CH4	Tail Servo 锁尾舵机	
3	BEC	ESC (电调)	
4	RPM	RPM 转速采集	
5	S-BUS	S-BUS RX	
6	PWM1	Reserve 预留	
7	PWM2	Reserve 预留	
8	UART	Bluetooth 蓝牙	
9	DSMX	PPM/DSM/DSMX RX	
10	S0	Reserve 预留	
11	S1	Gyro stabilization mode 开/关姿态模式	

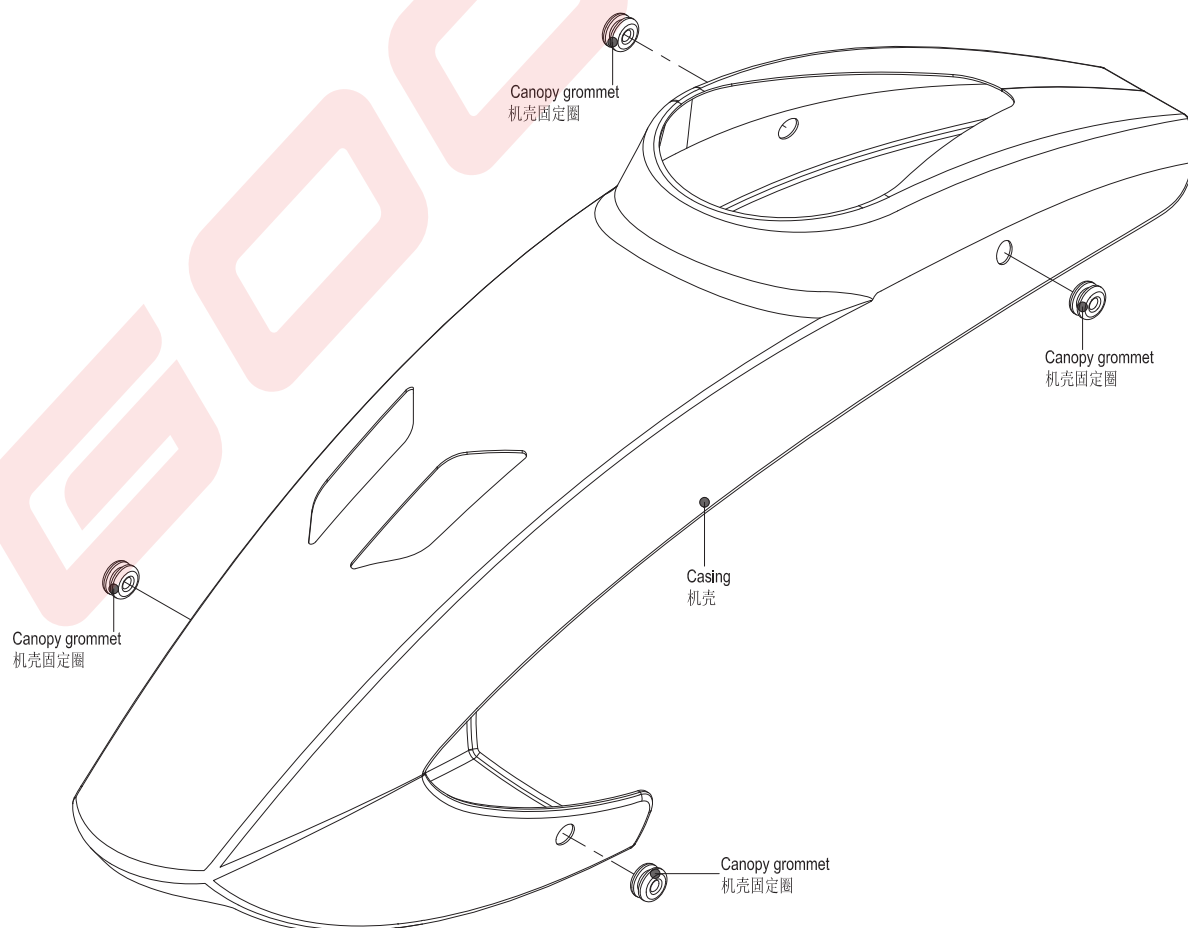
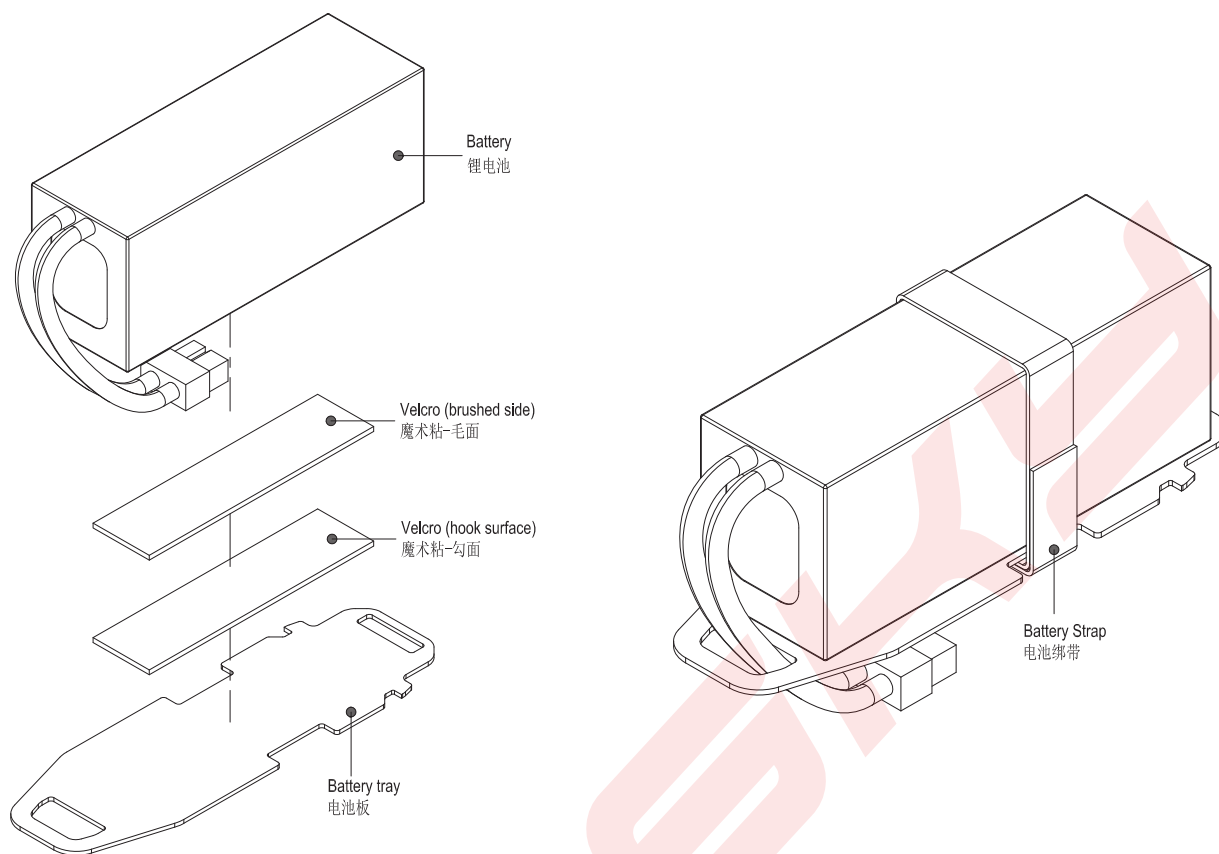
注意

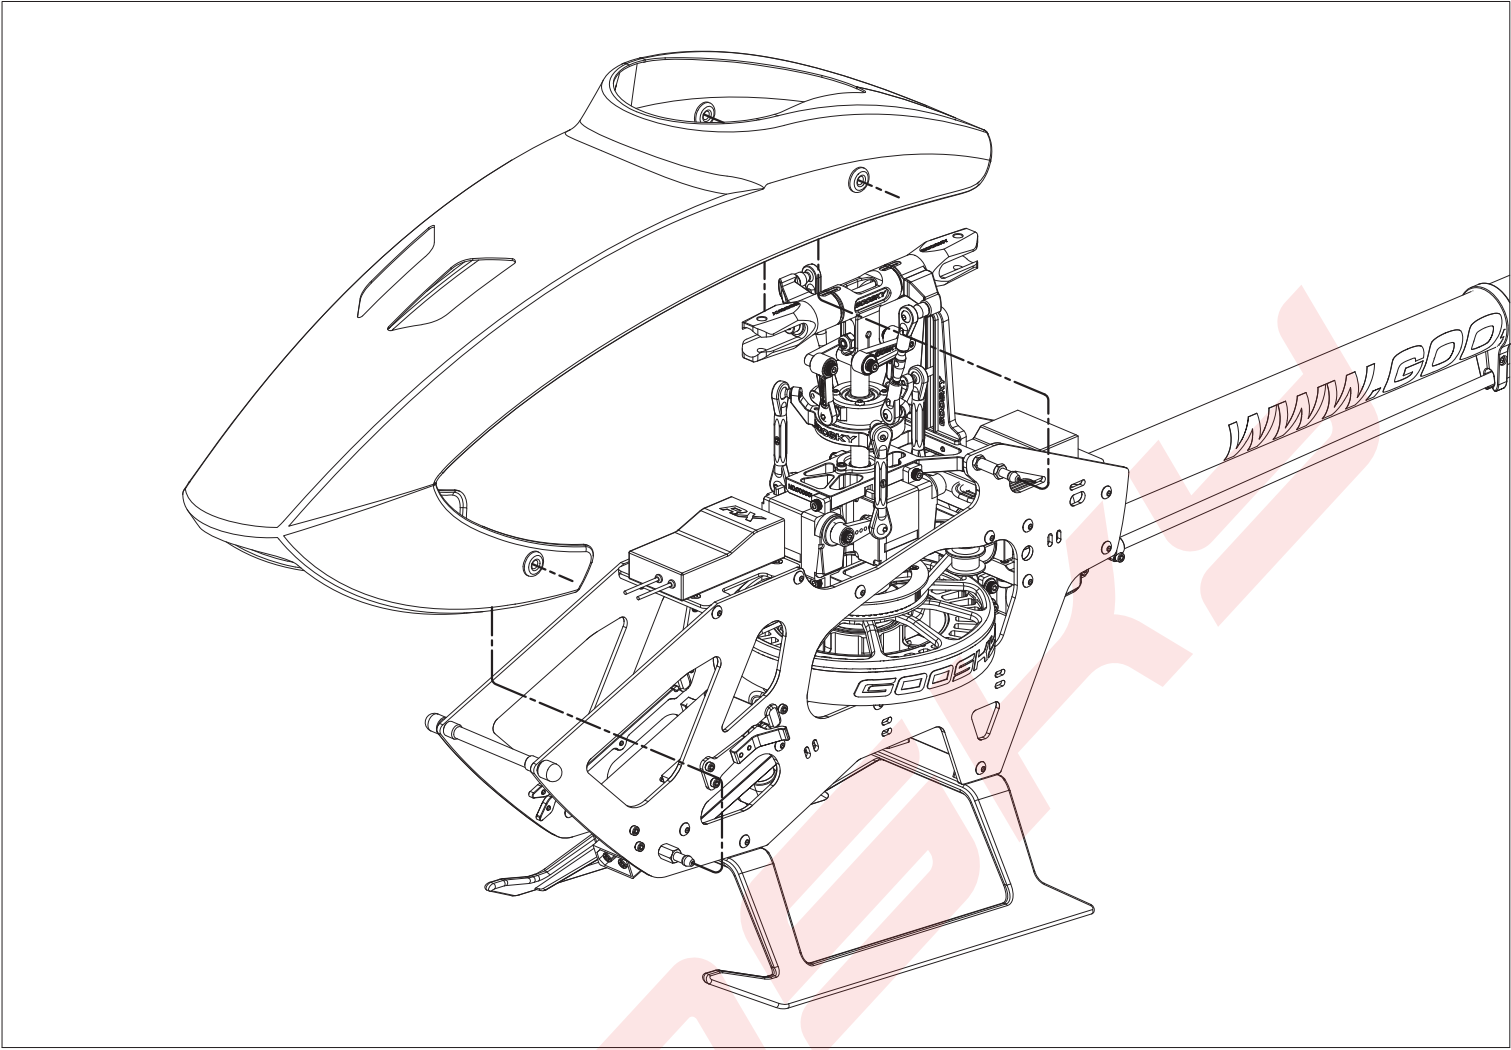
1:The 3M damping tape shall be placed at the bottom of the flight controller in the middle and firmly pressed .

2: Wipe clean the installation plate with a cloth,and then bond the flight controller to it in the direction shown in the figure.Pay attention that the flight controller should be close to the tape face of the plate, align the thick line areas as shown in the figure, center left and right, and bond firmly.

1:将3M减震垫居中贴在飞控模块底部，一定要用力按压牢靠。

2:用布将安装平板上的灰层异物擦拭干净，然后将飞控模块按照图示方向粘接到上面，注意飞控要紧挨平板端面，如图示粗线条区域对齐，左右要居中，粘接要牢靠；





1: No loctite
1: 防松螺母的位置不能涂抹金属螺纹锁固胶水;

Tail blades
尾桨

Socket screw
圆柱头机械牙轴套螺丝
(M2X12mm -半牙)

M2 Nut
M2防松螺母

M2 finishing washer
M2螺丝套

HS12001

Socket screw
圆柱头内六角机械螺丝
(M2X12 半牙)x2

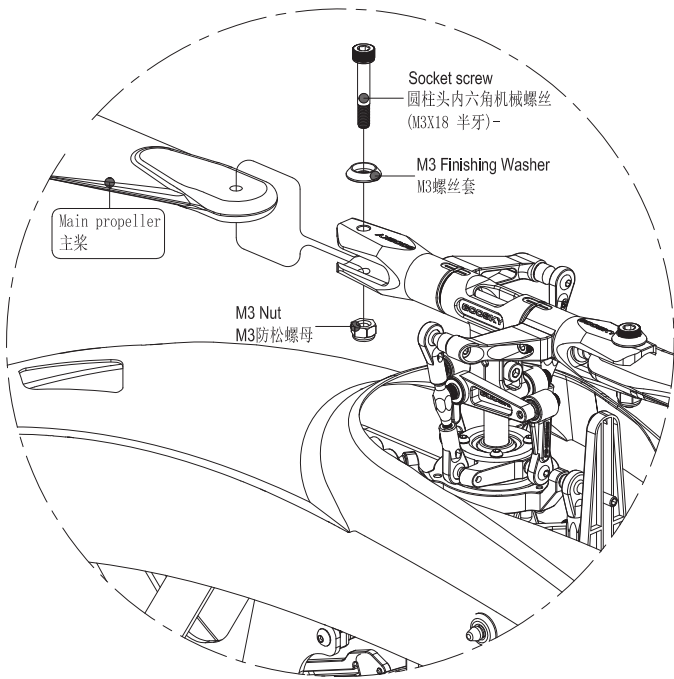
M2 finishing washer
M2螺丝套x2

M2 Nut
M2防松螺母 x2



Notice:
1: Each group of blades has completed the number selection, weighing and matching when leaving the factory. When there are multiple pairs of blades at the same time, multiple groups cannot be mixed. If the blades are mixed, it will cause the helicopter to fly unstably and shake abnormally, and in serious cases, it may be out of control. Do not mix and match different sets of blades!
2: During assembly, the screws must not be locked too tightly. After locking the blades must be folded by hand. It is better to have a slight damping sensation. The tightness of the two blades must be consistent. Inconsistent or too tight blades may cause the body to vibrate and cause instability during flight and serious tightness may lead to loss of control. Please exercise caution and conduct pre-flight inspections as well as regular maintenance.

注意:
1: 每组桨叶出厂时已完成选号、称重配对, 当同时有多对桨叶时, 不可多组混搭使用。桨叶若混搭使用, 会造成直升机飞行不稳异常震动, 严重的可能会失控。
2: 装配时固定螺丝绝对不能锁太紧, 锁紧后需用手折动桨叶, 要有轻微的阻尼感为佳, 两支桨叶的紧度要一致。紧度不一致或者过紧会造成机体震动导致飞行时不稳定, 严重的可能会导致失控, 请务必小心注意, 并养成飞行前检查并定期保养。



Notice:

1: Each group of blades has completed the number selection, weighing and matching when leaving the factory. When there are multiple pairs of blades at the same time, multiple groups cannot be mixed. If the blades are mixed, it will cause the helicopter to fly unstably and shake abnormally, and in serious cases, it may be out of control.

2: During assembly, the screws must not be locked too tightly. After locking, the blades must be folded by hand. It is better to have a slight damping sense. The tightness of the two blades must be consistent. Inconsistent or too tight tightness may cause the body to vibrate and cause instability during flight, and serious tightness may lead to loss of control. Please be careful, and conduct pre flight inspection and regular maintenance.

注意:

1: 每组桨叶出厂时已完成选号、称重配对, 当同时有多对桨叶时, 不可多组混搭使用。桨叶若混搭使用, 会造成直升机飞行不稳异常震动, 严重的可能会失控。

2: 装配时固定螺丝绝对不能锁太紧, 锁紧后需用手折动桨叶, 要有轻微的阻尼感为佳, 两支桨叶的紧度要一致。紧度不一致或者过紧会造成机体震动导致飞行时不稳定, 严重的可能会导致失控, 请务必小心注意, 并养成飞行前检查并定期保养。



Notice:

1. During installation, the word GOOSKY LOGO on the main blades shall face upward.


1. 安装时, 主旋翼上 GOOSKY LOGO 字样朝上。

2. No loctite

2. 防松螺母的位置不能涂抹金属螺纹锁固胶水;

HS11001

 Socket screw 圆柱头内六角机械螺丝 (M3X18 半牙) x2	 M3 Finishing Washer M3螺丝套x2	 M3 Nut M3防松螺母 x2
--	--	---

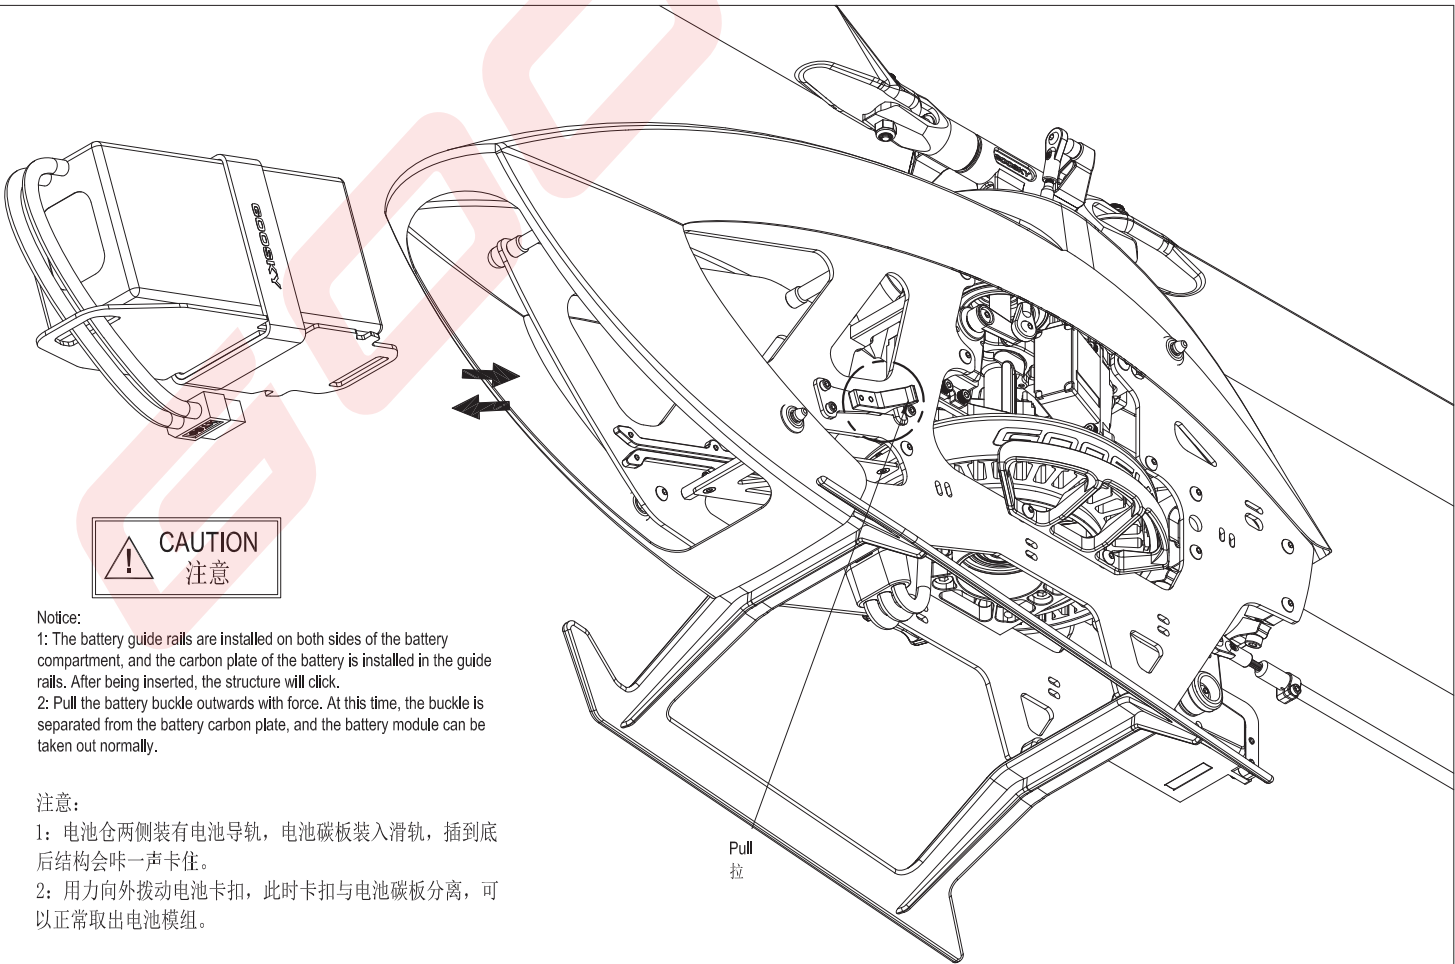

Notice:

1: The battery guide rails are installed on both sides of the battery compartment, and the carbon plate of the battery is installed in the guide rails. After being inserted, the structure will click.

2: Pull the battery buckle outwards with force. At this time, the buckle is separated from the battery carbon plate, and the battery module can be taken out normally.

注意:

1: 电池仓两侧装有电池导轨, 电池碳板装入滑轨, 插到底后结构会咔一声卡住。


2: 用力向外拨动电池卡扣, 此时卡扣与电池碳板分离, 可以正常取出电池模组。





















Throttle and Pitch Curves
飞行参数设置说明





















Normal Mode 一般飞行模式			
Throttle 油门		Pitch 螺距	
5	60	100	11°
4	60	65	5.5°
3	60	15	1.8°
2	60	-5	-0.6°
1	60	-20	-2.4°




















IDLE UP1 1模式			
Throttle 油门		Pitch 螺距	
5	65	100	12°
4	65	50	5.5°
3	65	5	0.6°
2	65	-50	-5.5°
1	65	-100	-12°

IDLE UP2 2模式			
Throttle 油门		Pitch 螺距	
5	70	100	12°
4	70	50	5.5°
3	70	0	0°
2	70	-50	-5.5°
1	70	-100	-12°









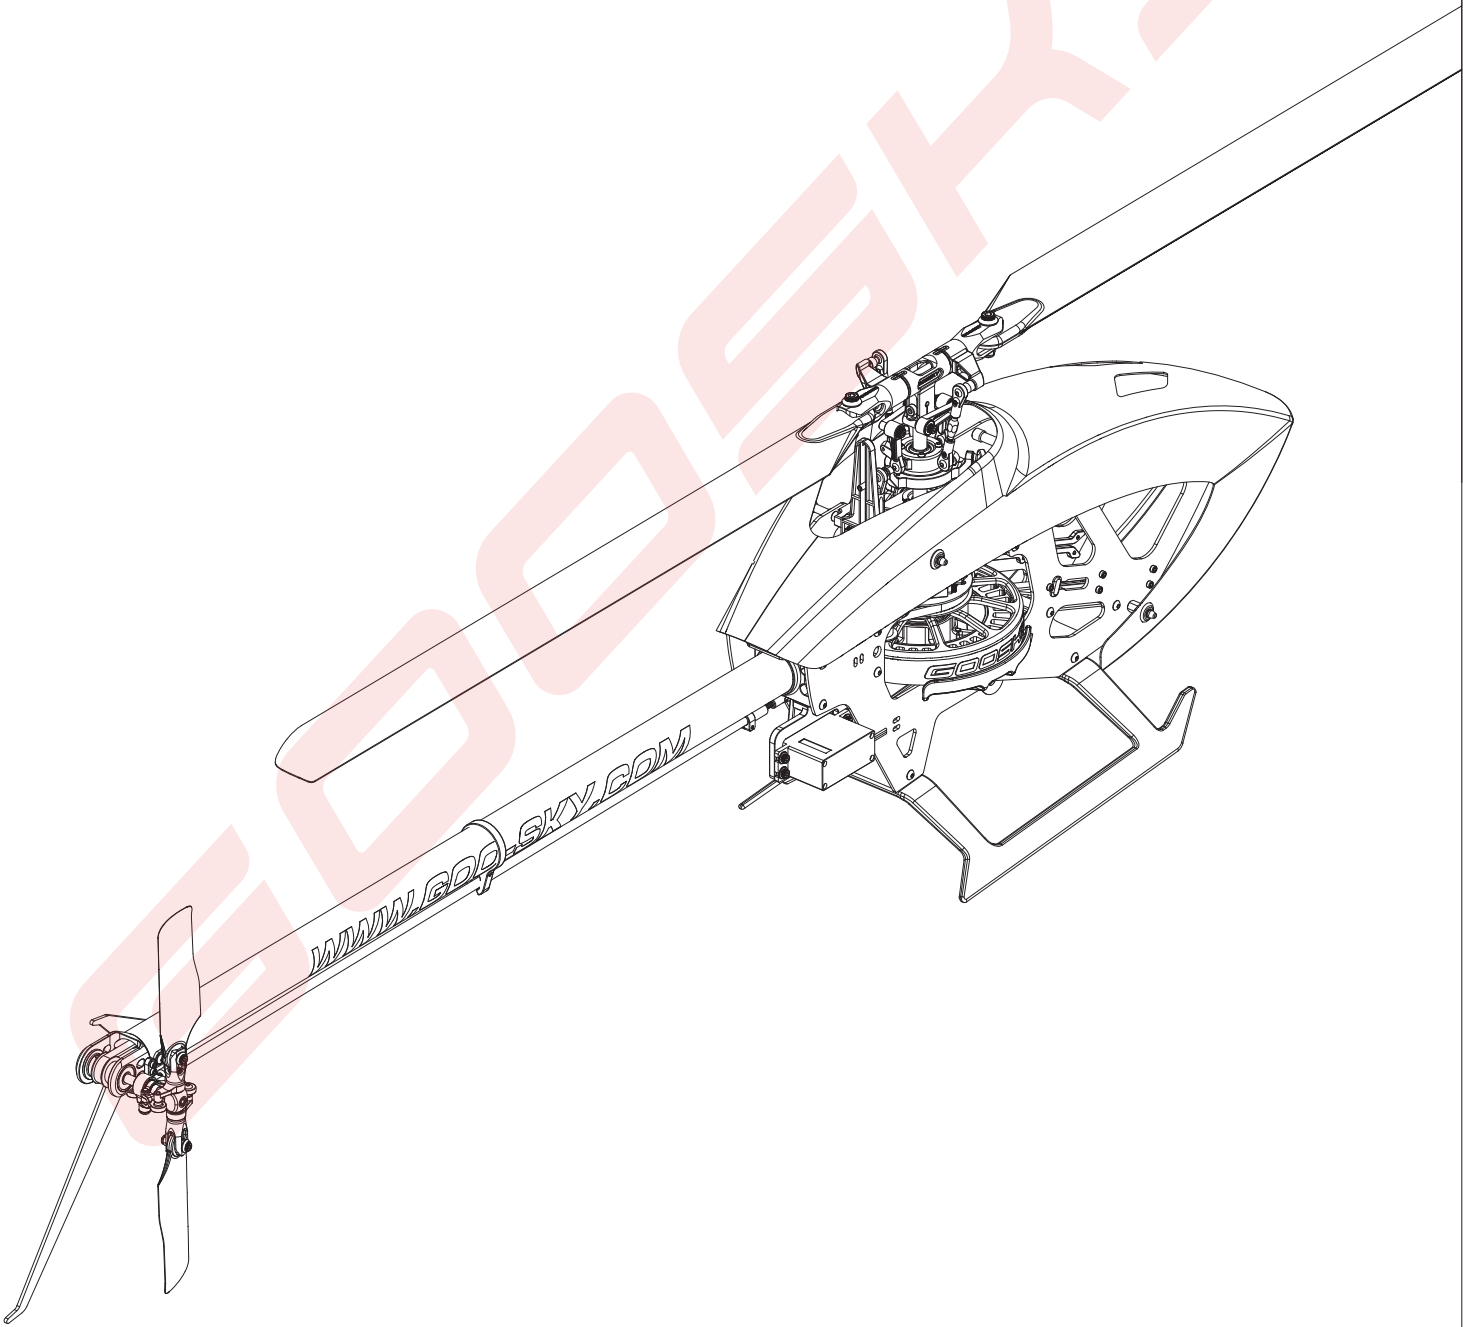


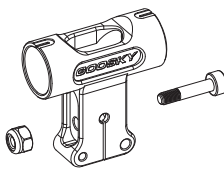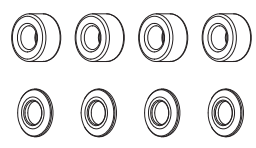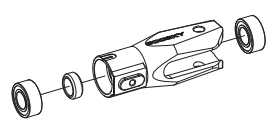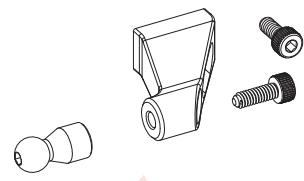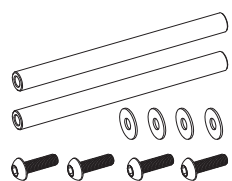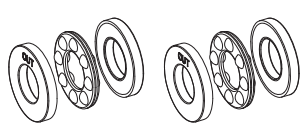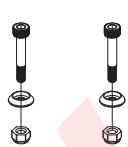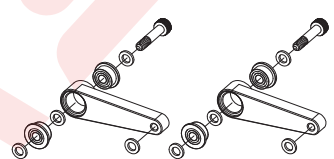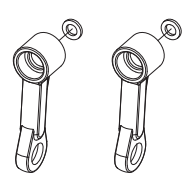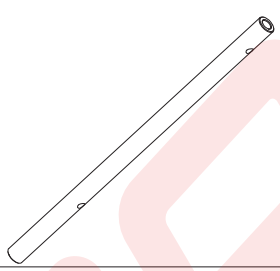
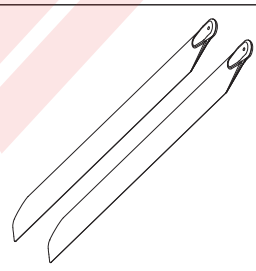
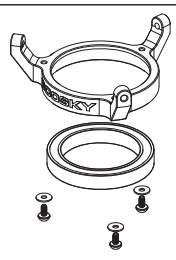
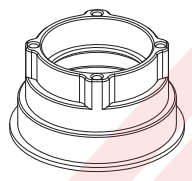
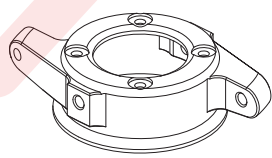
 
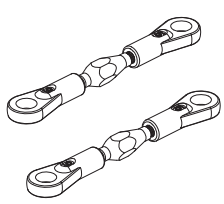
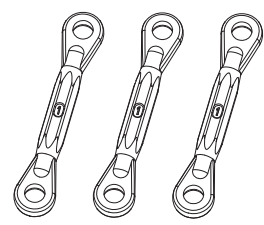
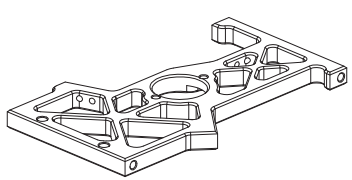
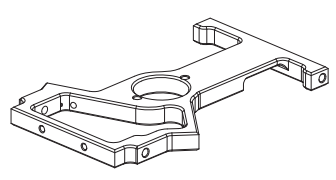
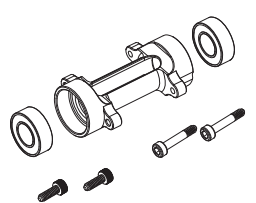
Model: GT020001 配件编号: GT020001 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Aluminum Center Hub 配件名称: 主轴承中心座组	
Model: GT020156 配件编号: GT020156 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main & Feathering Shaft Shock Absorber Set 配件名称: 主横轴减震套件	
Model: GT020004 配件编号: GT020004 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Blade grip set 配件名称: 主桨夹组	
Model: GT020005 配件编号: GT020005 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Pitch control arm set 配件名称: 主螺距控制臂组	
Model: GT020006 配件编号: GT020006 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Feathering Shaft Set 配件名称: 横轴组	
Model: GT020007 配件编号: GT020007 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Thrust bearing set 配件名称: 推力轴承组	
Model: GT020008 配件编号: GT020008 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main blade screw set 配件名称: 主桨夹螺丝组	
Model: GT020009 配件编号: GT020009 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Washout arm set 配件名称: FBL控制臂组	
Model: GT020010 配件编号: GT020010 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Washout links 配件名称: 横轴内盘球头座组	
Model: GT020011 配件编号: GT020011 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main shaft 配件名称: 主轴组	
Model: GT020012 配件编号: GT020012 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Carbon fiber main blades 配件名称: 碳纤维主螺旋桨组	
Model: GT020013 配件编号: GT020013 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Swash outer ring set 配件名称: 倾斜外盘组	
Model: GT020014 配件编号: GT020014 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Swash center 配件名称: 倾斜中盘组	
Model: GT020015 配件编号: GT020015 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Swash Inner ring 配件名称: 倾斜内盘组	
Model: GT020016 配件编号: GT020016 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Swash center ball 配件名称: 万向轴承组	
Model: GT020017 配件编号: GT020017 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main pitch links 配件名称: 主螺距连杆组	
Model: GT020157 配件编号: GT020157 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Double hole ball joint set 配件名称: 双孔球头连杆组	
Model: GT020158 配件编号: GT020158 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main frame lower plate 配件名称: 机身主板	
Model: GT020159 配件编号: GT020159 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main frame upper plate 配件名称: 机身二楼板组	
Model: GT020021 配件编号: GT020021 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main shaft bearing holder 配件名称: 机身同心度保持架组	

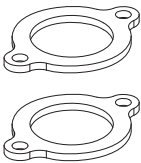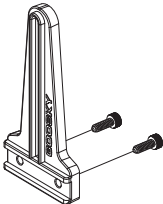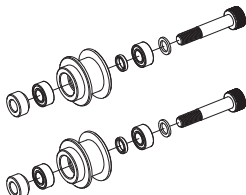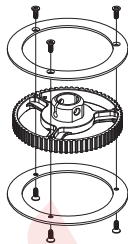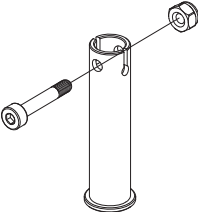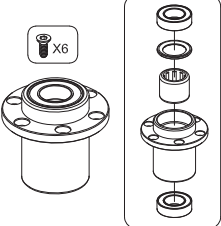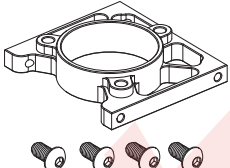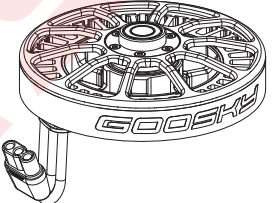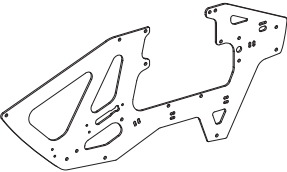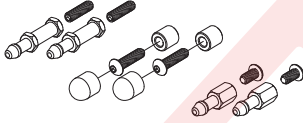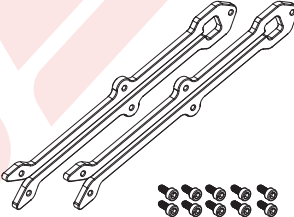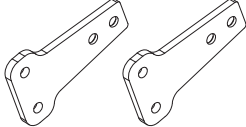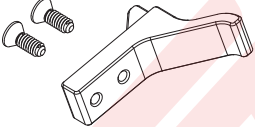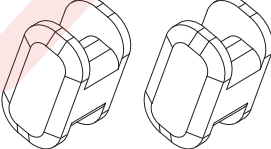
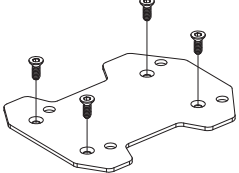
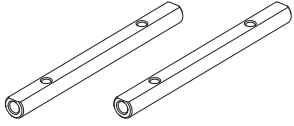
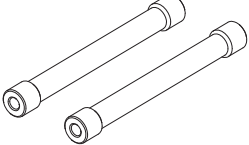
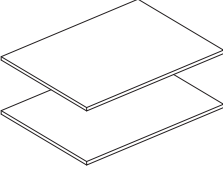
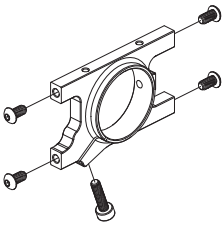
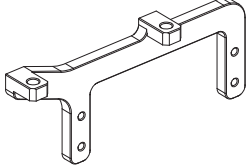
Model: GT020022 配件编号: GT020022 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main bearing plates 配件名称: 二楼板轴承压板组	
Model: GT020023 配件编号: GT020023 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Anti-rotation bracket 配件名称: 倾斜盘相位座组	
Model: GT020024 配件编号: GT020024 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Front tall belt guide set 配件名称: 前皮带压轮组	
Model: GT020025 配件编号: GT020025 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Front tall belt pulley set 配件名称: 前皮带轮组	
Model: GT020026 配件编号: GT020026 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Oneway sleeve 配件名称: 单向加强套组	
Model: GT020027 配件编号: GT020027 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Oneway assembly 配件名称: 单项总成模块组	
Model: GT020028 配件编号: GT020028 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main motor mount 配件名称: 主电机固定座组	
Model: GT020160 配件编号: GT020160 Package: Carton 包装方式: 纸盒 Product name: Main motor (8110) 配件名称: 主电机组 (8110)	
Model: GT020161 配件编号: GT020161 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main frame side plate 配件名称: 侧板组	
Model: GT020031 配件编号: GT020031 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Canopy mount set 配件名称: 机壳支柱组	
Model: GT020032 配件编号: GT020032 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Battery rail set 配件名称: 电池导轨组	
Model: GT020033 配件编号: GT020033 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Battery latch carbon plate 配件名称: 电池卡扣碳板组	
Model: GT020034 配件编号: GT020034 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Battery latch 配件名称: 电池卡扣固定座组	
Model: GT020035 配件编号: GT020035 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Battery rail shock absorber Set 配件名称: 电池导轨减震组	
Model: GT020037 配件编号: GT020037 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Flight controller mount plate 配件名称: 飞控底板组	
Model: GT020038 配件编号: GT020038 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Frame spacers for mount plate 配件名称: 底板支撑柱组	
Model: GT020039 配件编号: GT020039 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Frame spacers round 配件名称: 机身支持柱组	
Model: GT020040 配件编号: GT020040 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Flight controller 3M mount tape 配件名称: 飞控3M胶组	
Model: GT020041 配件编号: GT020041 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Tail boom holder 配件名称: 尾管固定座组	
Model: GT020042 配件编号: GT020042 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Tail servo bracket 配件名称: 尾舵机支架组	

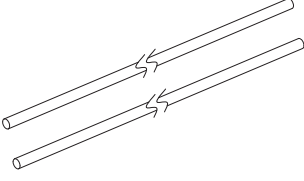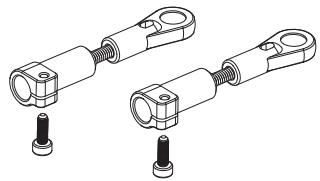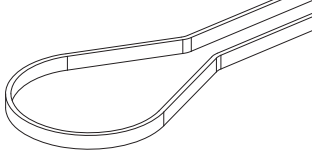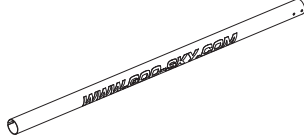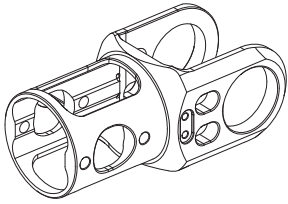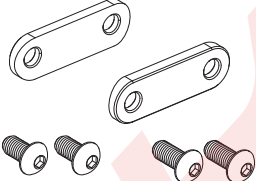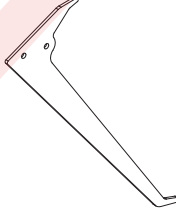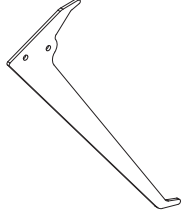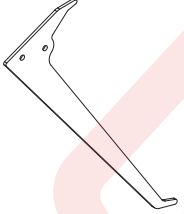  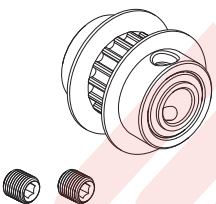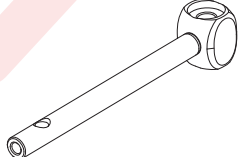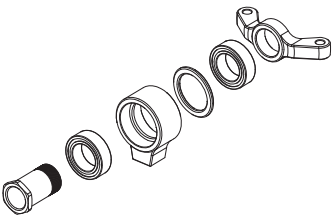 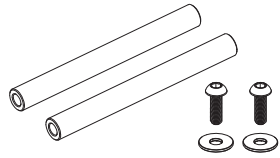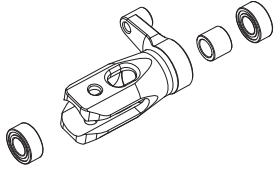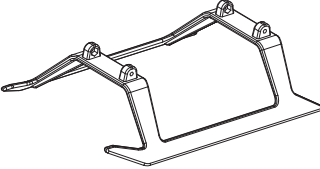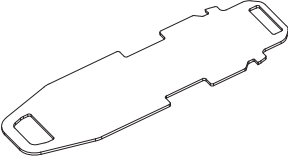Model: GT020043 配件编号: GT020043 Product name: Tail rods 配件名称: 尾拉杆组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020044 配件编号: GT020044 Product name: Tail rod tie links 配件名称: 尾拉杆球头座组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020045 配件编号: GT020045 Product name: Tail Drive Belt 配件名称: 皮带组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020046 配件编号: GT020046 Product name: Tail boom - black aluminum 配件名称: 尾管组-黑色铝合金	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋
							
Model: GT020048 配件编号: GT020048 Product name: Tail rod guide 配件名称: 尾拉杆导向组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020049 配件编号: GT020049 Product name: Tail box 配件名称: 尾牙箱组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020050 配件编号: GT020050 Product name: Tail box mount plates 配件名称: 尾管防滑垫组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020051 配件编号: GT020051 Product name: Vertical fin (White) 配件名称: 垂直翼组-白	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋
							
Model: GT020052 配件编号: GT020052 Product name: Vertical fin (Yellow) 配件名称: 垂直翼组-黄	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020053 配件编号: GT020053 Product name: Vertical fin (Rose red) 配件名称: 垂直翼组-玫红	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020054 配件编号: GT020054 Product name: Tail control arm mount 配件名称: 尾摇臂固定座组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020055 配件编号: GT020055 Product name: Tail control arm set 配件名称: 尾摇臂组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋
							
Model: GT020056 配件编号: GT020056 Product name: Tail pulley 配件名称: 尾皮带轮组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020057 配件编号: GT020057 Product name: Tail shaft 配件名称: 一体式尾轴组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020058 配件编号: GT020058 Product name: Tail pitch slider assembly 配件名称: 尾滑套组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020059 配件编号: GT020059 Product name: Tail pitch links 配件名称: 尾推球头座组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋
							
Model: GT020060 配件编号: GT020060 Product name: Tail feathering shafts 配件名称: 尾横轴组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020061 配件编号: GT020061 Product name: Tail blade grip set 配件名称: 尾桨夹组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020062 配件编号: GT020062 Product name: Landing Skid 配件名称: 脚架组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020063 配件编号: GT020063 Product name: Battery tray 配件名称: 电池板组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋
							

Model: GT020064 配件编号: GT020064 Product name: Magic Straps Set 配件名称: 魔术带组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020065 配件编号: GT020065 Product name: Velcro set 配件名称: 魔术贴组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020066 配件编号: GT020066 Product name: Lipo Battery 配件名称: 锂电池组	Package: Carton 包装方式: 纸盒	Model: GT020067 配件编号: GT020067 Product name: Flight controller 配件名称: 飞控组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋
Model: GT020068 配件编号: GT020068 Product name: 70A ESC 配件名称: 70A电调组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020162 配件编号: GT020162 Product name: Swash servo set 配件名称: 倾斜盘舵机组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020070 配件编号: GT020070 Product name: Tail servo set 配件名称: 尾舵机组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020071 配件编号: GT020071 Product name: Swash servo arms set 配件名称: 倾斜盘舵机摆臂组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋
Model: GT020072 配件编号: GT020072 Product name: Tail servo arm set 配件名称: 尾舵机摆臂组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020073 配件编号: GT020073 Product name: Tail blades - plastic 配件名称: 尾桨组-塑胶	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020163 配件编号: GT020163 Product name: Canopy Set (Rose red) 配件名称: 彩绘机头罩组-玫红色	Package: Hang tag +PE bag 包装方式: 纸盒	Model: GT020164 配件编号: GT020164 Product name: Canopy set (Yellow) 配件名称: 彩绘机头罩组-黄色	Package: Hang tag +PE bag 包装方式: 纸盒
Model: GT020165 配件编号: GT020165 Product name: Canopy Set (White) 配件名称: 彩绘机头罩组-白色	Package: Hang tag +PE bag 包装方式: 纸盒	Model: GT020077 配件编号: GT020077 Product name: Tail blade screw set 配件名称: 尾桨夹螺丝组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020078 配件编号: GT020078 Product name: M3 finishing washers - Red 配件名称: M3螺丝套组-红色 适用螺丝: M3螺丝	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020079 配件编号: GT020079 Product name: M2 finishing wahsers - Red 配件名称: M2螺丝套组-红色 适用螺丝: M2螺丝	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋
Model: GT020080 配件编号: GT020080 Product name: Canopy grommets 配件名称: 机壳胶套组	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020081 配件编号: GT020081 Product name: Main pitch control arm ball joint set 配件名称: 主螺距控制臂球头组 主桨夹球头	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020082 配件编号: GT020082 Product name: Tail rotor clip ball set 配件名称: 尾桨夹球头组 尾桨夹球头	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋	Model: GT020083 配件编号: GT020083 Product name: Anti-rotation ball set 配件名称: 斜盘限位球头组 倾斜盘相位球头	Package: Hang tag +PE bag 包装方式: 吊卡+PE袋

  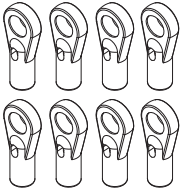 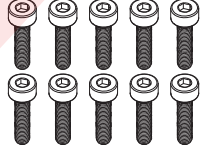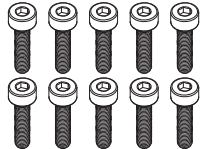 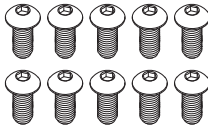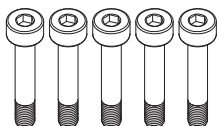Model: GT020084 配件编号: GT020084 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Swashplate ball set 配件名称: 倾斜盘通用球头组 	Model: GT020085 配件编号: GT020085 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Servo arm linkage ball set 配件名称: 舵机摆臂球头组 	Model: GT020086 配件编号: GT020086 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: 4.5mm ball links 配件名称: 4.5mm球头座组 	Model: GT020087 配件编号: GT020087 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: MR105ZZ Bearing Set- NMB 配件名称: MR105ZZ轴承组-NMB 适用地方: 主桨夹 
Model: GT020088 配件编号: GT020088 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: MR52ZZ Bearing Set- NMB 配件名称: MR52ZZ轴承组-NMB 适用地方: 倾斜内盘塑胶球头座, 尾摇臂 	Model: GT020089 配件编号: GT020089 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: MF52ZZ Bearing Set 配件名称: MF52ZZ轴承组 适用地方: FBL控制臂 	Model: GT020090 配件编号: GT020090 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: MR126ZZ Bearing Set- NMB 配件名称: MR126ZZ轴承组-NMB 适用地方: 同心度保持架 	Model: GT020091 配件编号: GT020091 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: MR63ZZ Bearing Set- NMB 配件名称: MR63ZZ轴承组-NMB 适用地方: RS4尾桨夹, RS4前皮带压轮, S2主桨夹 
Model: GT020092 配件编号: GT020092 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: F604ZZ Bearing Set- NMB 配件名称: F604ZZ轴承组-NMB 适用地方: 尾牙箱 	Model: GT020093 配件编号: GT020093 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: MR85ZZ Bearing Set 配件名称: MR85ZZ轴承组 适用地方: 尾滑套 	Model: GT020094 配件编号: GT020094 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M3X8 配件名称: 螺丝组 适用地方: 主横轴 	Model: GT020095 配件编号: GT020095 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2X10-L4 配件名称: 螺丝组 适用地方: RS4FBL控制, 倾斜内盘球头座, S2主旋翼头 RS4同心度保持架锁二楼板, 尾摇臂。 
Model: GT020096 配件编号: GT020096 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2X5 配件名称: 螺丝组 适用地方: 主螺距控制臂锁主夹头, 倾斜盘舵机锁机身 	Model: GT020097 配件编号: GT020097 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2X6 配件名称: 螺丝组 适用地方: 主螺距控制臂锁球头, 同心度保持架锁主板。 倾斜盘相位座锁二楼板, 尾舵机锁舵机支架。 	Model: GT020098 配件编号: GT020098 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M3X16 配件名称: 螺丝组 适用地方: 前皮带压轮锁主板 	Model: GT020099 配件编号: GT020099 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2.5X5 配件名称: 螺丝组 适用地方: 机身左右侧板, 尾牙箱 
Model: GT020100 配件编号: GT020100 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2.5X6 配件名称: 螺丝组 适用地方: 尾牙箱 	Model: GT020101 配件编号: GT020101 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2.5X8 配件名称: 螺丝组 适用地方: 脚架锁机身 	Model: GT020102 配件编号: GT020102 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2.5X10 配件名称: 螺丝组 适用地方: 机壳支柱锁机身 	Model: GT020103 配件编号: GT020103 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2.5X15-L4 配件名称: 螺丝组 适用地方: 前皮带轮锁主轴 

  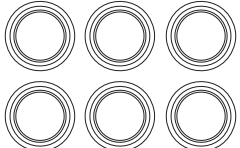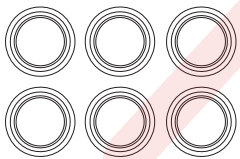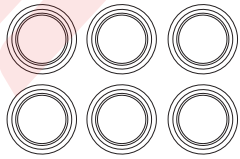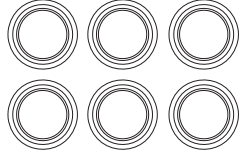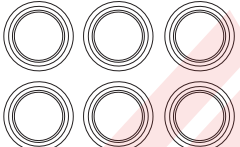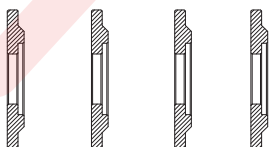  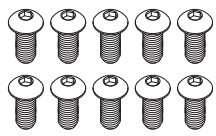Model: GT020104 配件编号: GT020104 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2.5X12-L4 配件名称: 螺丝组 适用地方: 主旋翼头锁主轴 	Model: GT020105 配件编号: GT020105 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M1.6X3 配件名称: 螺丝组 适用地方: 前皮带压轮盖板 	Model: GT020106 配件编号: GT020106 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2X5 配件名称: 螺丝组 适用地方: 飞控板, 接收机板 	Model: GT020107 配件编号: GT020107 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M1.6X4 配件名称: 螺丝组 适用地方: 电池导轨两端 
Model: GT020108 配件编号: GT020108 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M1.6X5 配件名称: 螺丝组 适用地方: 电池卡碳板锁电池导轨 	Model: GT020109 配件编号: GT020109 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - Ø1.5X8-M1.4-L4 配件名称: 螺丝组 适用地方: RS4尾滑套锁球头座,S2 FBL 	Model: GT020110 配件编号: GT020110 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2X5 配件名称: 螺丝组 适用地方: 尾横轴 	Model: GT020111 配件编号: GT020111 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2X7.2 配件名称: 螺丝组 适用地方: 尾摇臂 
Model: GT020112 配件编号: GT020112 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Main Blade bearing Sleeve 配件名称: 主桨夹轴承隔套 	Model: GT020113 配件编号: GT020113 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Swash inner ball seat bearing spacer 配件名称: 倾斜内盘球头座轴承隔套 	Model: GT020114 配件编号: GT020114 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Tail shaft Washer 配件名称: 尾横轴垫片组 	Model: GT020115 配件编号: GT020115 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Tail rocker arm bearing spacer 配件名称: 尾摇臂轴承隔套 
Model: GT020116 配件编号: GT020116 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Tail blade clip bearing spacer 配件名称: 尾桨夹轴承隔套 	Model: GT020117 配件编号: GT020117 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Tail rotor clip external screw washer 配件名称: 尾桨夹外部螺丝垫 	Model: GT020118 配件编号: GT020118 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Blade holder 配件名称: 主翼支撑架 	Model: GT020119 配件编号: GT020119 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: M2.5 Nut 配件名称: M2.5防松螺母 M2.5防松螺母x10 
Model: GT020120 配件编号: GT020120 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: M3 Nut 配件名称: M3防松螺母 M3防松螺母x10 	Model: GT020121 配件编号: GT020121 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M1.4X3 配件名称: 螺丝组 适用地方: 倾斜盘 半圆头内六角机械牙螺丝M1.4X3 	Model: GT020122 配件编号: GT020122 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M1.6X4 配件名称: 螺丝组 适用地方: 电池卡扣 沉头内十字机械牙螺丝M1.6X4 	Model: GT020123 配件编号: GT020123 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M1.6X6 配件名称: 螺丝组 适用地方: 尾摇臂固定座 圆柱头内六角机械牙螺丝M1.6X6 

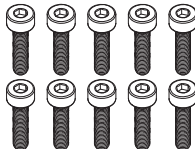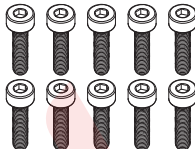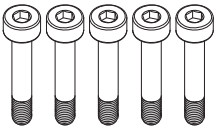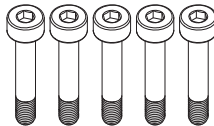 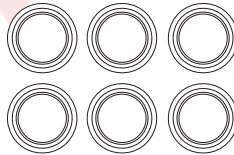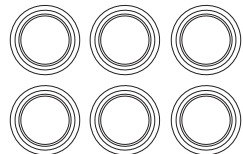Model: GT020124 配件编号: GT020124 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M1.6X8 配件名称: 螺丝组 适用地方: 尾拉杆导向座 圆柱头内六角机械牙螺丝M1.6X8 	Model: GT020125 配件编号: GT020125 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2X4 配件名称: 螺丝组 适用地方: 斜盘舵机摆臂 圆柱头内六角机械牙螺丝M2X4 	Model: GT020126 配件编号: GT020126 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2X12 配件名称: 螺丝组 适用地方: 尾拉杆组件 圆柱头内六角机械牙螺丝M2X12 	Model: GT020127 配件编号: GT020127 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set - M2.5X12 配件名称: 螺丝组 适用地方: 固定尾管 圆柱头内六角机械牙螺丝M2.5X12 
Model: GT020128 配件编号: GT020128 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set- M2X12-L4 配件名称: 螺丝组 适用地方: 尾桨 圆柱头内六角机械牙螺丝M2X12-L4 	Model: GT020129 配件编号: GT020129 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Screw set- M3X18-L6 配件名称: 螺丝组 适用地方: 主桨 圆柱头内六角机械牙螺丝M3X18-L6 	Model: GT020130 配件编号: GT020130 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: M2 Nut 配件名称: M2防松螺母 适用地方: 尾桨 M2防松螺母x10 	Model: GT020131 配件编号: GT020131 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Bearing washer- $\phi 2.1^* \phi 3.6^* 0.5$ 配件名称: 垫片组 适用地方: FBL控制臂、内盘球头座 
Model: GT020132 配件编号: GT020132 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Flat gasket - $\phi 8^* \phi 10^* 0.5$ 配件名称: 垫片组 适用地方: 主横轴 	Model: GT020134 配件编号: GT020134 Package: Hang tag +PE bag 包装方式: 吊卡+PE袋 Product name: Machine screw-M3*3 配件名称: 机米螺丝M3*3 适用地方: 一体式尾轴 		

GOOSKY

Zhongshan Goosky Technology Innovation Co., Ltd.
www.goo-sky.com

© 2023